DSC-W200

SERVICE MANUAL

LEVEL 2

Ver 1.0 2007.04
Revision History

How to use
Acrobat Reader

Internal memory
ON BOARD

US Model
Canadian Model
AEP Model
UK Model
E Model
Australian Model
Hong Kong Model
Chinese Model
Korea Model
Argentine Model
Brazilian Model
Japanese Model
Tourist Model

Link

SPECIFICATIONS	BLOCK DIAGRAMS	PRINTED WIRING BOARDS
SERVICE NOTE	FRAME SCHEMATIC DIAGRAM	REPAIR PARTS LIST
DISASSEMBLY	SCHEMATIC DIAGRAMS	

- Precaution on Replacing the SY-178 Board

The components identified by mark ⚠ or dotted line with mark ⚠ are critical for safety. Replace only with part number specified.	Les composants identifiés par une marque ⚠ sont critiques pour la sécurité. Ne les remplacer que par une pièce portant le numéro spécifié.

DIGITAL STILL CAMERA

SONY®

DSC-W200_L2
9-852-201-31

Sony EMCS Co.

2007D0800-1

© 2007.04

Published by Kohda TEC

Self Diagnosis Supported model

MEMORY STICK TM

LITHIUM ION G TYPE

SPECIFICATIONS

Camera

[System]

Image device: 9.29 mm (1/1.72 type) color CCD, Primary color filter
Total pixel number of camera: Approx. 12 388 000 pixels
Effective pixel number of camera: Approx. 12 120 000 pixels
Lens: Carl Zeiss Vario-Tessar 3× zoom lens f = 7.6 – 22.8 mm (35 – 100 mm when converted to a 35 mm still camera) F2.8 – 5.5
Exposure control: Automatic exposure, Scene Selection (9 modes)
White balance: Automatic, Daylight, Cloudy, Fluorescent 1, 2, 3,Incandescent, Flash
File format (DCF compliant): Still images: Exif Ver. 2.21 JPEG compliant, DPOF compatible
Movies: MPEG1 compliant (Monaural)
Recording media: Internal Memory (approx. 31 MB), "Memory Stick Duo"
Flash: Flash range (ISO (Recommended Exposure Index) set to Auto): approx. 0.2 to 3.3 m (7 7/8 inches to 10 feet 10 inches) (W)/ approx. 0.4 to 1.8 m (1 feet 3 3/4 inches to 5 feet 10 7/8 inches) (T)

[Input and Output connectors]

Multi connector : Video output
Audio output (mono)
USB communication
USB communication : Hi-Speed USB (USB 2.0 compliant)

[LCD screen]

LCD panel: 6.2 cm (2.5 type) TFT drive
Total number of dots: 115 200 (480×240) dots

[Power, general]

Power: Rechargeable battery pack NP-BG1, 3.6 V
AC-LS5K AC Adaptor (not supplied), 4.2 V
Power consumption (during shooting with the LCD screen on) : 1.3 W
Operating temperature: 0 to 40 C (32 to 104 F)
Storage temperature: –20 to +60 C (–4 to +140 F)
Dimensions: 91.0×58.5×27.3 mm (3 5/8× 2 3/8×1 1/8 inches) (W/H/D, excluding protrusions)
Mass: Approx. 173 g (6.1 oz) (including NP-BG1 battery pack and wrist strap, etc.)
Microphone: Monaural
Speaker: Monaural
Exif Print: Compatible
PRINT Image Matching III: Compatible
PictBridge: Compatible

BC-CSG/BC-CSGB/BC-CSGC battery charger

Power requirements: AC 100 to 240 V, 50/60 Hz, 2 W (BC-CSG/BC-CSGC)/2.6 W (BC-CSGB)
Output voltage: DC 4.2 V, 0.25 A
Operating temperature: 0 to 40 C (32 to 104 F)
Storage temperature: –20 to +60 C (–4 to +140 F)
Dimensions: Approx. 62×24×91 mm (2 1/2× 31/32×3 5/8 inches) (W/H/D)
Mass: Approx. 75 g (2.7 oz)

Rechargeable battery pack NP-BG1

Used battery: Lithium-ion battery
Maximum voltage: DC 4.2 V
Nominal voltage: DC 3.6 V
Capacity: 3.4 Wh (960 mAh)

Design and specifications are subject to change without notice.

CAUTION
Danger of explosion if battery is incorrectly replaced.
Replace only with the same or equivalent type.

SAFETY-RELATED COMPONENT WARNING!!

COMPONENTS IDENTIFIED BY MARK ⚠ OR DOTTED LINE WITH MARK ⚠ ON THE SCHEMATIC DIAGRAMS AND IN THE PARTS LIST ARE CRITICAL TO SAFE OPERATION. REPLACE THESE COMPONENTS WITH SONY PARTS WHOSE PART NUMBERS APPEAR AS SHOWN IN THIS MANUAL OR IN SUPPLEMENTS PUBLISHED BY SONY.

ATTENTION AU COMPOSANT AYANT RAPPORT À LA SÉCURITÉ!

LES COMPOSANTS IDENTIFÉS PAR UNE MARQUE ⚠ SUR LES DIAGRAMMES SCHÉMATIQUES ET LA LISTE DES PIÈCES SONT CRITIQUES POUR LA SÉCURITÉ DE FONCTIONNEMENT. NE REMPLACER CES COMPOSANTS QUE PAR DES PIÈSES SONY DONT LES NUMÉROS SONT DONNÉS DANS CE MANUEL OU DANS LES SUPPÉMENTS PUBLIÉS PAR SONY.

SAFETY CHECK-OUT

After correcting the original service problem, perform the following safety checks before releasing the set to the customer.

1. Check the area of your repair for unsoldered or poorly-soldered connections. Check the entire board surface for solder splashes and bridges.
2. Check the interboard wiring to ensure that no wires are "pinched" or contact high-wattage resistors.
3. Look for unauthorized replacement parts, particularly transistors, that were installed during a previous repair. Point them out to the customer and recommend their replacement.
4. Look for parts which, through functioning, show obvious signs of deterioration. Point them out to the customer and recommend their replacement.
5. Check the B+ voltage to see it is at the values specified.
6. FLEXIBLE Circuit Board Repairing
   - Keep the temperature of the soldering iron around 270°C during repairing.
   - Do not touch the soldering iron on the same conductor of the circuit board (within 3 times).
   - Be careful not to apply force on the conductor when soldering or unsoldering.

Unleaded solder

Boards requiring use of unleaded solder are printed with the lead-free mark (LF) indicating the solder contains no lead.
(Caution: Some printed circuit boards may not come printed with the lead free mark due to their particular size.)

: LEAD FREE MARK

Unleaded solder has the following characteristics.

- Unleaded solder melts at a temperature about 40°C higher than ordinary solder.
  Ordinary soldering irons can be used but the iron tip has to be applied to the solder joint for a slightly longer time.
  Soldering irons using a temperature regulator should be set to about 350°C.
  Caution: The printed pattern (copper foil) may peel away if the heated tip is applied for too long, so be careful!
- Strong viscosity
  Unleaded solder is more viscous (sticky, less prone to flow) than ordinary solder so use caution not to let solder bridges occur such as on IC pins, etc.
- Usable with ordinary solder
  It is best to use only unleaded solder but unleaded solder may also be added to ordinary solder.

TABLE OF CONTENTS

Section	Title	Page
1.	**SERVICE NOTE**	
1-1.	Precaution on Replacing the SY-178 Board	1-1
1-2.	Self-Diagnosis Function	1-1
1-3.	Process After Fixing Flash Error	1-2
1-4.	Method for Copying or Erasing the Data in Internal Memory	1-3
1-5.	How to Write Data to Internal Memory	1-4
2.	**DISASSEMBLY**	
2-1.	Disassembly	2-2
2-2.	Exchange Method of The Zoom (1210) Gear Block Assy	2-6
2-1.	Exchange Method of The Barrier Assy	2-7
3.	**BLOCK DIAGRAMS**	
3-1.	Overall Block Diagram (1/2)	3-1
3-2.	Overall Block Diagram (2/2)	3-2
3-3.	Power Block Diagram (1/2)	3-3
3-4.	Power Block Diagram (2/2)	3-4
4.	**PRINTED WIRING BOARDS AND SCHEMATIC DIAGRAMS**	
4-1.	Frame Schematic Diagram	4-1
4-2.	Schematic Diagrams	4-2
4-3.	Printed Wiring Boards	4-16
5.	**REPAIR PARTS LIST**	
5-1.	Exploded Views	5-2
5-2.	Electrical Parts List	5-7

1. SERVICE NOTE

ENGLISH JAPANESE

1-1. PRECAUTION ON REPLACING THE SY-178 BOARD

DESTINATION DATA

When you replace to the repairing board, the written destination data of repairing board also might be changed to original setting.
Refer to Service Manual ADJ, and perform “DESTINATION DATA WRITE”.

USB SERIAL No.

The set is shipped with a unique ID (USB Serial No.) written in it.
This ID has not been written in a new board for service, and therefore it must be entered after the board replacement.
Refer to Service Manual ADJ, and perform “USB SERIAL No. INPUT”.

1-2. SELF-DIAGNOSIS FUNCTION

1-2-1. Self-diagnosis Function

When problems occur while the unit is operating, the self-diagnosis function starts working, and displays on the LCD screen what to do.
Details of the self-diagnosis functions are provided in the Instruction manual.

1-2-2. Self-diagnosis Display

When problems occur while the unit is operating, the LCD screen shows a 4-digit display consisting of an alphabet and numbers, which blinks at 3.2 Hz. This 5-character display indicates the “repaired by:”, “block” in which the problem occurred, and “detailed code” of the problem.

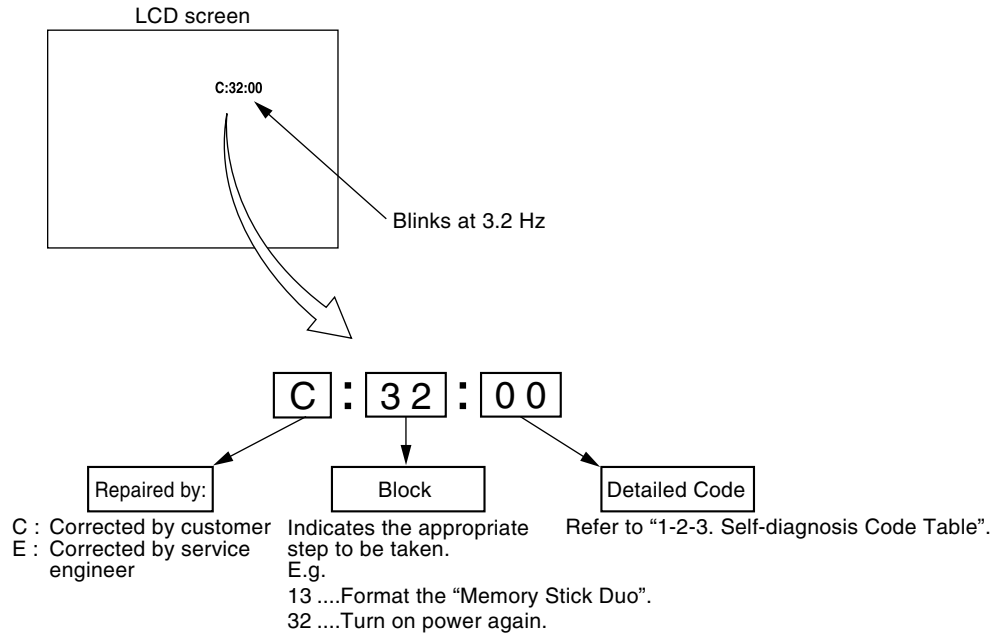

1-2-3. Self-diagnosis Code Table

Self-diagnosis Code					Symptom/State	Correction
Repaired by:	Block Function		Detailed Code			
C	1	3	0	1	The internal memory has experienced a format error.	Format the internal memory.
					"Memory Stick Duo" is unformatted.	Format the "Memory Stick Duo".
					"Memory Stick Duo" is broken.	Insert a new "Memory Stick Duo".
					"Memory Stick Duo" type error	Insert a supported "Memory Stick Duo".
					The camera cannot read or write data on the "Memory Stick Duo".	Turn the power off and on again, or taking out and inserting the "Memory Stick Duo" several times.
C	3	2	0	1	Trouble with hardware	Turn the power off and on again.
E	6	1	0	0	Difficult to adjust focus (Cannot initialize focus)	Retry turn the power on by the power switch. If it does not recover, check the focus reset sensor of lens block (pin ⑱ of CN402 on the SY-178 board). If it is OK, check the focus motor drive IC (IC401 on the SY-178 board).
E	6	1	1	0	Zoom operations fault (Cannot initialize zoom lens.)	Retry turn the power on by the power switch. Check the zoom reset sensor of lens block (pin ⑳ of CN402 on the SY-178 board), if zooming is performed when the zoom button is operated. If it is OK, check the zoom motor drive IC (IC401 on the SY-178 board).
E	6	2	0	2	Abnormality of IC for steadyshot.	Check or replacement of the IC for steadyshot (IC503 on the SY-178 board).
E	6	2	1	0	Lens initializing failure.	Check or replacement of the IC for steadyshot (IC503 on the SY-178 board).
E	6	2	1	1	Lens overheating (PITCH).	Check the HALL element (PITCH) of optical image stabilizer (pin ㉙, ㉚ of CN402 on the SY-178 board). If it is OK, check PITCH angular velocity sensor (SE502 on the SY-178 board) peripheral circuits.
E	6	2	1	2	Lens overheating (YAW).	Check the HALL element (YAW) of optical image stabilizer (pin ㊲, ㊳ of CN402 on the SY-178 board). If it is OK, check YAW angular velocity sensor (SE501 on the SY-178 board) peripheral circuits.
E	6	2	2	0	Abnormality of thermistor.	Check the OIS temp sensor of optical image stabilizer (pin ㉛ of CN402 on the SY-178 board).
E	9	1	0	1	Abnormality when flash is being charged.	Checking of flash unit or replacement of flash unit. (Note)
E	9	2	0	0	Non-standard battery is used.	Use the compatible battery only.

Note: After repair, be sure to perform "1-3. PROCESS AFTER FIXING FLASH ERROR".

1-3. PROCESS AFTER FIXING FLASH ERROR

When "FLASH error" (Self-diagnosis Code E : 91 : 01) occurs, to prevent any abnormal situation caused by high voltage, setting of the flash is changed automatically to disabling charge and flash setting.
After fixing, this setting needs to be deactivated. Flash error code can be initialized by the operations on the HOME screen.

Method for Initializing the Flash Error Code

Initialize

Initializes the setting to the default setting. Even if you execute this function, the images stored in the internal memory are retained.

① Select [Initialize] with ▲/▼/◄/►, then press ●.
The message "Initialize all settings" appears.

② Select [OK] with ▲, then press ●.
The settings are reset to the default setting.

To cancel the resetting

Select [Cancel] in step ②, then press ●.

• Make sure that the power is not disconnected during resetting.

1-4. METHOD FOR COPYING OR ERASING THE DATA IN INTERNAL MEMORY

The data can be copied/erased by the operations on the HOME screen. (When erasing the data, execute formatting the internal memory.)

Note 1: When replacing the SY-178 board, erase the data in internal memory of the board before replacement.

Method for Copying the Data in Internal Memory

Copy

Copies all images in the internal memory to a "Memory Stick Duo".

① Insert a "Memory Stick Duo" having 64 MB or larger capacity.

② Select [Copy] with ▲/▼/◄/► on the control button, then press ● .
The message "All data in internal memory will be copied" appears.

③ Select [OK] with ▲, then press ● .
Copying starts.

To cancel the copying

Select [Cancel] in step ③, then press ● .

- Use a fully charged battery pack. If you attempt to copy image files using a battery pack with little remaining charge, the battery pack may run out, causing copying to fail or possibly corrupting the data.
- You cannot copy individual images.
- The original images in the internal memory are retained even after copying. To delete the contents of the internal memory, remove the "Memory Stick Duo" after copying, then execute the [Format] command in [Internal Memory Tool].
- When you copy the data in the internal memory to the "Memory Stick Duo", all the data will be copied. You cannot choose a specific folder on the "Memory Stick Duo" as the destination for the data to be copied.
- Even if you copy data, a DPOF (Print order) mark is not copied.

Method for Formatting the Internal Memory

This item does not appear when a "Memory Stick Duo" is inserted in the camera.

Format

Formats the internal memory.

- Note that formatting irrevocably erases all data in the internal memory, including even protected images.

① Select [Format] with ▲/▼/◄/► on the control button, then press ●.
The message "All data in internal memory will be erased" appears.

② Select [OK] with ▲, then press ●.
The format is completed.

To cancel the formatting

Select [Cancel] in step ②, then press ●.

1-5. HOW TO WRITE DATA TO INTERNAL MEMORY

Usually, the camera has been set so as to disable the data writing from the PC to the internal memory of the camera.
This setting must be changed temporarily when the data is to be written to the internal memory such as a case after the board replacement.
To change the setting, use the write enable tool “WriteEnableTool.exe”.

Data writing method

1) Connect the PC to the camera (USB mode: Mass Storage), and switch the driver to the “Sony Seus USB Driver”.
2) Start the Write Enable Tool and the SeusEX.
3) Click the [Activate Write Enable Mode] button of the Write Enable Tool.

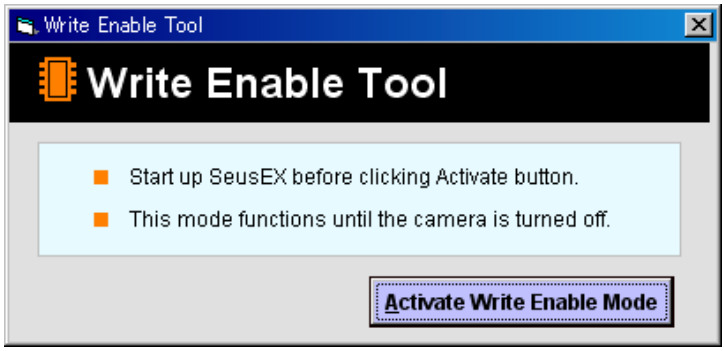
Write Enable Tool
Write Enable Tool
Start up SeusEX before clicking Activate button.
This mode functions until the camera is turned off.
Activate Write Enable Mode

4) Upon completion of the setting change, the following message will be displayed.

5) Return the driver to the original one, and connect the PC to the camera (USB mode: Mass Storage).
6) Write the data read out into the PC to the internal memory of the camera.
7) Disconnect the PC from the camera, and turn off the camera.

Note: By turning off the camera, the write enable setting is reset.

1. SERVICE NOTE

ENGLISH JAPANESE

1-1. SY-178基板交換時の注意

仕向けデータ

補修用基板と交換する時，補修用基板に書かれている仕向けデータは元の設定と違っている場合があります。
ADJ編を参照して，「DESTINATION DATA WRITE」を行ってください。

USBシリアルNo.

セットは，1台毎に異なる固有のID（USB Serial No.）を書き込んだ後，出荷されています。
新品の補修用基板には，このIDが書き込まれていないので，基板交換後にIDを入力する必要があります。
ADJ編を参照して，「USB SERIAL No. INPUT」を行ってください。

1-2. 自己診断機能

1-2-1. 自己診断機能について

本機の動作に不具合が生じたとき，自己診断機能が働き，ＬＣＤ画面に，どう処置したらよいか判断できる表示を行います。自己診断機能については取扱説明書にも掲載されています。

1-2-2. 自己診断表示

本機の動作に不具合が生じたとき，LCD画面にアルファベットと4桁の数字が表示され，3.2Hzで点滅します。この5文字の表示によって対応者分類および不具合の生じたブロックの分類，不具合の詳細コードを示します。

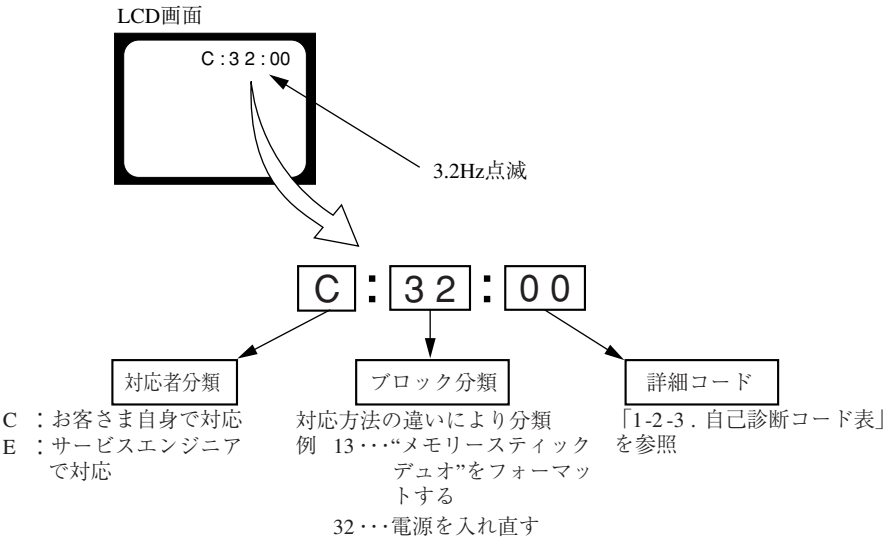

1-2-3. 自己診断コード表

自己診断コード			症状／状態	対応／方法
対応者	ブロック機能	詳細コード		
C	1 3	0 1	内蔵メモリにフォーマットエラーがあった。	内蔵メモリをフォーマットする。
			フォーマットしていない“メモリースティック デュオ”を入れた。	“メモリースティック デュオ”をフォーマットする。
			“メモリースティック デュオ”が壊れている。	新しい“メモリースティック デュオ”に交換する。
			“メモリースティック デュオ”のタイプエラーを検出した。	規格内の“メモリースティック デュオ”を挿入する。
			“メモリースティック デュオ”が読み／書きできない。	電源の入れ直し，または“メモリースティック デュオ”の挿し／外しを数回試す。
C	3 2	0 1	ハードウェアトラブルを検出した。	電源を入れ直す。
E	6 1	0 0	フォーカスが合いにくい。 （フォーカスの初期化ができない）	操作スイッチの電源を入れ直す。 復帰しない場合はレンズブロックのフォーカスリセットセンサ（SY-178基板CN402 ⑱ピン）を点検する。異常なければフォーカスモータ駆動IC（SY-178基板IC401）を点検する。
E	6 1	1 0	ズーム動作の異常。 （ズームレンズの初期化ができない）	操作スイッチの電源を入れ直す。 ズームボタンを操作したときにズーム動作をすればレンズブロックのズームリセットセンサ（SY-178基板CN402 ⑳ピン）を点検する。異常なければズームモータ駆動IC（SY-178基板IC401）を点検する。
E	6 2	0 2	手振れ補正用ICの異常。	手振れ補正用IC（SY-178基板IC503）を点検または交換する。
E	6 2	1 0	手振れ補正用ICの異常。 （レンズ初期化異常）	手振れ補正用IC（SY-178基板IC503）を点検または交換する。
E	6 2	1 1	レンズオーバーヒート（PITCH）	光学手振れ補正ブロックのホール素子（PITCH）（SY-178基板CN402 ㉙，㉚ピン）を点検する。異常なければPITCH角速度センサ（SY-178基板SE502）周辺の回路を点検する。
E	6 2	1 2	レンズオーバーヒート（YAW）	光学手振れ補正ブロックのホール素子（YAW）（SY-178基板CN402 ㊲，㊳ピン）を点検する。異常なければYAW角速度センサ（SY-178基板SE501）周辺の回路を点検する。
E	6 2	2 0	サーミスタの異常。	光学手振れ補正ブロックのサーミスタ（SY-178基板CN402 ㉛ピン）を点検する。
E	9 1	0 1	フラッシュの充電異常。	フラッシュユニットを点検または交換する。（Note）
E	9 2	0 0	規定外の充電池が使用された。	規定の充電池を使用する。

Note：交換後は，必ず「1-3. フラッシュ異常修理後の処置」を行って下さい。

1-3. フラッシュエラー発生時の対処法

本機はフラッシュエラー（自己診断コードE：91：01）が発生した場合，高電圧による異常を防止するために自動的にフラッシュ充電および発光禁止の設定になります。
フラッシュエラー発生後はエラーの解除を行う必要があります。エラーの解除はホーム画面から初期化操作を実行することにより行います。

設定リセット

お買い上げ時の設定に戻します。
[設定リセット]を実行しても、内蔵メモリーに記録されている画像は削除されません。

①コントロールボタンの▲/▼/◀/▶で[設定リセット]を選び、中央の●を押す。
「全ての設定内容をリセットします」というメッセージが表示される。
②▲で[実行]を選び、中央の●を押す。
設定リセットが実行される。

設定リセットを中止するには

手順②で、[キャンセル]を選び、中央の●を押す。

設定リセット中は電源が切れないようにご注意ください。

1-4. 内蔵メモリのデータコピーおよび消去方法

内蔵メモリのデータコピーまたは消去はホーム画面の操作から実行可能です。（消去する場合は内蔵メモリの初期化を行います。）

Note1：SY-178基板交換の際は，基板交換前に内蔵メモリのデータを消去して下さい。

内蔵メモリのコピー方法

コピー

内蔵メモリーに記録した画像を、“メモリースティック デュオ”に一括コピーします。

①64MB 以上の容量のある“メモリースティックデュオ”を本体に入れる。
②コントロールボタンの ▲/▼/◀/▶ で[コピー]を選び、中央の ● を押す。
「内蔵メモリーのデータがすべてコピーされます」というメッセージが表示される。
③ ▲で[実行]を選び、中央の●を押す。
コピーが実行される。

コピーを中止するには

手順③で、[キャンセル]を選び、中央の●を押す。

- 充分に充電したバッテリーをご使用ください。残量の少ないバッテリーを使用して画像ファイルをコピーすると、バッテリー切れのため、データを転送できなかったり、データを破損するおそれがあります。
- 画像ごとのコピーはできません。
- データをコピーしても、内蔵メモリー内のデータは削除されません。内蔵メモリーの内容を消去するには、 コピー後に “メモリースティック デュオ” を本体から取りはずし、[内蔵メモリーツール]の[フォーマット] を行ってください。
- データのコピーをすると、“メモリースティックデュオ” 内に新しいフォルダが作成されます。コピー先のフォルダを指定することはできません。
- データのコピーを行っても、DPOF（プリント予約）マークの設定はコピーされません。

内蔵メモリのフォーマット方法

“メモリースティック デュオ”が本機に入っている場合は表示されません。

フォーマット

内蔵メモリーの管理領域をフォーマット(初期化)します。

フォーマットすると、プロテクトしてある画像も含めて、すべてのデータが消去され、元に戻せません。

①コントロールボタンの▲/▼/◀/▶で[フォーマット]を選び、中央の●を押す。
「内蔵メモリーのデータがすべて消去されます」というメッセージが表示される。
▲で[実行]を選び、中央の●を押す。
②フォーマットが実行される。

フォーマットを中止するには

手順②で、[キャンセル]を選び、中央の●を押す。

1-5. 内蔵メモリへデータを書き戻す方法

通常は，PCからカメラの内蔵メモリへデータを書き込むことはできない設定になっています。
基板交換後などに，内蔵メモリへデータを書き戻す場合には，この設定を一時的に変更する必要があります。
設定の変更には，書き込み許可ツール（WriteEnableTool.exe）を使用します。

書き戻し方法

1) カメラとPCをマスストレージ接続し，ドライバを"Sony Seus USB Driver"に切り替える。
2) 書き込み許可ツールとSeusEXを起動する。
3) 書き込み許可ツールの[Activate Write Enable Mode]ボタンをクリックする。

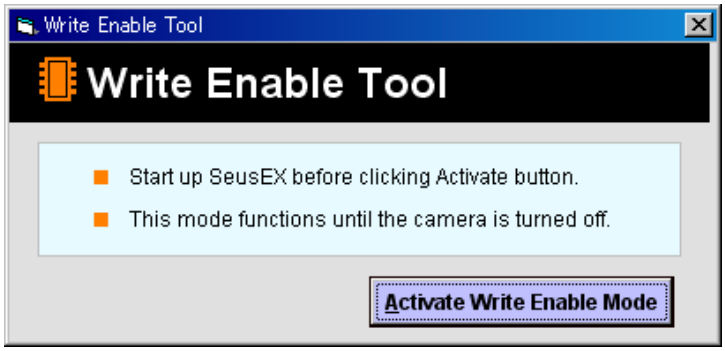

4) 設定の変更が終了すると，次のメッセージが表示されます。

5) ドライバを元に戻して、カメラとPCをマスストレージ接続する。
6) PCに読み出しておいたデータをカメラの内蔵メモリに書き込む。
7) カメラとPCの接続を解除し，カメラの電源をOFFにする。

注意： カメラの電源をOFFにすることにより，書き込み許可の設定が解除されます。

2. DISASSEMBLY

NOTE FOR REPAIR

- Make sure that the flat cable and flexible board are not cracked of bent at the terminal. Do not insert the cable insufficiently nor crookedly.
- When remove a connector, don't pull at wire of connector. It is possible that a wire is snapped.
- When installing a connector, don't press down at wire of connector. It is possible that a wire is snapped.
- Do not apply excessive load to the gilded flexible board.

Cut and remove the part of gilt which comes off at the point. (Be careful or some pieces of gilt may be left inside)

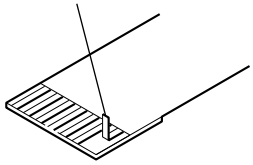

DISCHARGING OF THE ST-167 BOARD'S CHARGING CAPACITOR (C901)

The charging capacitor (C901) of the ST-167 board is charged up to the maximum 300 V potential.
There is a danger of electric shock by this high voltage when the capacitor is handled by hand. The electric shock is caused by the charged voltage which is kept without discharging when the main power of the unit is simply turned off. Therefore, the remaining voltage must be discharged as described below.

Preparing the Short Jig

To preparing the short jig, a small clip is attached to each end of a resistor of 1 kΩ /1 W (1-215-869-11).
Wrap insulating tape fully around the leads of the resistor to prevent electrical shock.

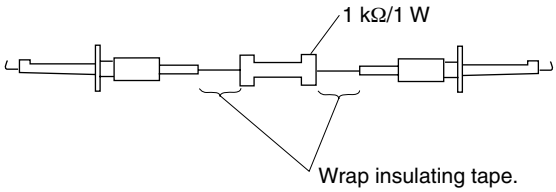

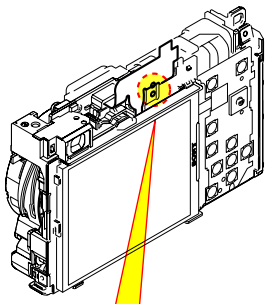

Note: High-voltage cautions

Discharging the Capacitor
Turn the ST-168 flexible board.
Short-circuit between the two points with the short jig about 10 seconds.
To avoid the spark with the metal plate,wrap the short jig with the insulation tape.

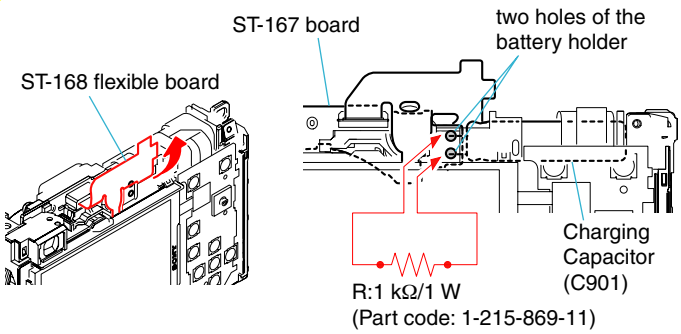

2-1. DISASSEMBLY

EXPLODED VIEW HARDWARE LIST

2-1-1. OVERALL SECTION

Follow the disassembly in the numerical order given.

① Cabinet (Rear) Block Assy (①-1 to ①-9)

② Cabinet (Front) Block Assy (②-1)

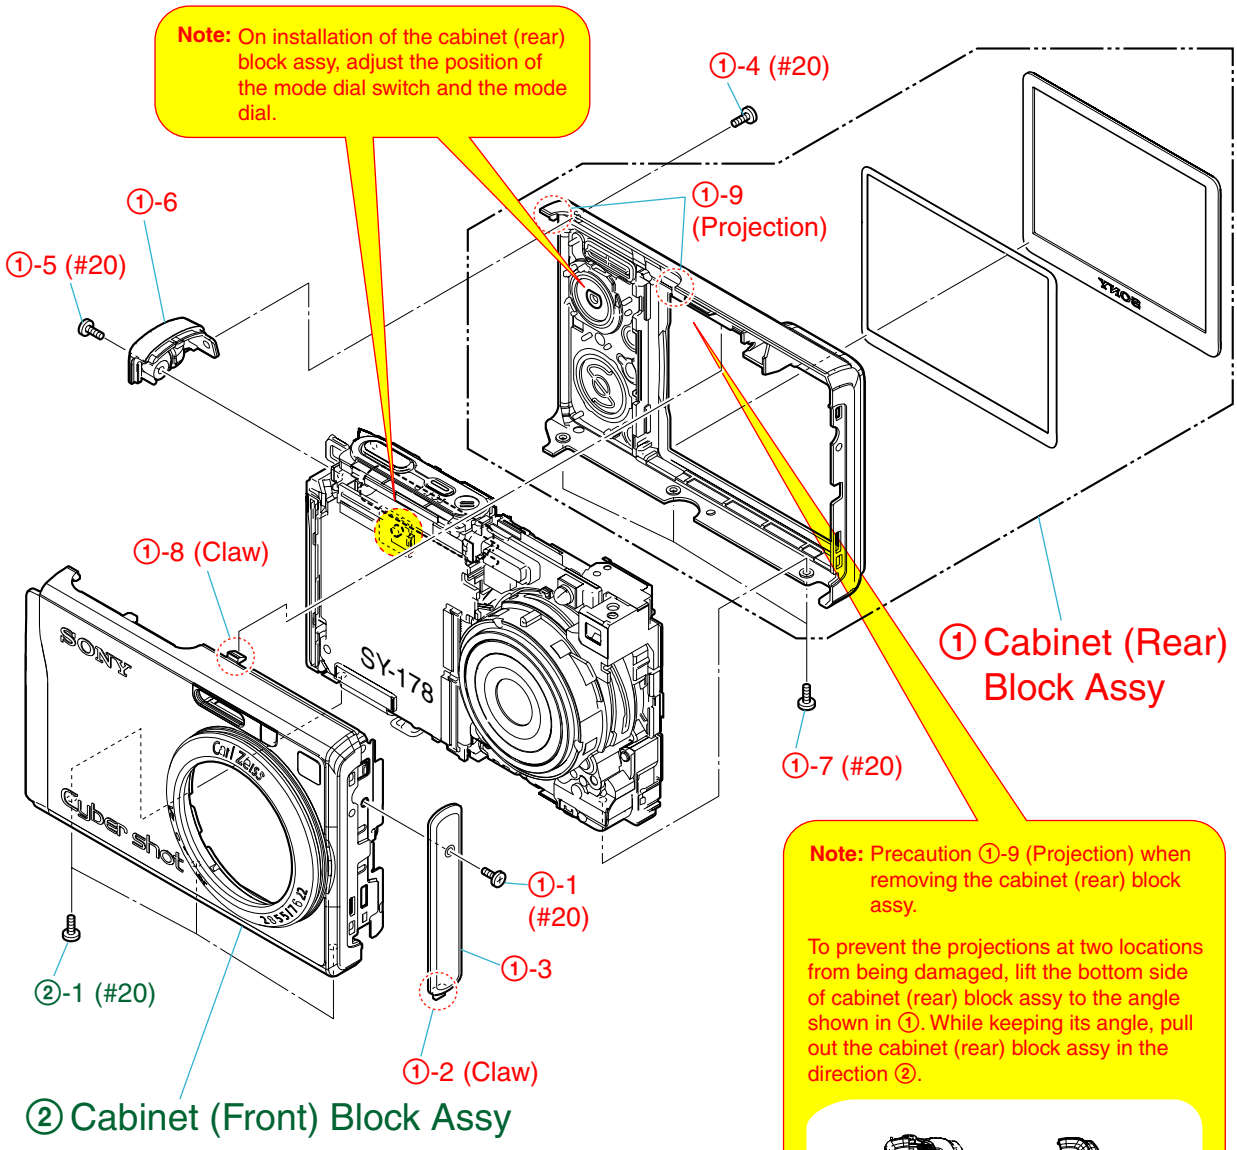

Note: Precaution ①-9 (Projection) when removing the cabinet (rear) block assy.

To prevent the projections at two locations from being damaged, lift the bottom side of cabinet (rear) block assy to the angle shown in ①. While keeping its angle, pull out the cabinet (rear) block assy in the direction ②.

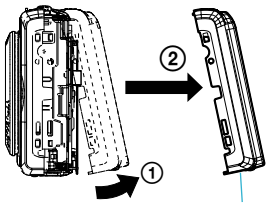

2-1-2. LCD SECTION

EXPLODED VIEW HARDWARE LIST

Follow the disassembly in the numerical order given.
① RL Block Assy (①-1 to ①-2)
② ST-167 Board (②-1 to ②-5)
③ LCD Panel/SW-501 Board (③-1 to ③-2)

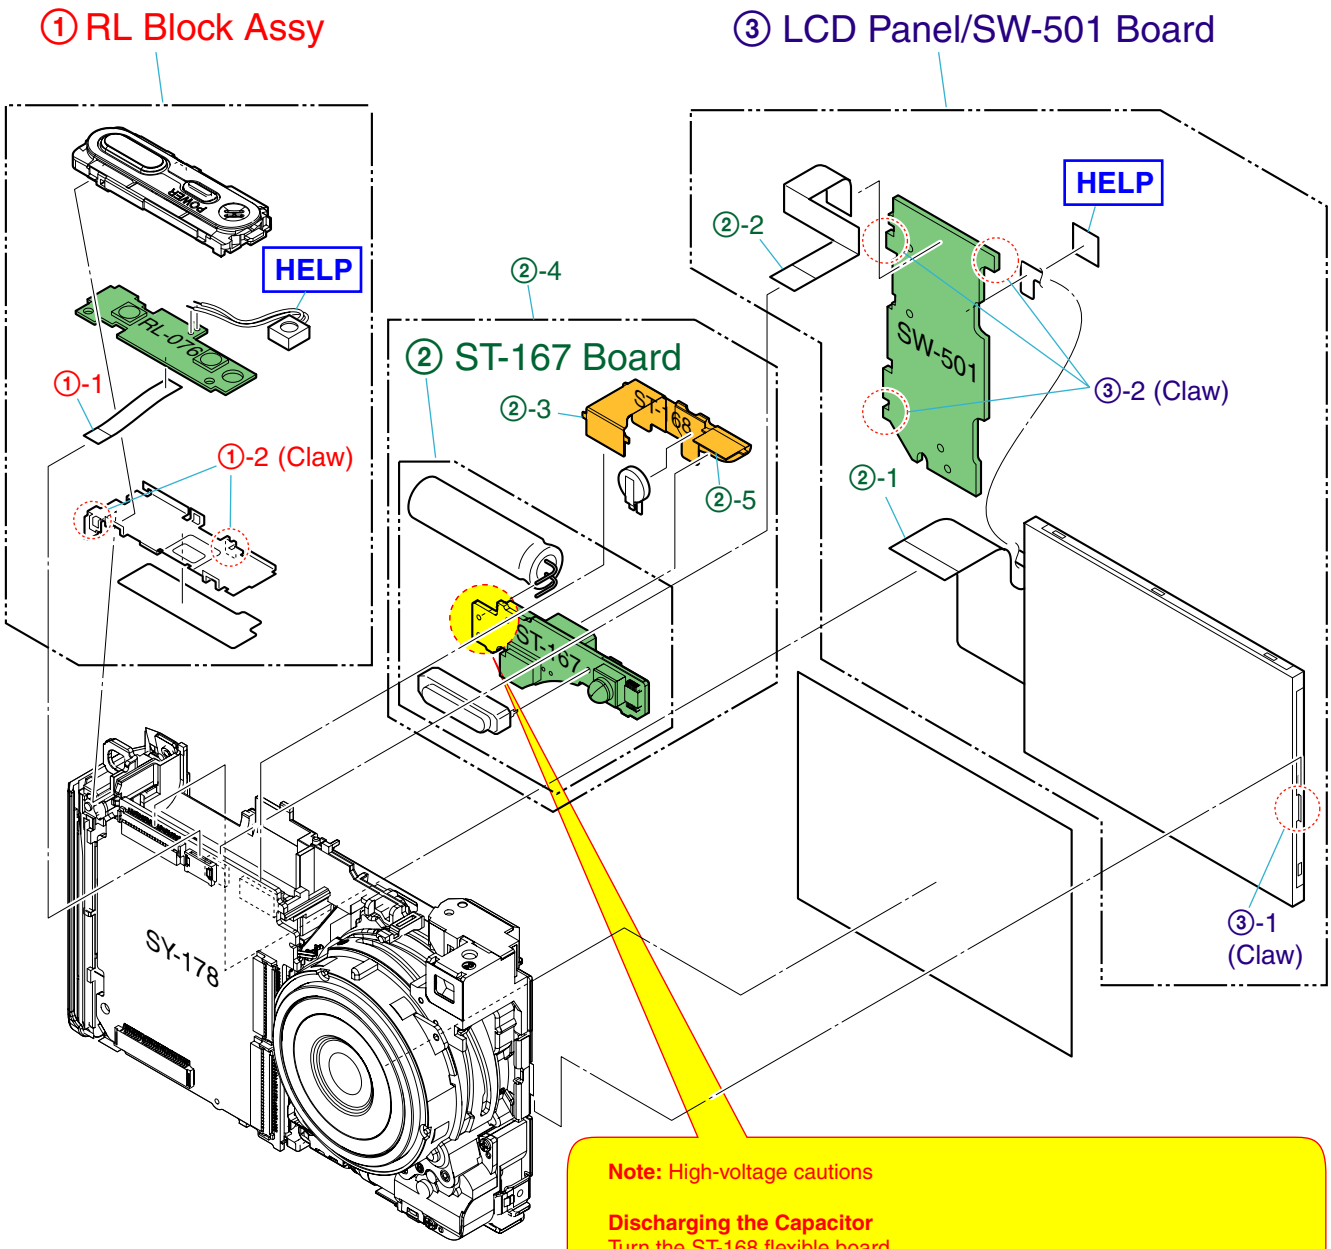

Note: High-voltage cautions

Discharging the Capacitor
Turn the ST-168 flexible board.
Short-circuit between the two points with the short jig about 10 seconds.
To avoid the spark with the metal plate,wrap the short jig with the insulation tape.

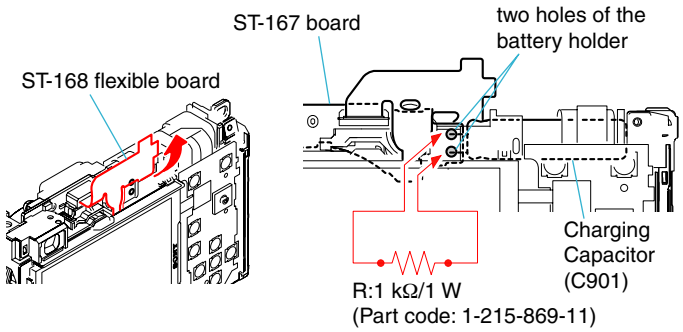

2-1-3. MAIN SECTION

EXPLODED VIEW | HARDWARE LIST

Follow the disassembly in the numerical order given.
① Lens Block Assy (①-1 to ①-3)
② SY-178 Board (②-1 to ②-6)
③ MC-183 Board (③-1 to ③-2)

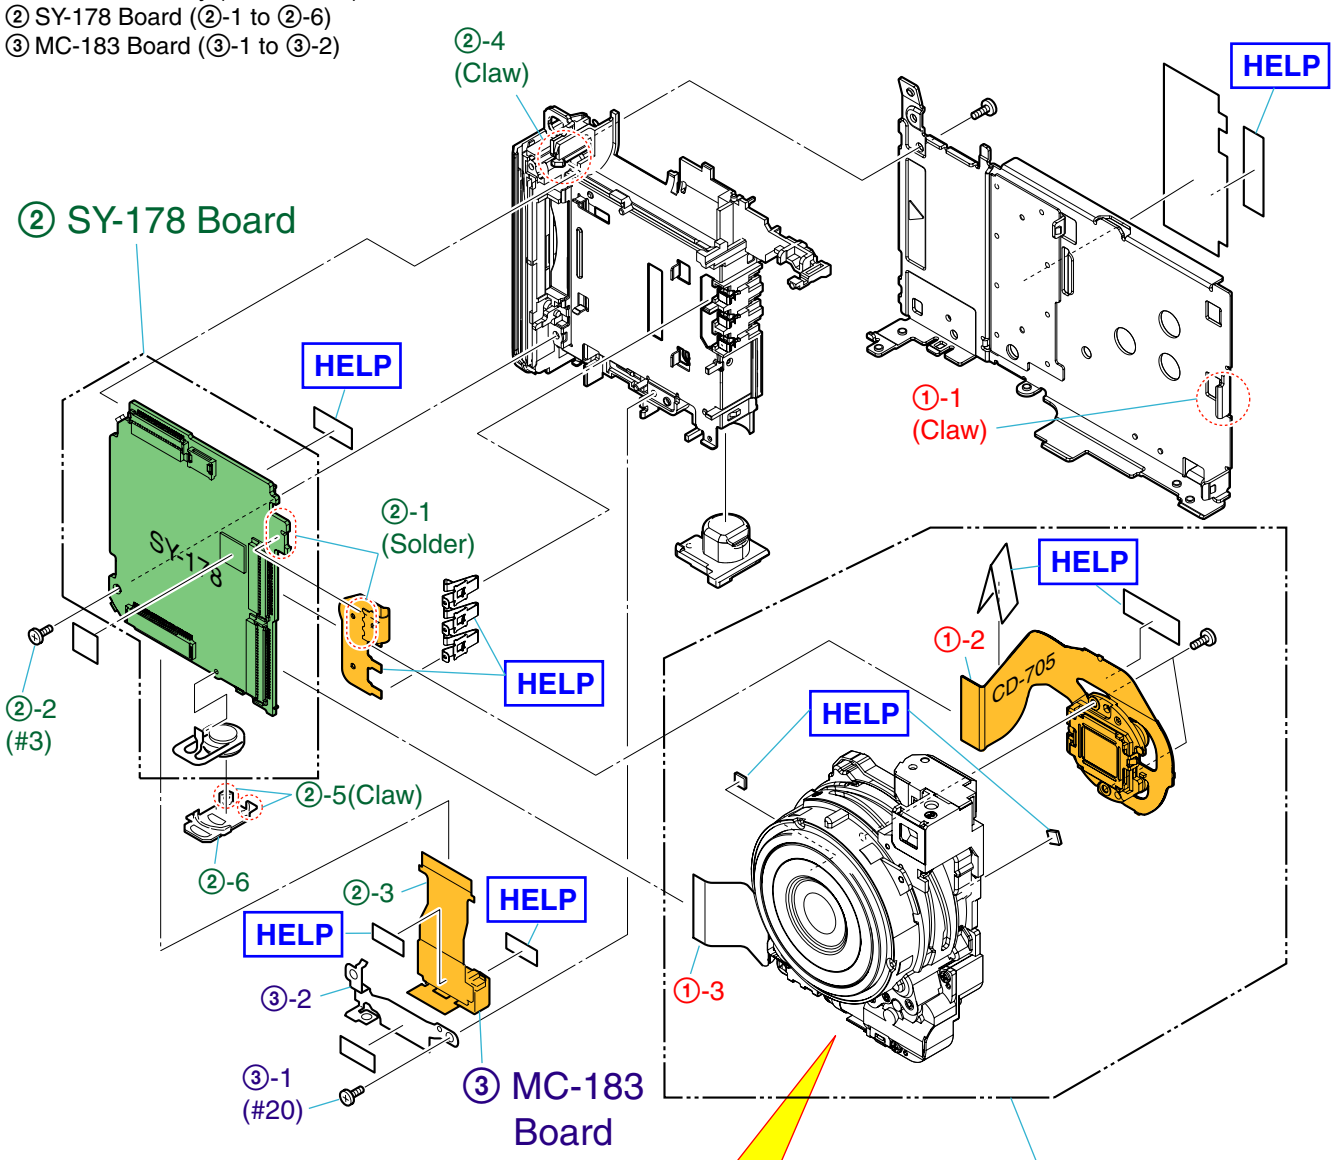

Note: Precaution when removing the lens block assy.

Do not touch the area marked in the figure.

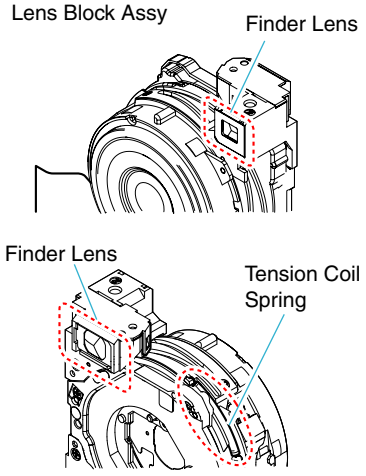

2-1-4. BATTERY HOLDER SECTION

Follow the disassembly in the numerical order given.
① BT Lid Assy (①-1 to ①-2)
② BT Holder (②-1 to ②-9)

EXPLODED VIEW HARDWARE LIST

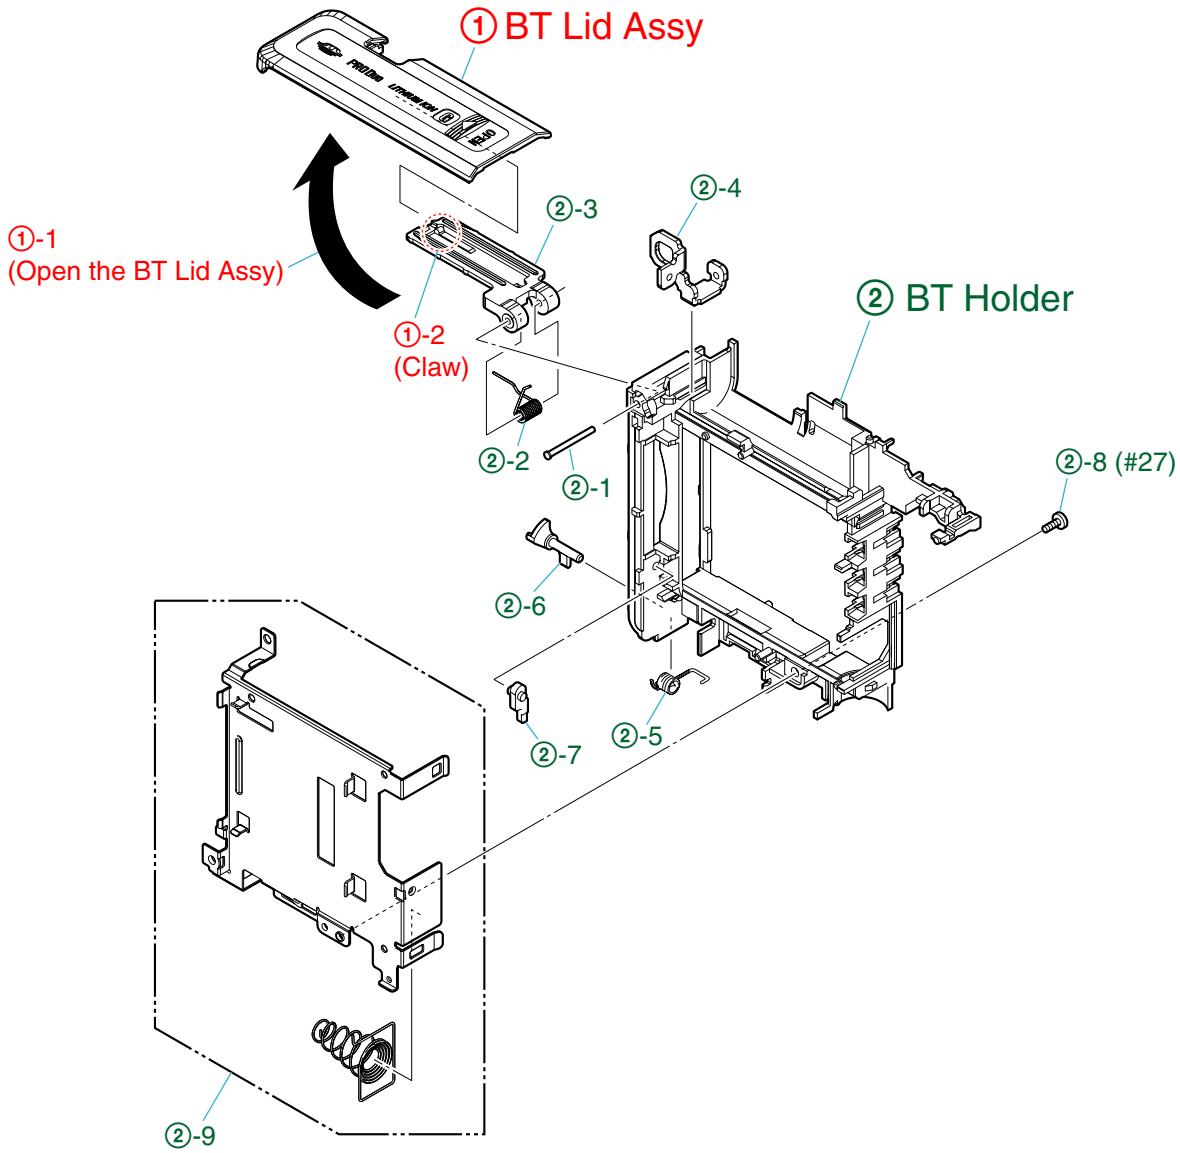

2-2. EXCHANGE METHOD OF THE ZOOM (1210) GEAR BLOCK ASSY

Note: The lens should be retracted into the camera body before starting the work.

2-2-1. HOW TO REMOVE THE ZOOM(1210) GEAR BLOCK ASSY

① Remove two screws, remove the zoom (1210) gear block assy.
② Remove soldering from the two points and remove the flexible board from the D.C. motor.
③ Remove the claws at two locations by pushing two locations of the portion Ⓐ of FG leaf spring in the direction of the arrow. Then, remove the FG leaf spring.
④ Remove the sensors at two locations and remove the flexible board from the zoom (1210) gear block assy.

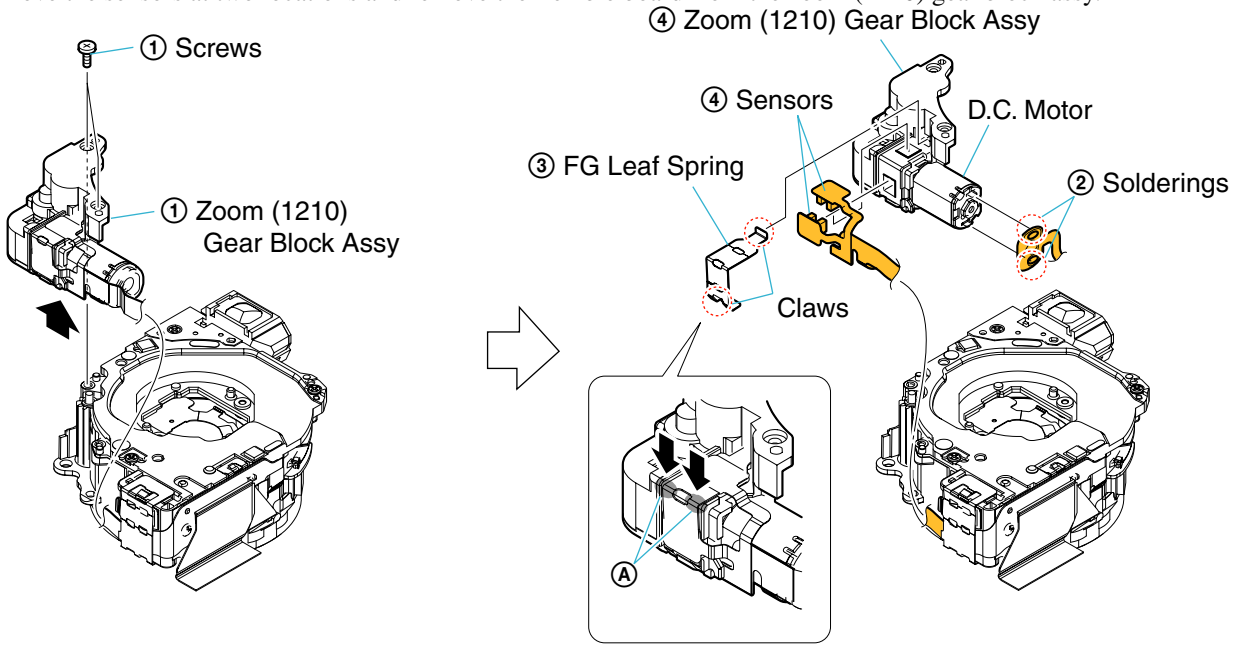

2-2-2. HOW TO INSTALL THE ZOOM(1210) GEAR BLOCK ASSY

① Install the sensors to the new zoom (1210) gear block assy at two locations.
② Install the FG leaf spring.
Note: Install the claw Ⓐ and claw Ⓑ in order.
③ Install the flexible board to the D.C. motor and solder at two locations.
④ Install the zoom (1210) gear block assy and tighten two screws.
*Tightening torque=0.049±0.01N•m(0.5±0.1kgf•cm)

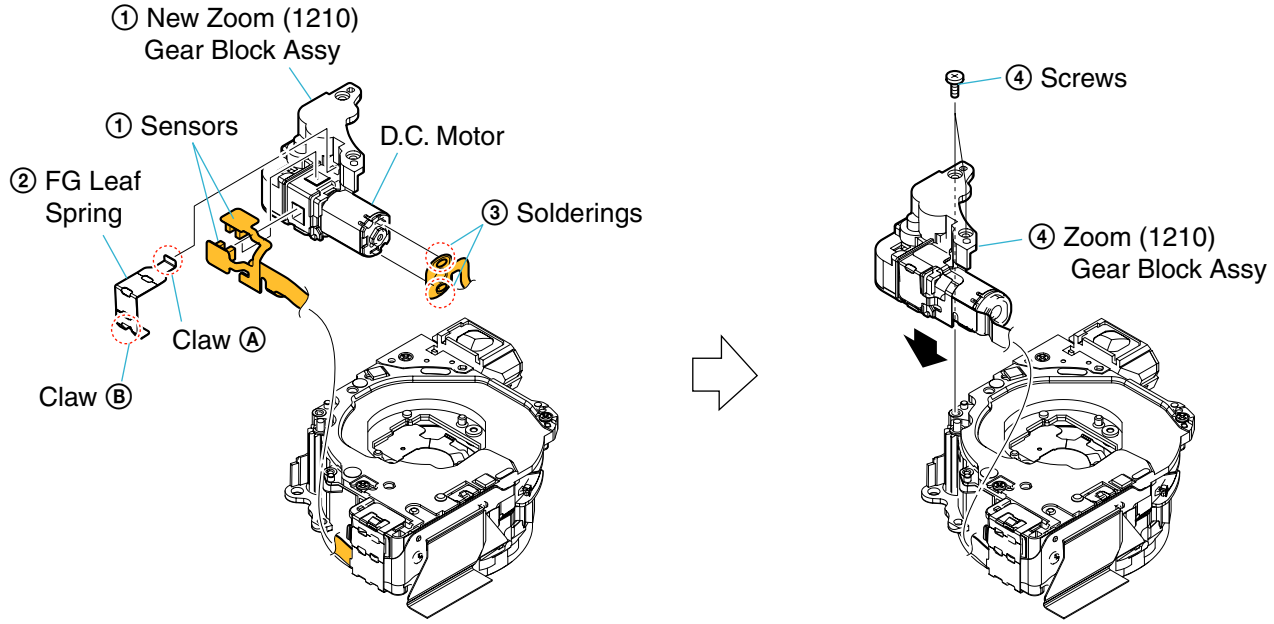

2-3. EXCHANGE METHOD OF THE BARRIER ASSY

2-3-1. HOW TO REMOVE THE BARRIER ASSY

① Remove two screws, and remove the zoom (1210) gear block assy.
② Remove the naruto gear, naruto washer and naruto shaft in order.

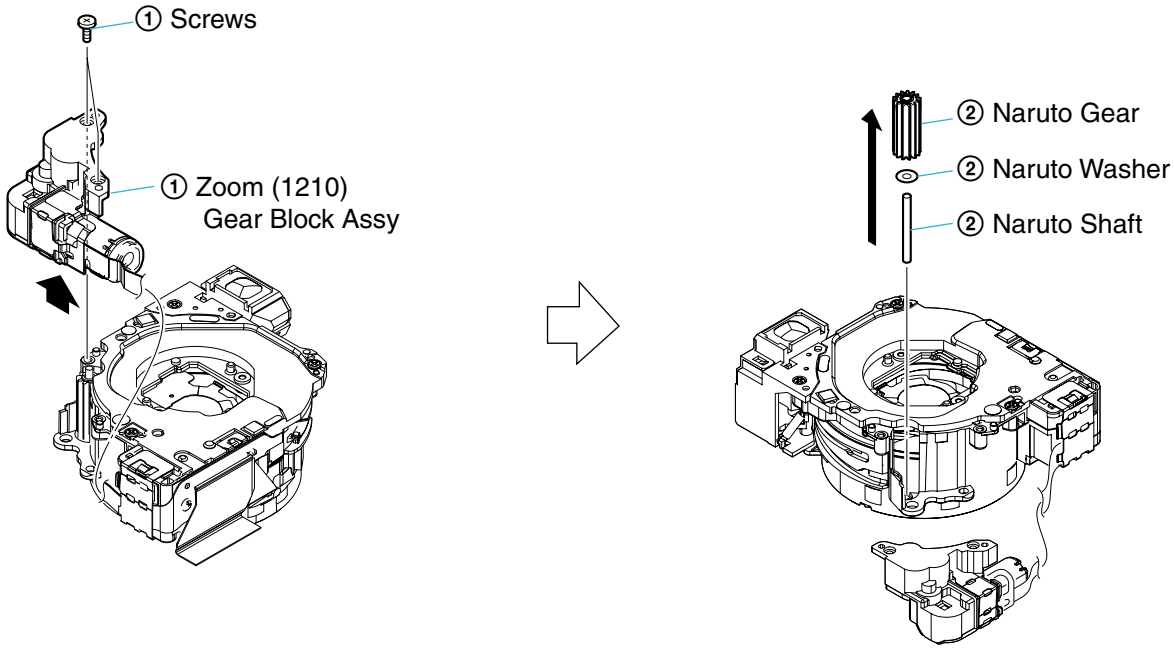

③ By turning the gear of cam ring, set the lens barrel to the "Tele end".

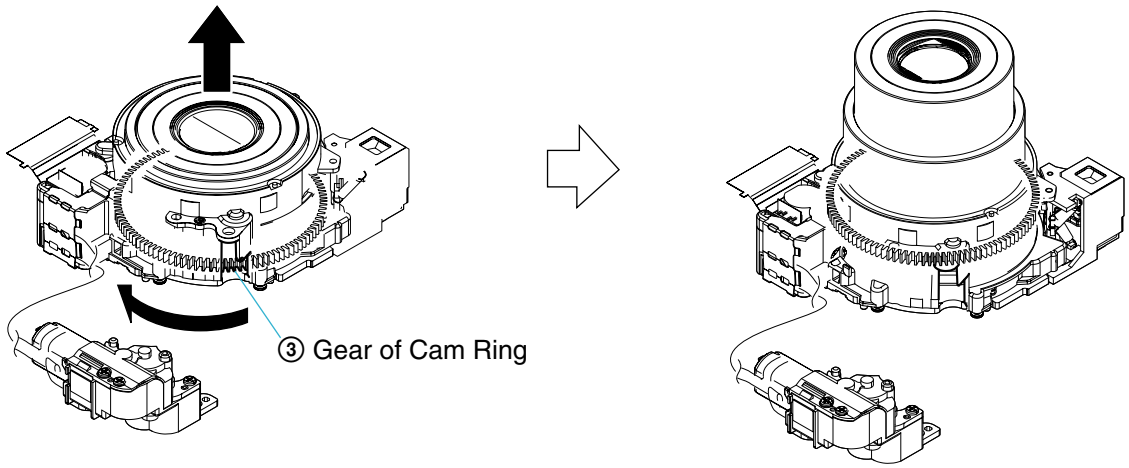

④ With the lens set to the "Tele end", remove the ornamental ring (B) while rotating it clockwise.
⑤ Remove the light interception ring.
Discard the removed light interception ring.
⑥ Wipe off the glue on the side of cam ring with cotton swab moistened with alcohol.
(Be careful not to drop debris of glue in the lens barrel.)

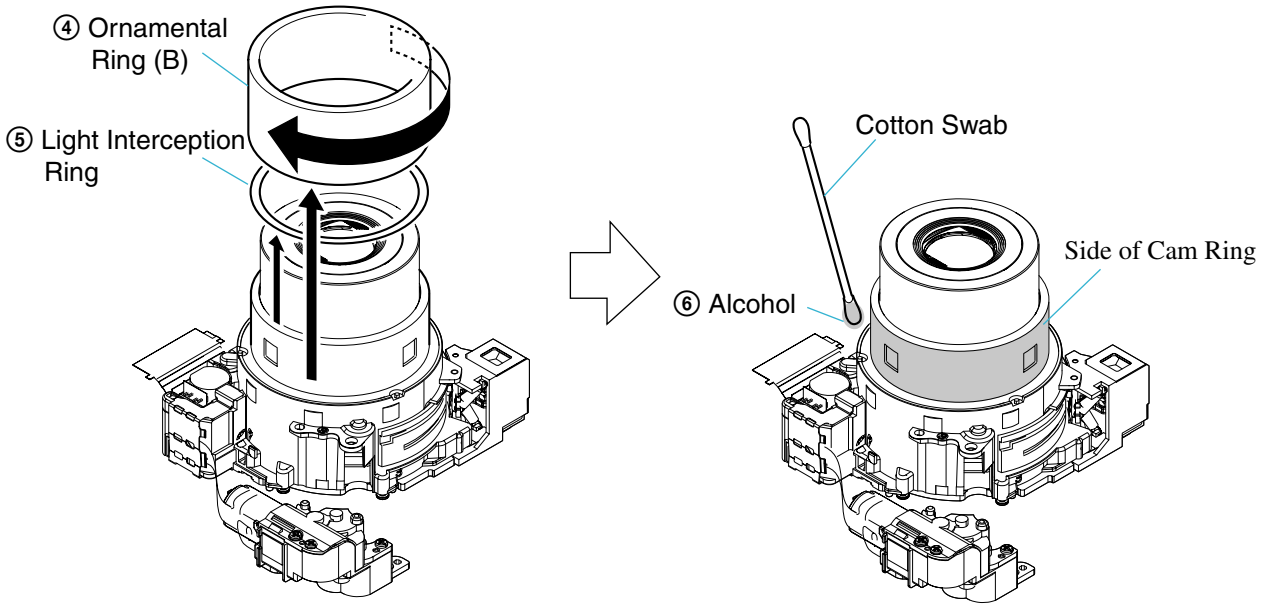

⑦ Pour alcohol into the inner diameter of top side of ornamental ring (A) with tweezers.
⑧ Remove the ornamental ring (A) while rotating it clockwise.
Discard the removed ornamental ring (A).
⑨ Peel the barrier tape.
Discard the removed barrier tape.

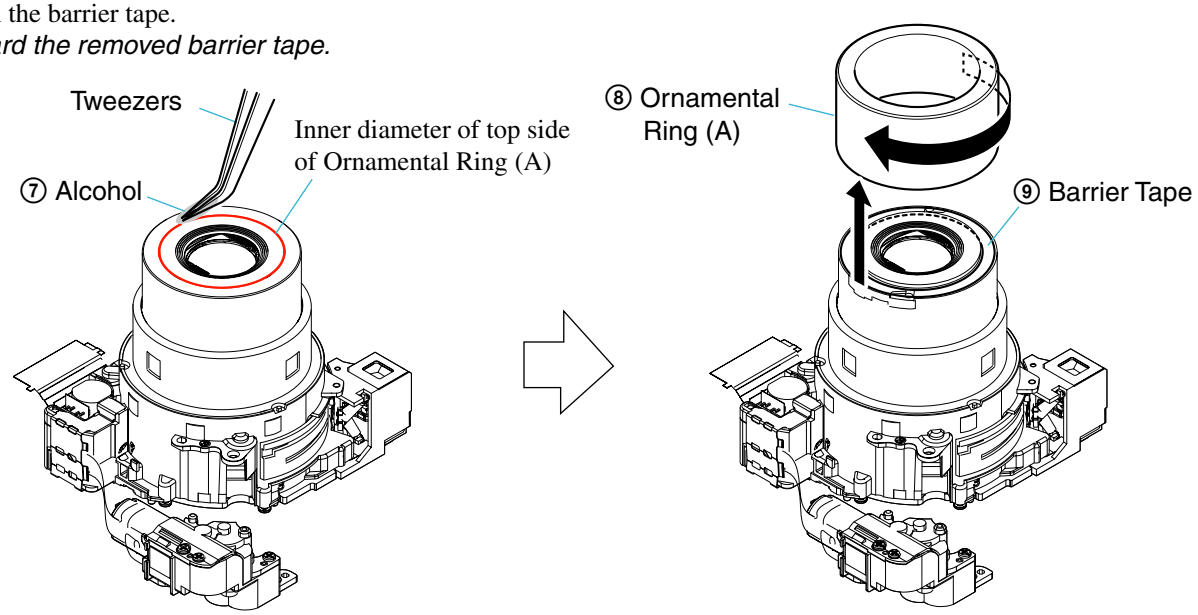

⑩ With the lens set to the "Tele end", install the naruto shaft, naruto washer, naruto gear and zoom (1210) gear block assy in order. Then, fix the zoom (1210) gear block assy with two screws.

*Tightening torque=0.049±0.01N•m(0.5±0.1kgf•cm)

⑪ Remove two screws, and remove the barrier assy.

*Discard the removed barrier assy.

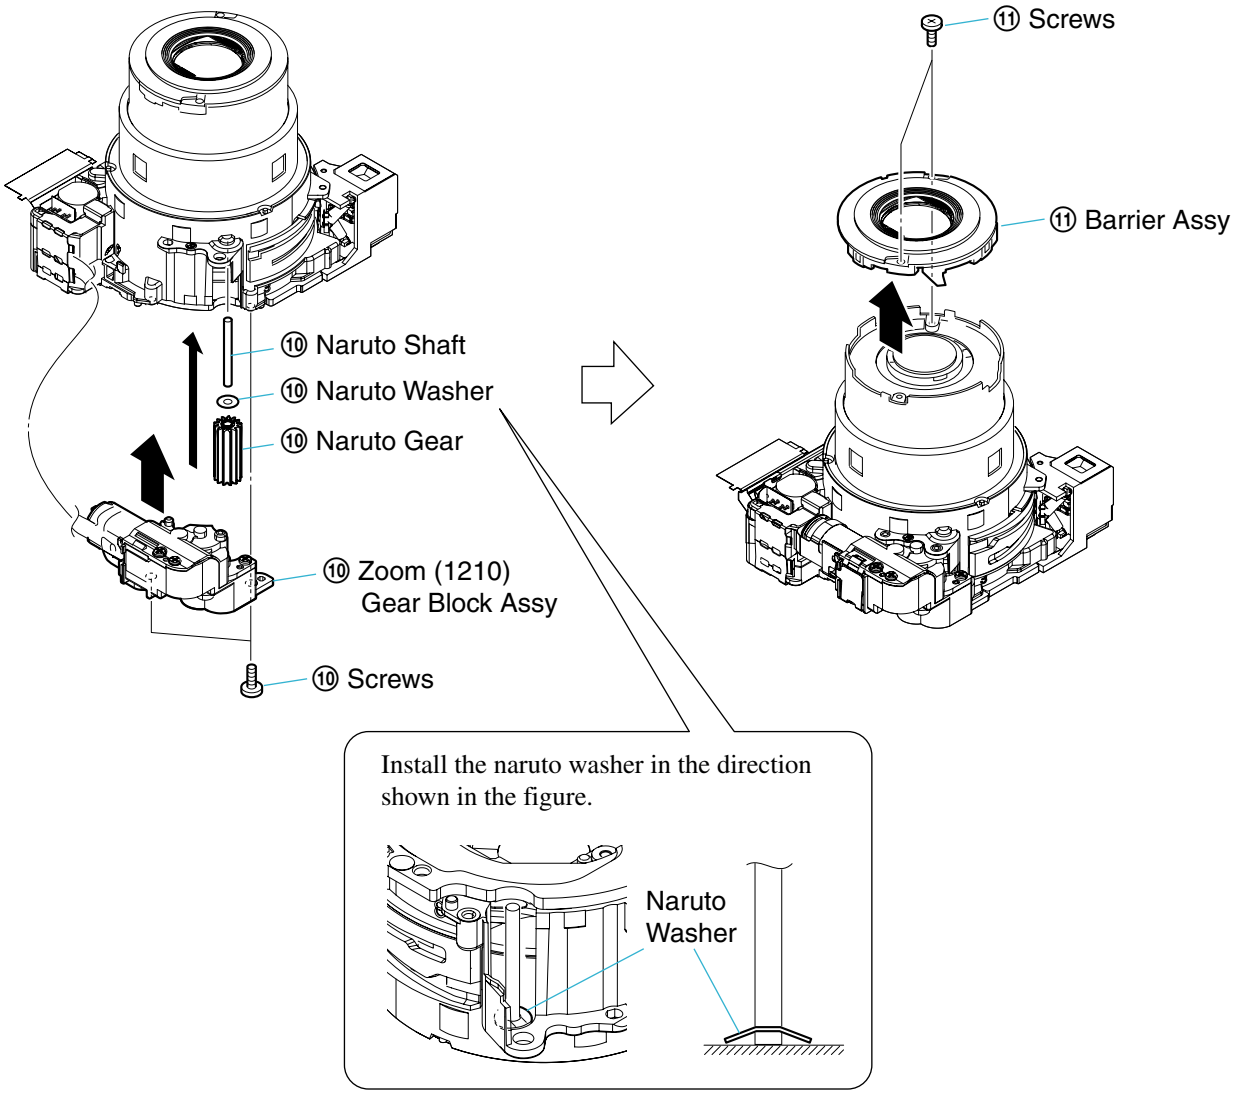

2-3-2. HOW TO INSTALL THE BARRIER ASSY

① Install the new barrier assy and fix it temporarily with two screws so that it can move slightly.
② Install temporarily the new ornamental ring (A) and adjust the position of barrier assy.
*The top sides of barrier assy and ornamental ring should be flat.
Take care for contacts of parts not to conflict each other.
③ Remove the ornamental ring (A) once and tighten firmly it again with two screws with extra torque.
*Tightening torque=0.059±0.01N•m(0.6±0.1kgf•cm)
④ Affix the new barrier tape and then install the ornamental ring (A).

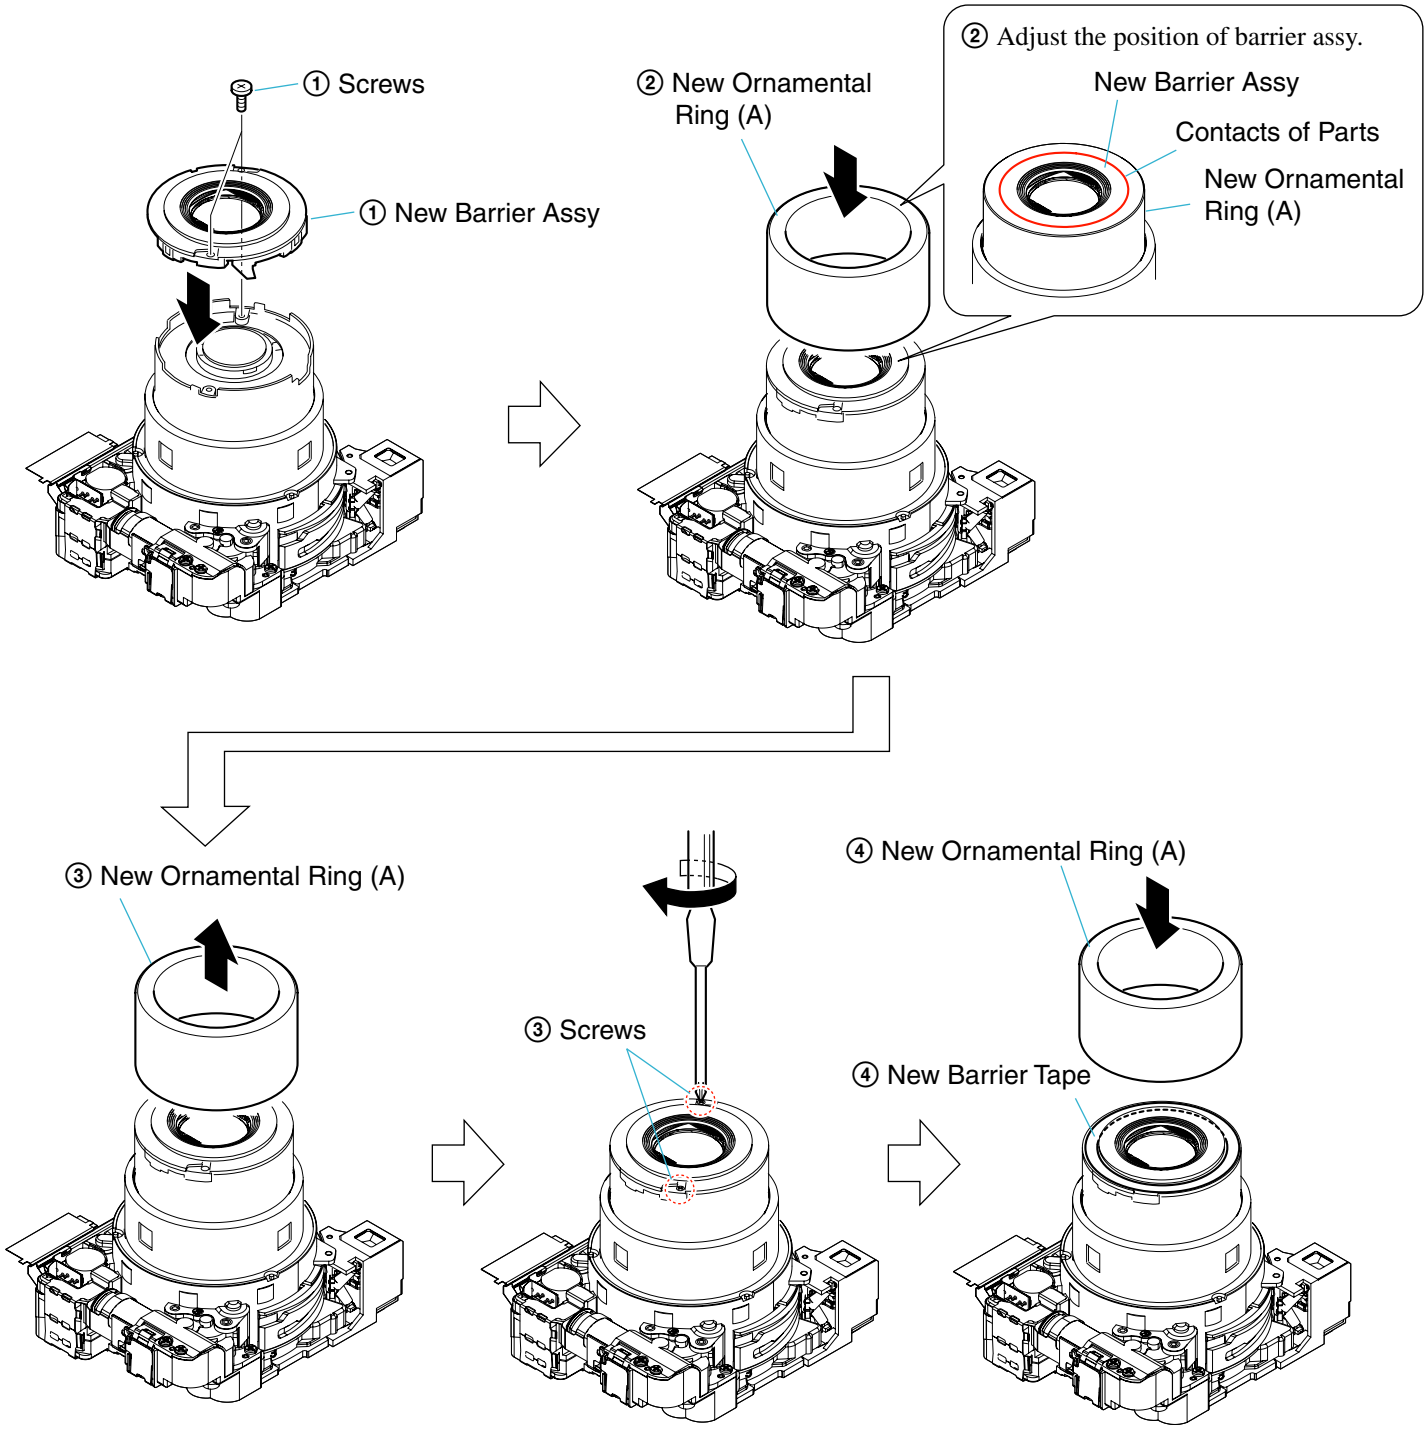
① Screws
① New Barrier Assy
② New Ornamental Ring (A)
② Adjust the position of barrier assy.
New Barrier Assy
Contacts of Parts
New Ornamental Ring (A)
③ New Ornamental Ring (A)
③ Screws
④ New Ornamental Ring (A)
④ New Barrier Tape

⑤ Install the light interception ring.
Note: Install the light interception ring, facing its shining side down.
⑥ Apply the glue to the side of cam ring and install the new ornamental ring (B) while rotating it to spread the glue.
Note: Use adhesive (Super X) or an equivalent article.
Don't use what becomes white after drying like a quick-drying glue.
⑦ Install the old ornamental ring (B) in the reverse direction. Fix it with a rubber band and leave for 30 minutes as is.
Note: Load of about 500g.

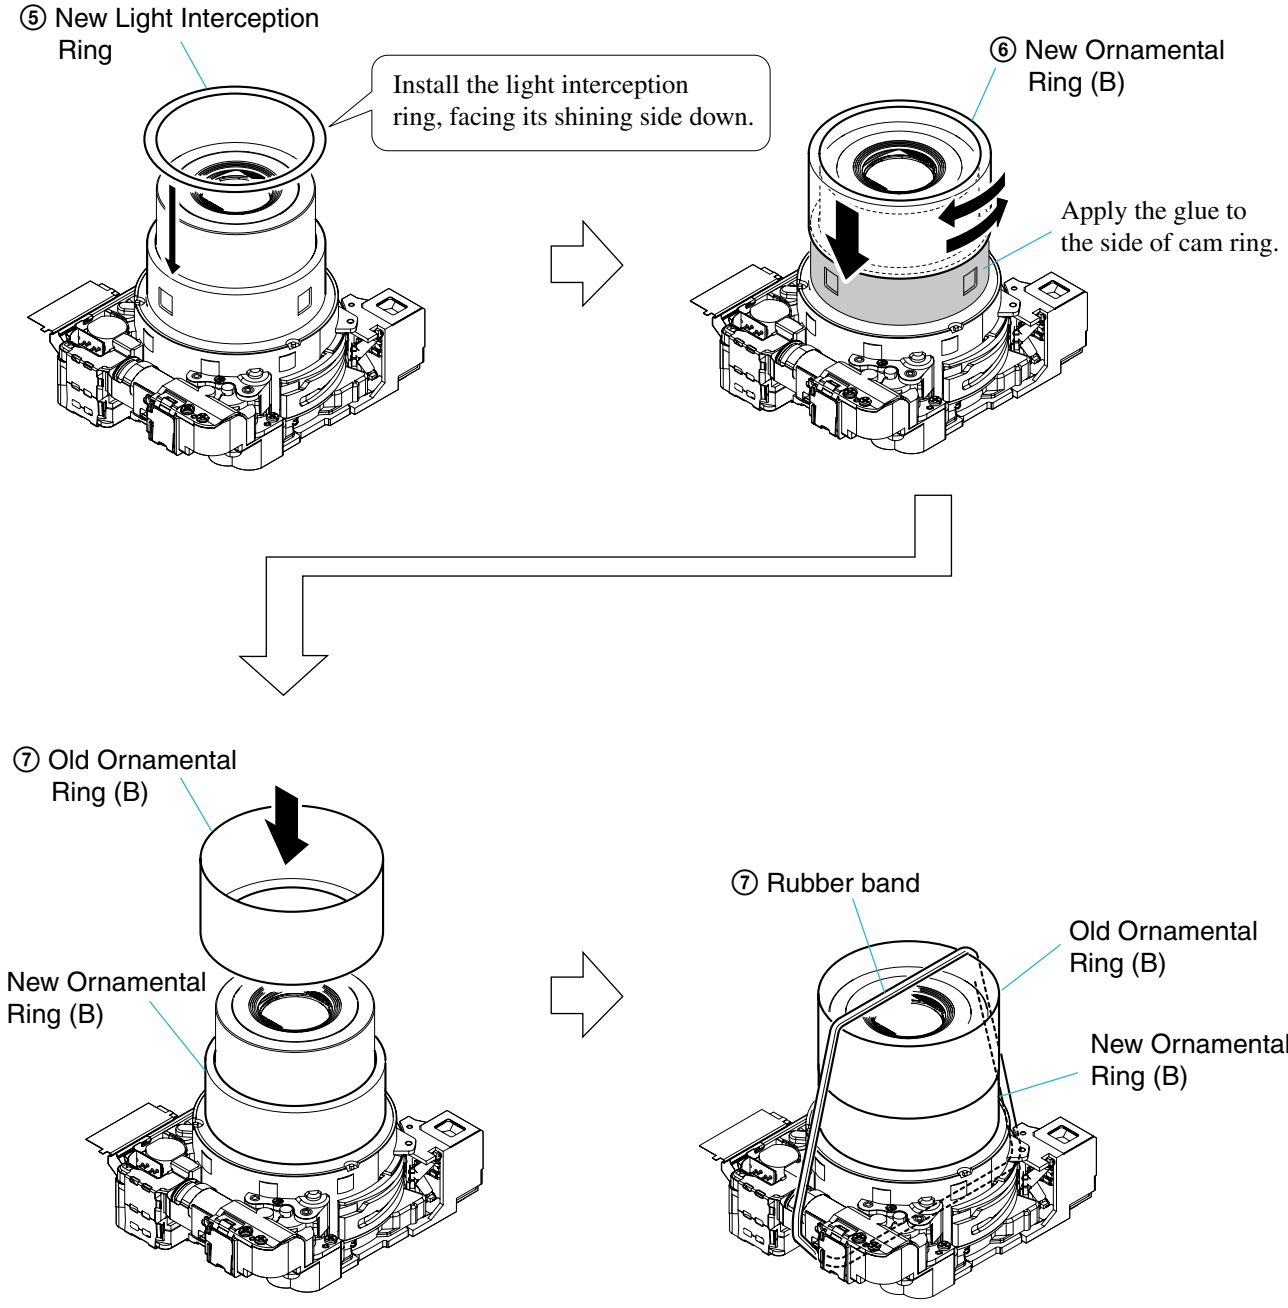
⑤ New Light Interception Ring
Install the light interception ring, facing its shining side down.
⑥ New Ornamental Ring (B)
Apply the glue to the side of cam ring.
⑦ Old Ornamental Ring (B)
New Ornamental Ring (B)
⑦ Rubber band
Old Ornamental Ring (B)
New Ornamental Ring (B)

⑧ Remove the rubber band and the old ornamental ring (B).
⑨ Remove two screws, zoom (1210) gear block assy, naruto gear, naruto washer, naruto gear in order.
⑩ Rotate the gear of cam ring to retract the lens barrel into the camera body, and confirm that the front of camera is flat.
⑪ With the lens barrel retracted into the camera body, install the naruto shaft, naruto washer, naruto gear, zoom (1210) gear and block assy in order, and the fix the zoom (1210) gear block assy with screws.
*Tightening torque=0.049±0.01N•m(0.5±0.1kgf•cm)

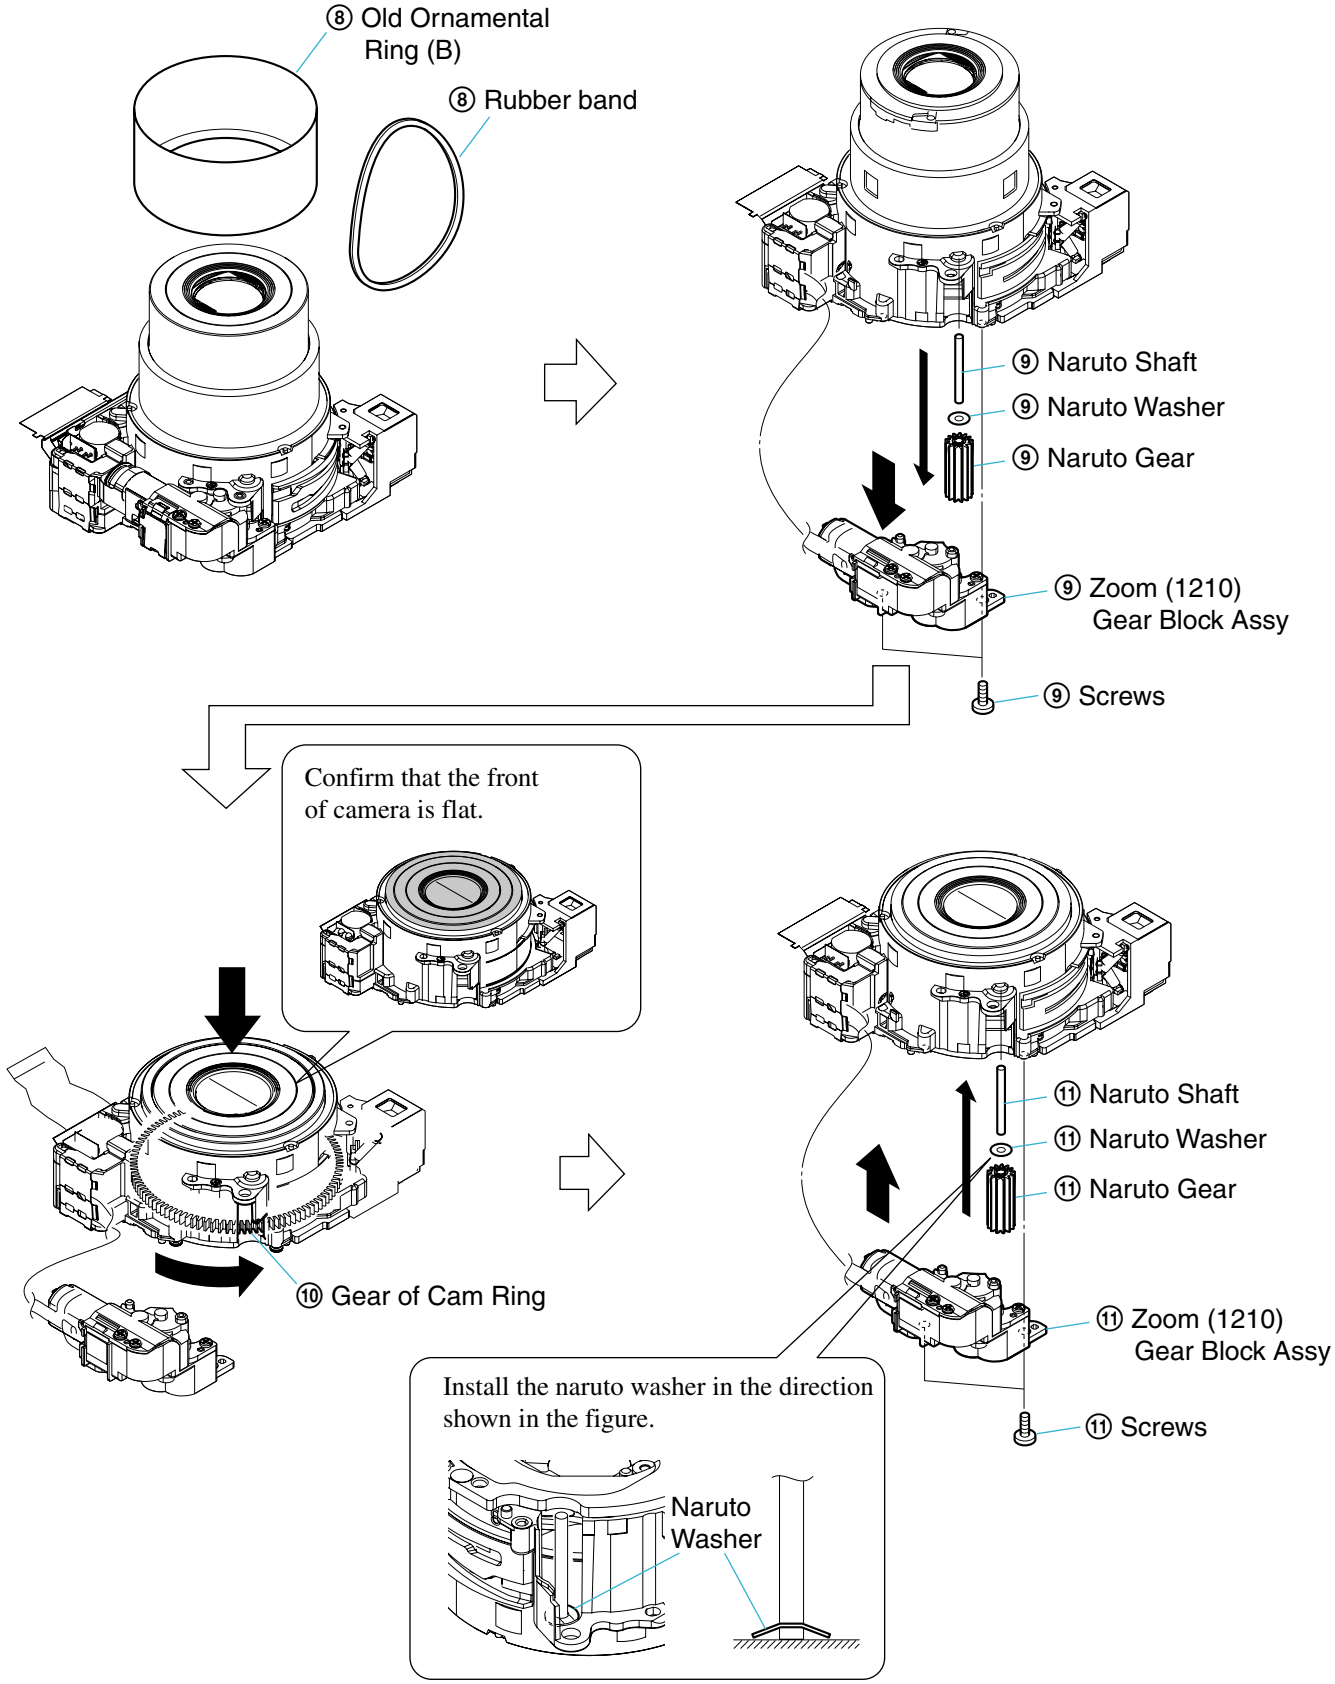
⑧ Old Ornamental Ring (B)
⑧ Rubber band
⑨ Naruto Shaft
⑨ Naruto Washer
⑨ Naruto Gear
⑨ Zoom (1210) Gear Block Assy
⑨ Screws
Confirm that the front of camera is flat.
⑩ Gear of Cam Ring
⑪ Naruto Shaft
⑪ Naruto Washer
⑪ Naruto Gear
⑪ Zoom (1210) Gear Block Assy
⑪ Screws
Install the naruto washer in the direction shown in the figure.
Naruto Washer

HELP

Sheet attachment positions and procedures of processing the flexible boards/harnesses are shown.

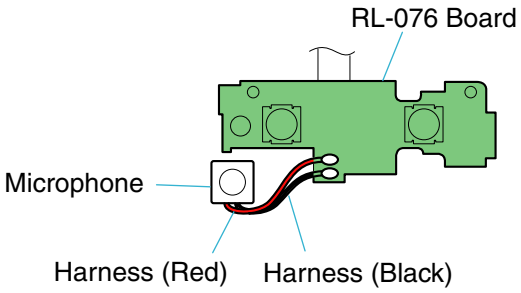

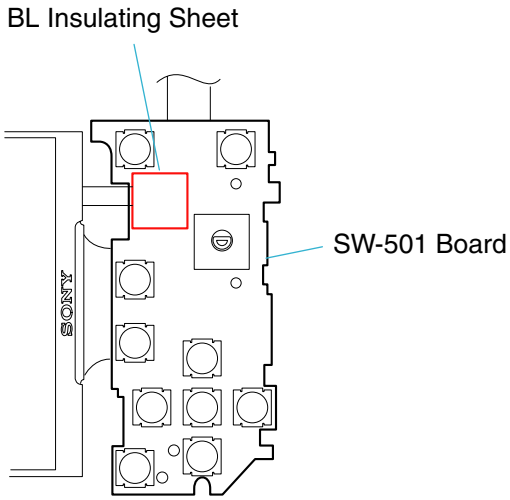

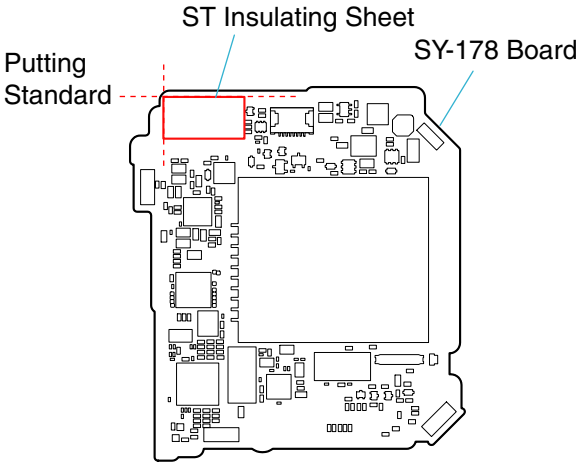

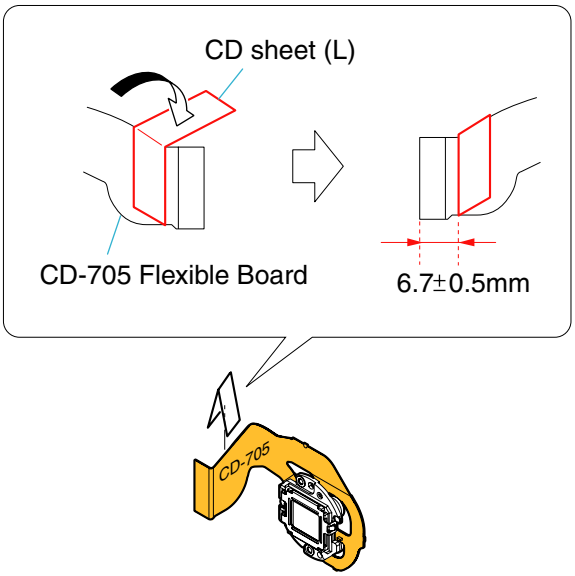

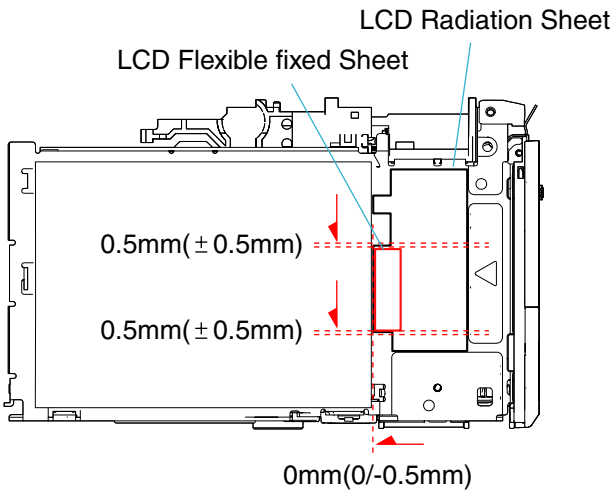

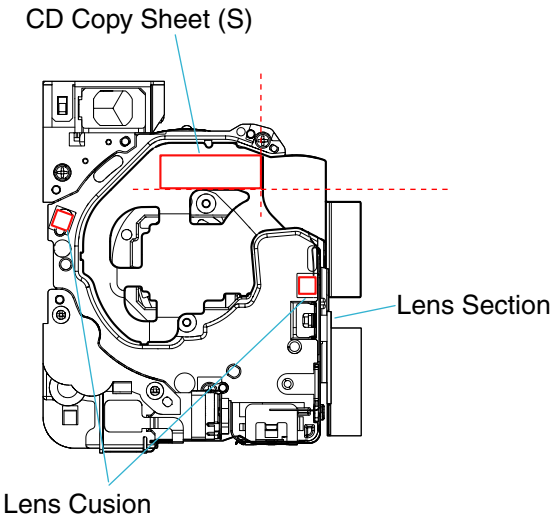
CD Copy Sheet (S)
Lens Section
Lens Cusion

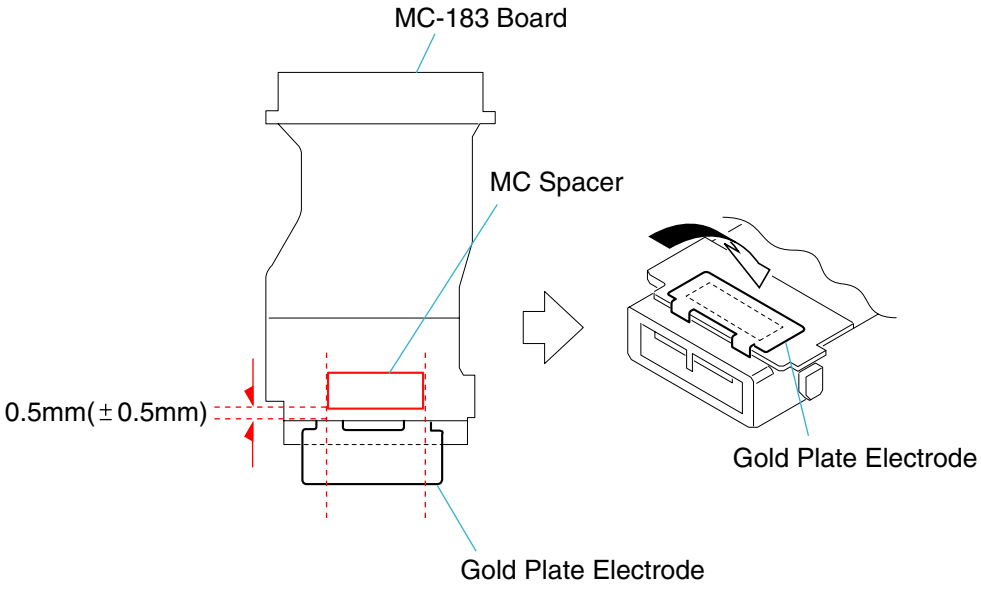
MC-183 Board
MC Spacer
0.5mm(±0.5mm)
Gold Plate Electrode
Gold Plate Electrode

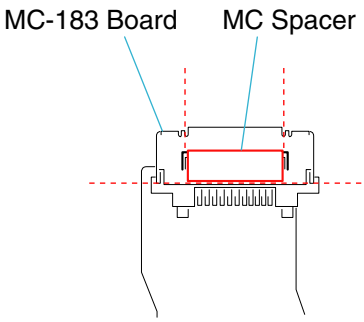
MC-183 Board
MC Spacer

INSTALLATION METHOD OF THE BATTERY TERMINAL BOARD

① Inserts the battery terminal board into a slit in the BT holder to install.
The batery terminal board are attached with the notch for installation.

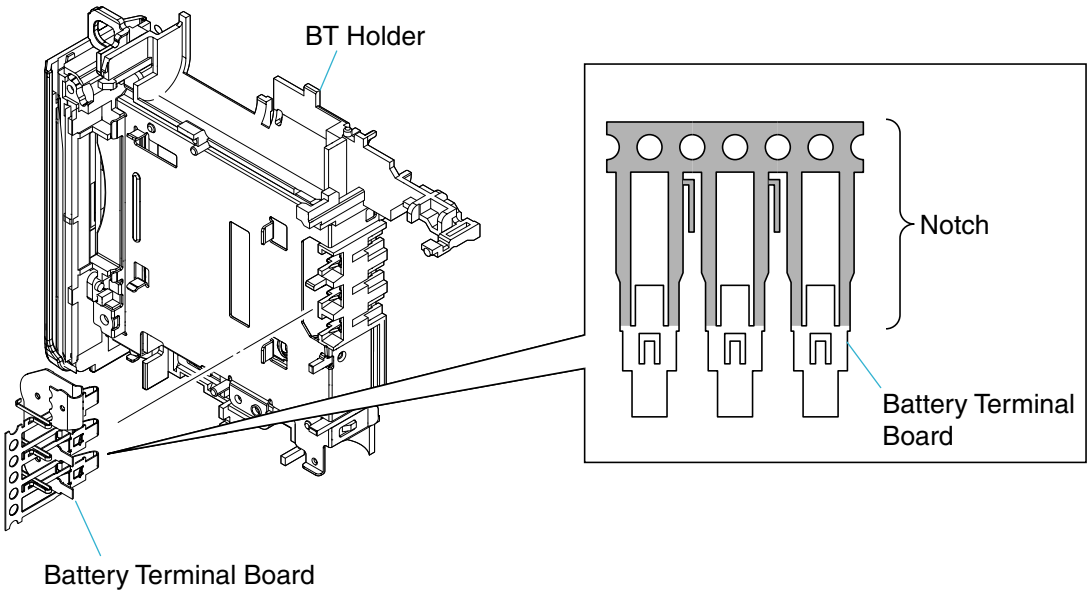

② Fold the notch 3 or 4 times repeatedly to break.

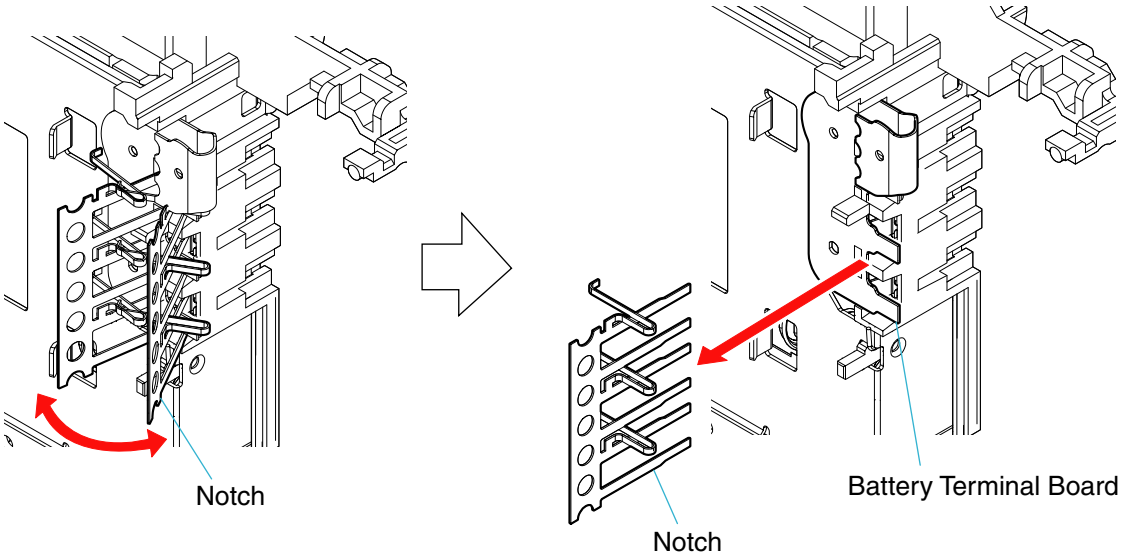

3. BLOCK DIAGRAMS

Link

OVERALL BLOCK DIAGRAM (1/2)	POWER BLOCK DIAGRAM (1/2)
OVERALL BLOCK DIAGRAM (2/2)	POWER BLOCK DIAGRAM (2/2)

3. BLOCK DIAGRAMS

3-1. OVERALL BLOCK DIAGRAM (1/2)

( ) : Number in parenthesis ( ) indicates the division number of schematic diagram where the component is located.

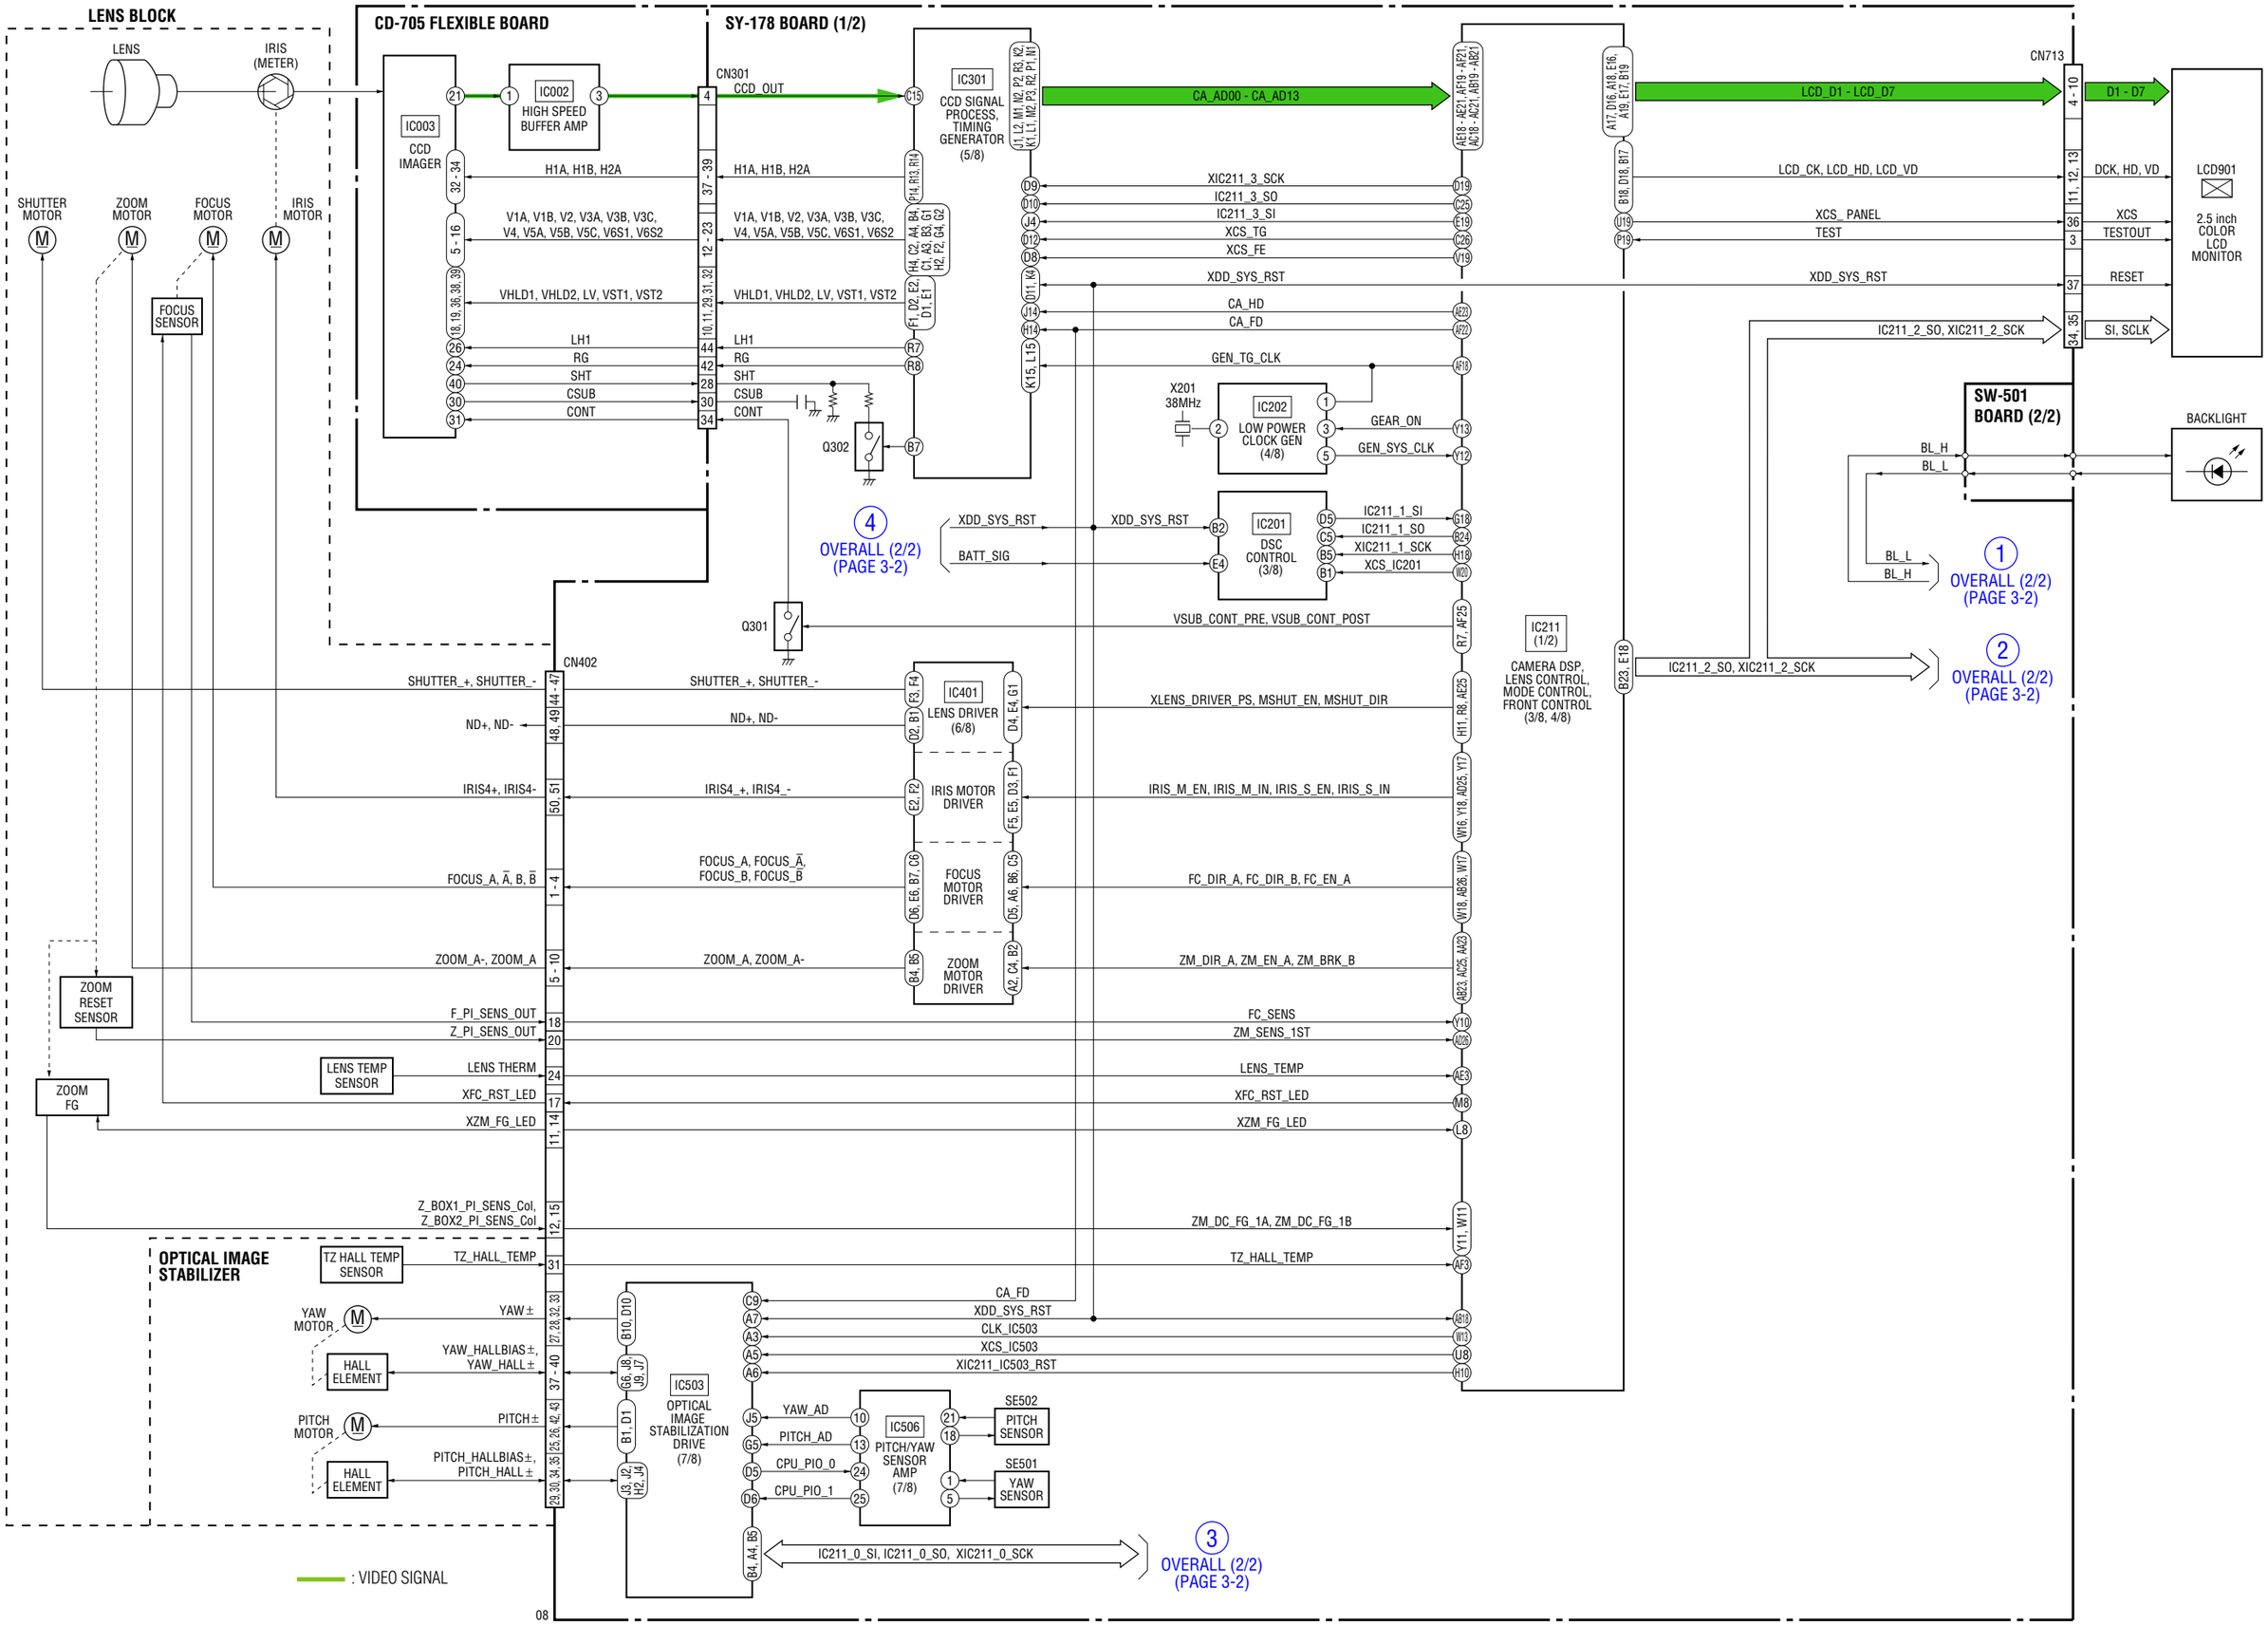

3-2. OVERALL BLOCK DIAGRAM (2/2)

( ) : Number in parenthesis ( ) indicates the division number of schematic diagram where the component is located.

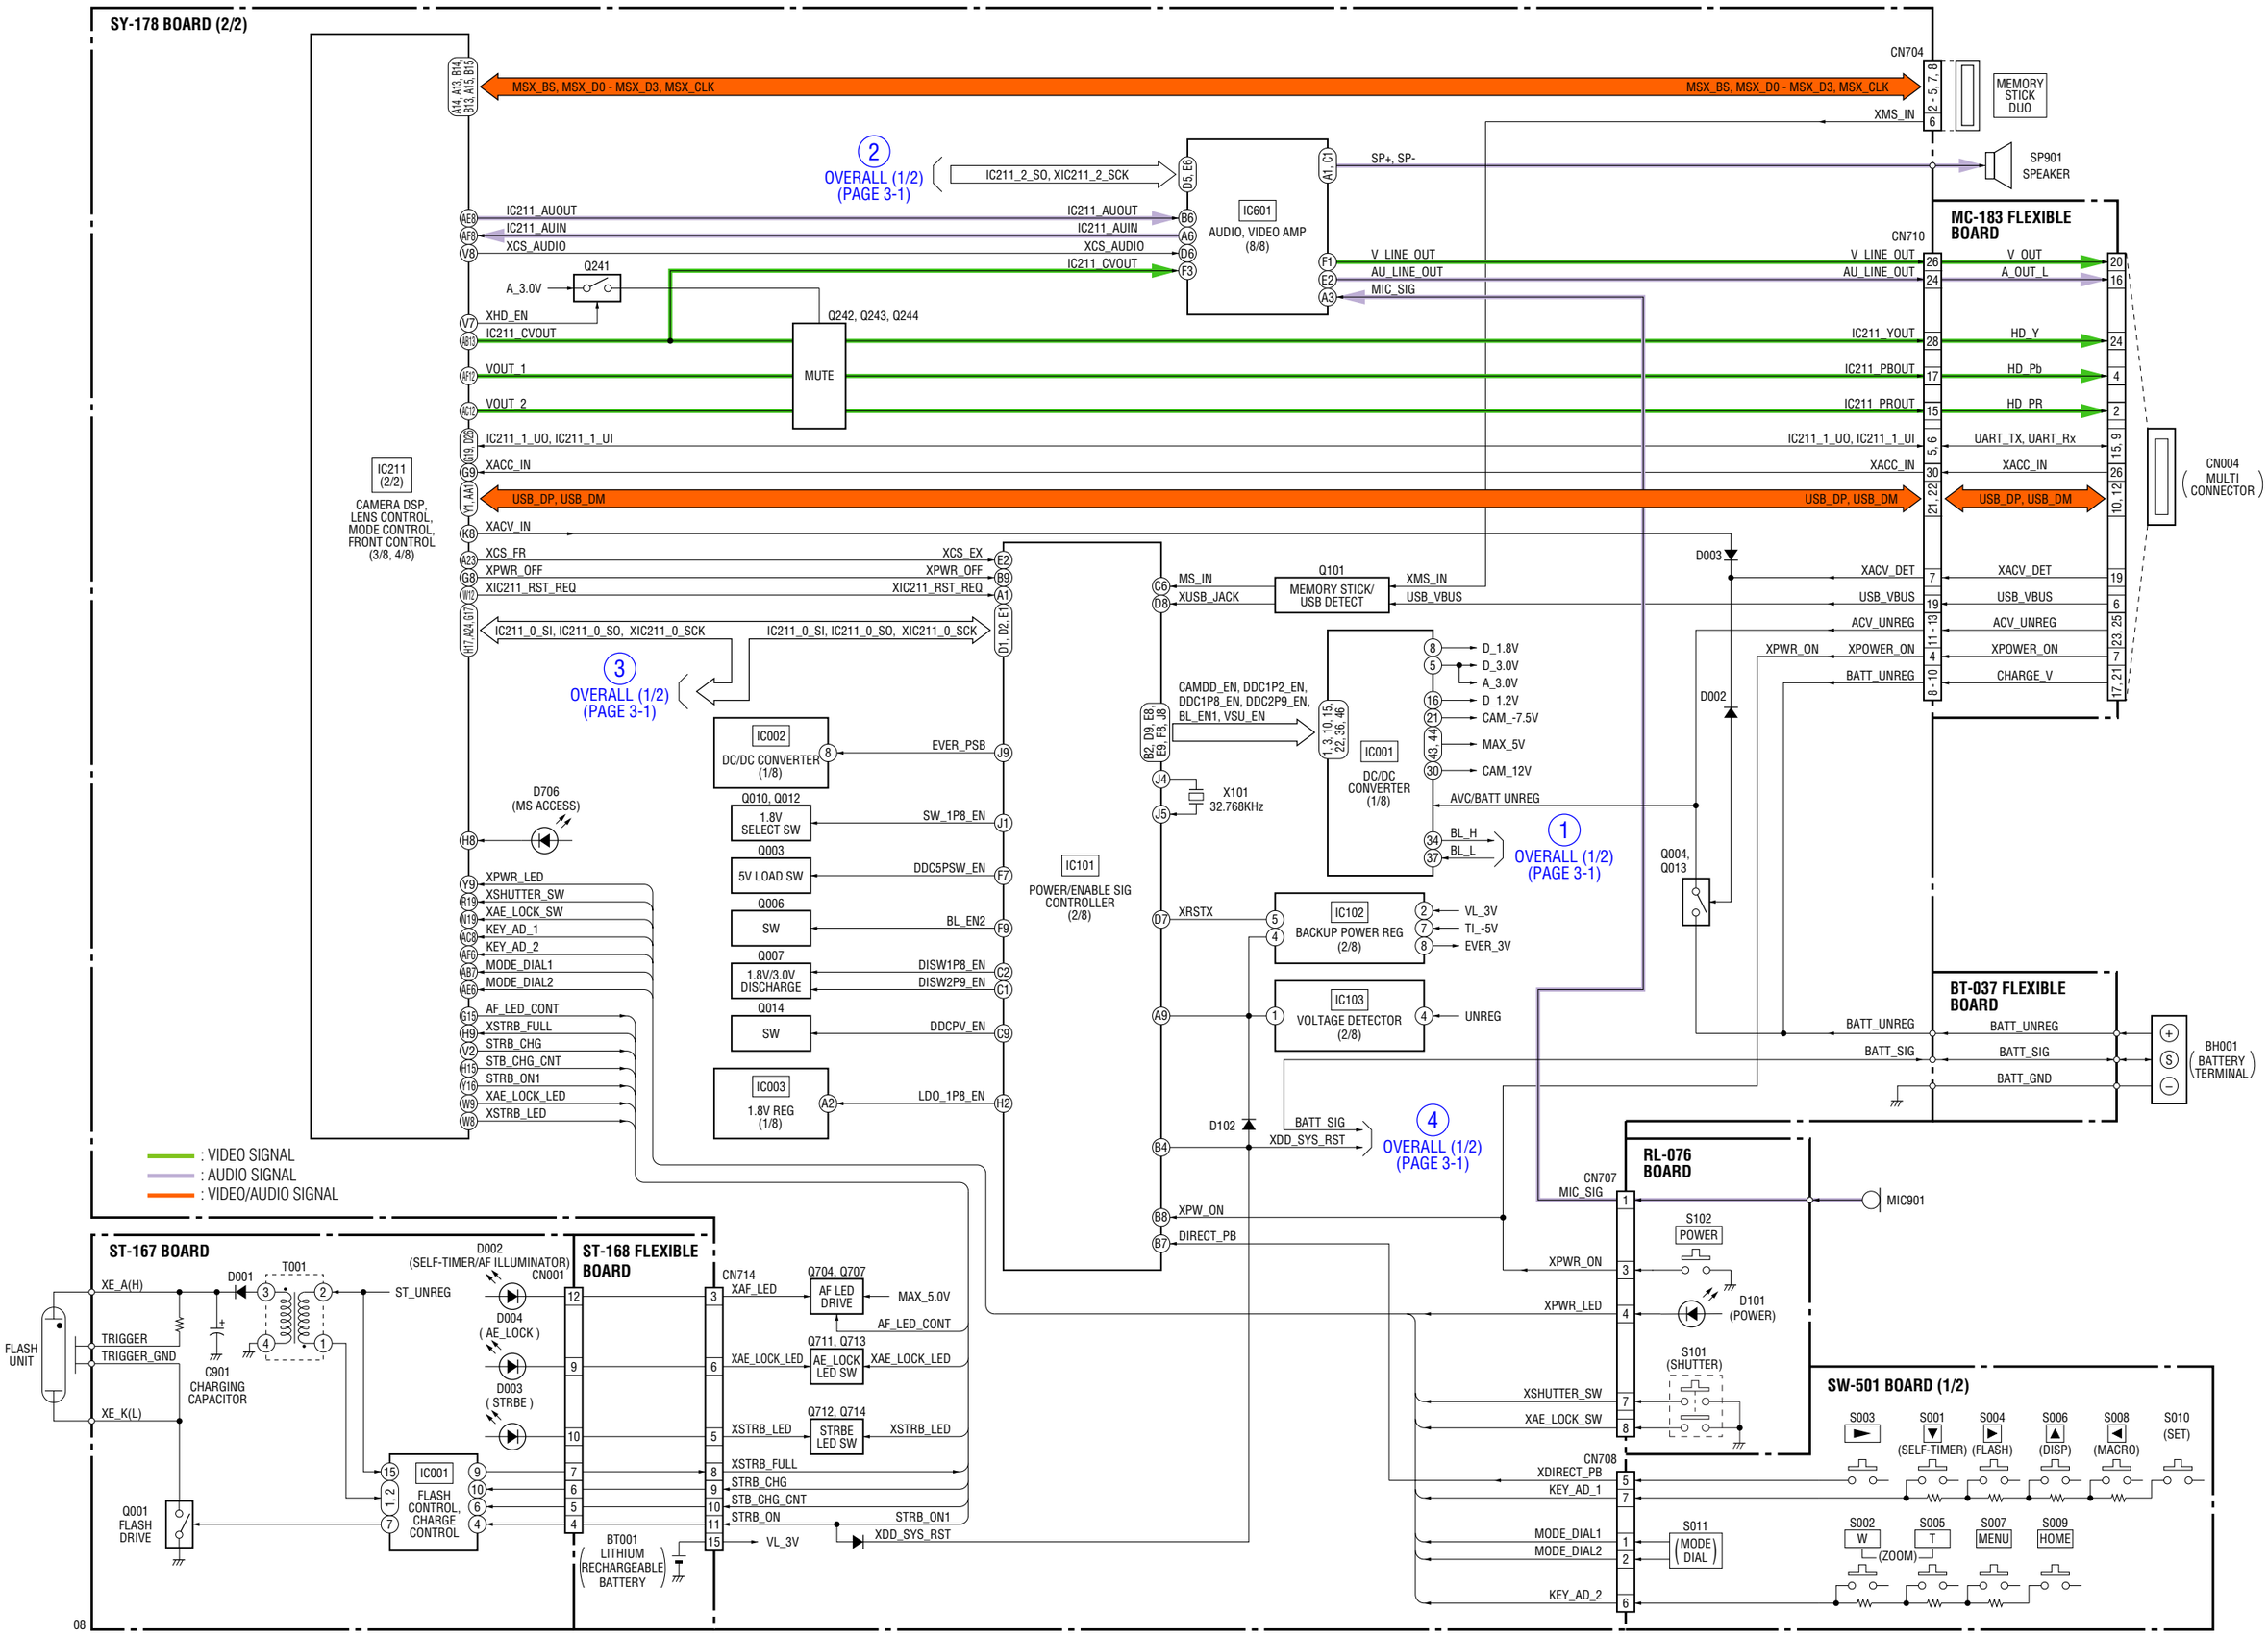

3-3. POWER BLOCK DIAGRAM (1/2)

( ) : Number in parenthesis ( ) indicates the division number of schematic diagram where the component is located.

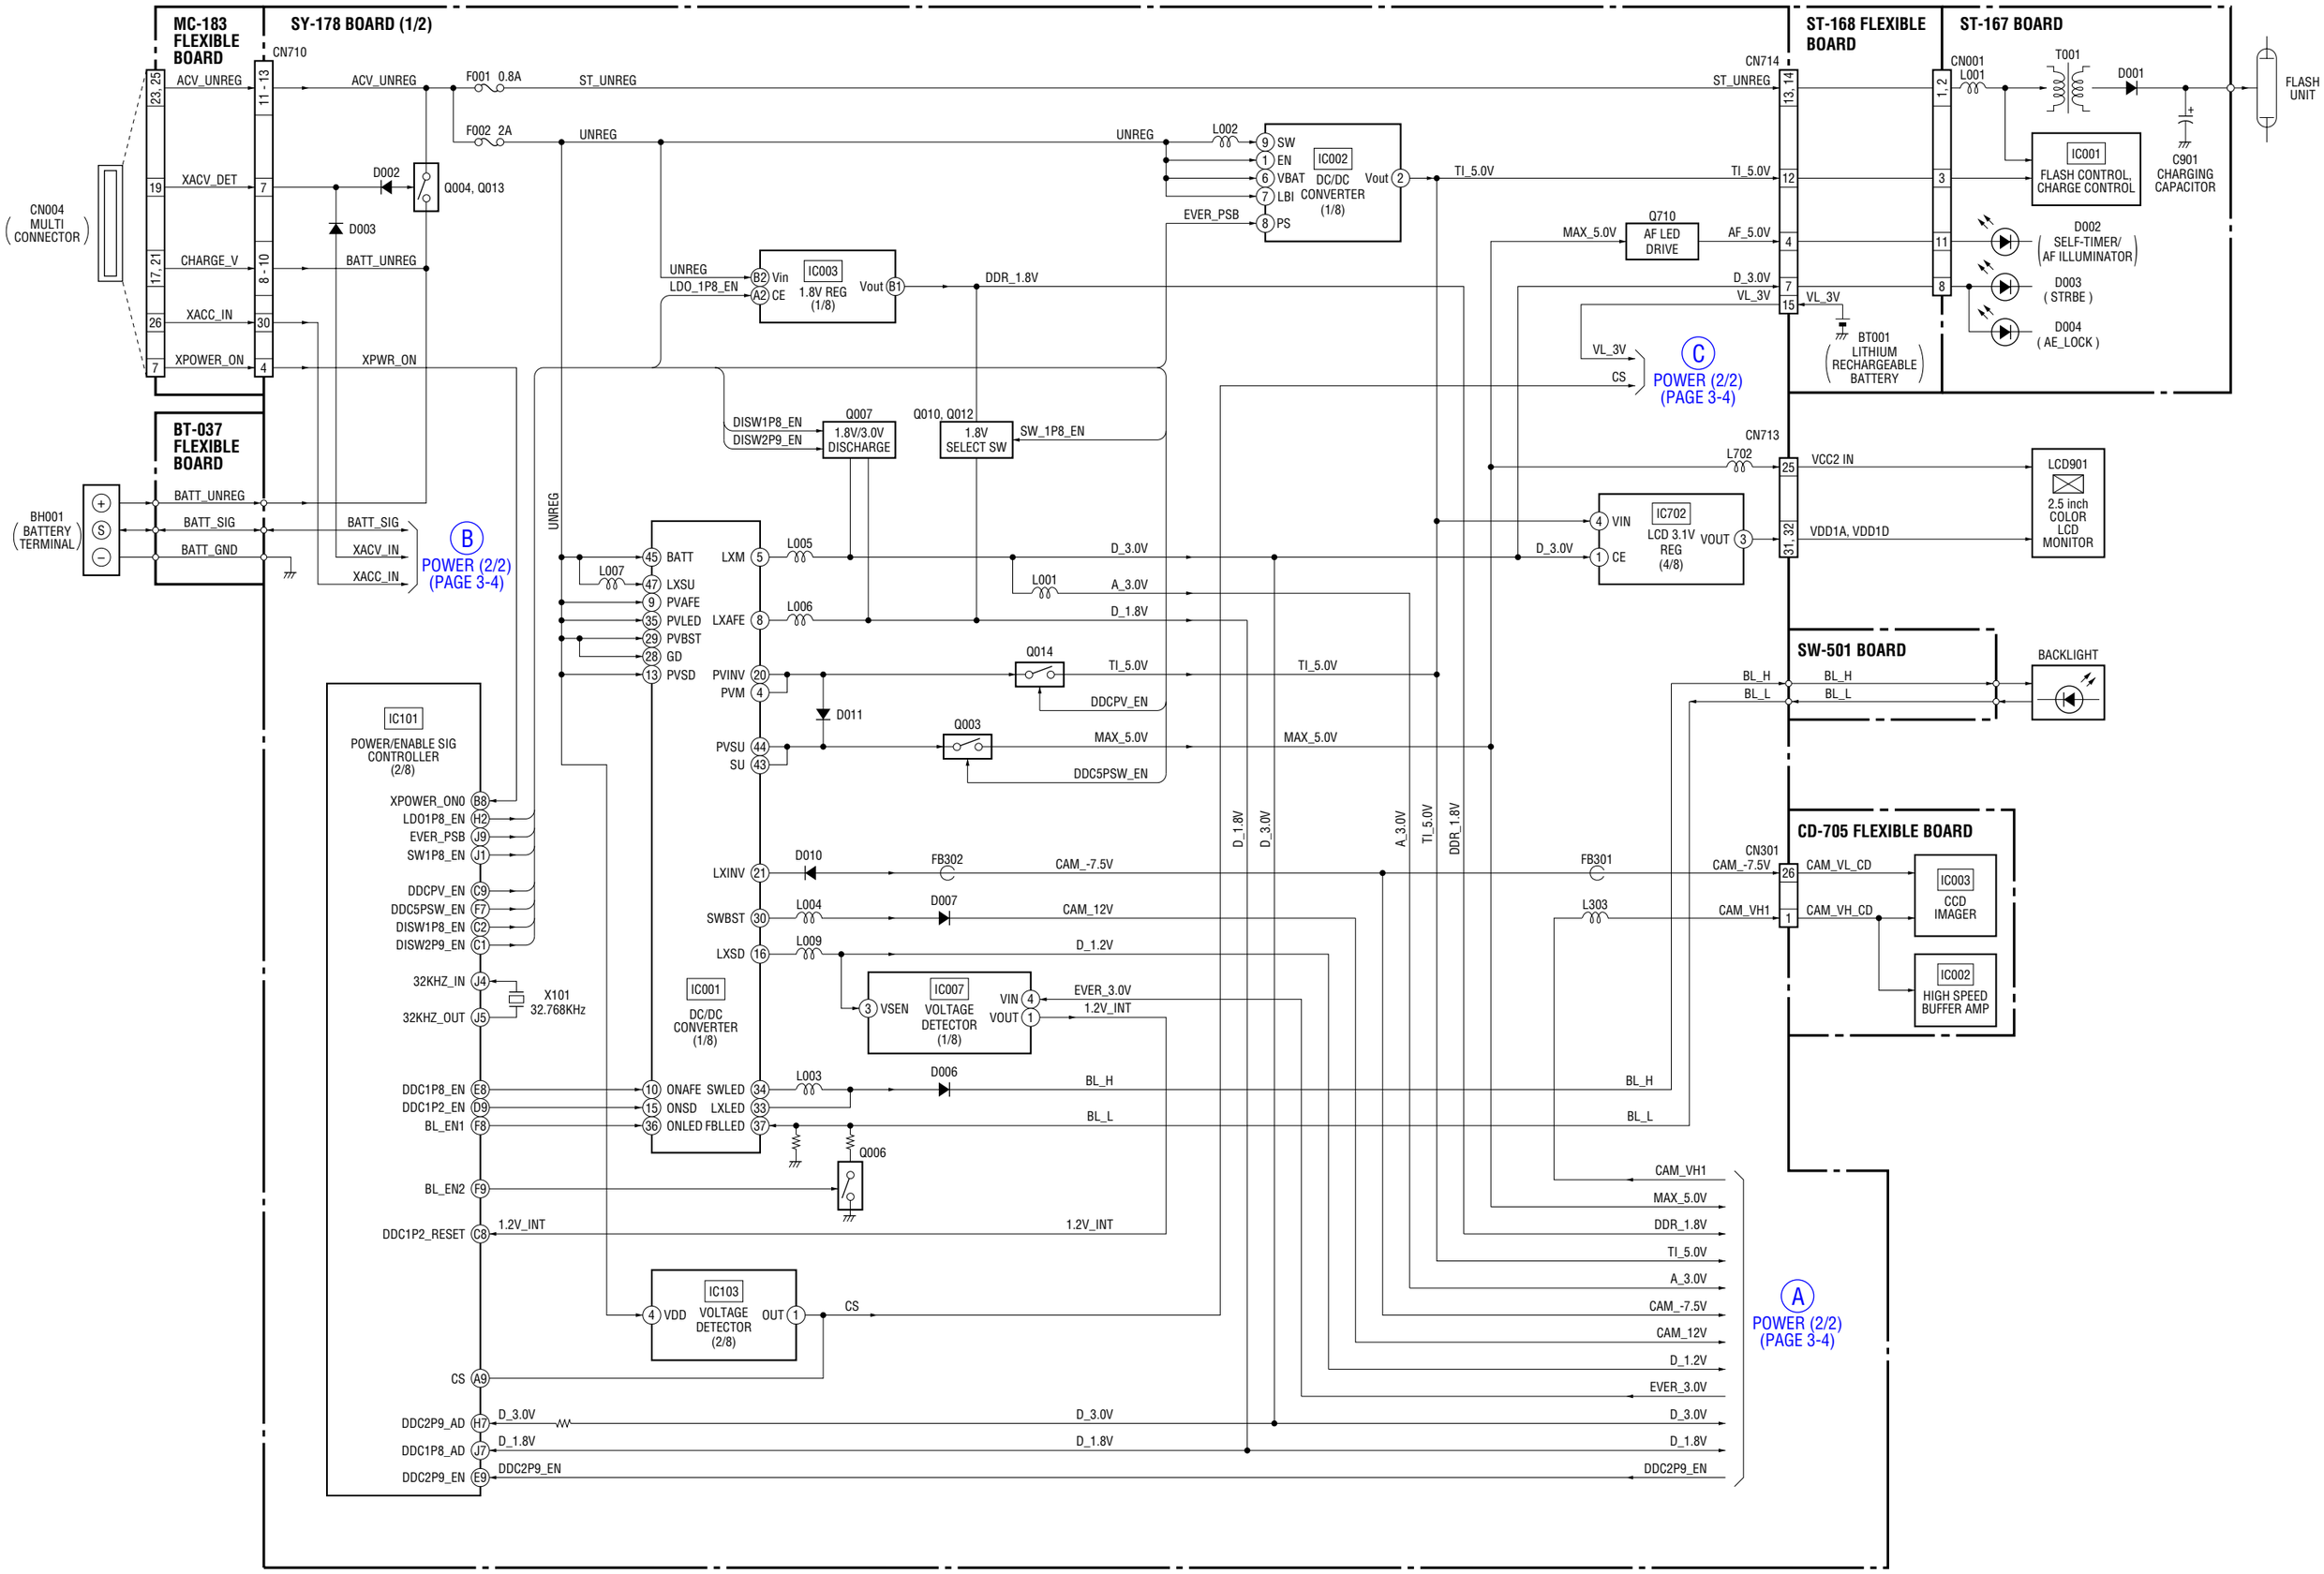

3-4. POWER BLOCK DIAGRAM (2/2)

( ) : Number in parenthesis ( ) indicates the division number of schematic diagram where the component is located.

SY-178 BOARD (2/2)

TI_5.0V
EVER_3.0V
IC102 BACKUP POWER REG (2/8)
VIN (7) VOUT (8) VCH (2) CS (4)
D101
VL_3V
CS
C POWER (1/2) (PAGE 3-3)

TI_5.0V
DDC2P9_EN
IC305 3.5V REG (5/8)
VIN (4) CE (1) VOUT (3)
CAM_3.5V
Q304 3.5V DISCHARGE
XDD_SYS_RST
D11, M4

D_3.0V
IC302 2.3V REG (5/8)
VIN (4) VOUT (3)
HVDD1, HVDD2

D_3.0V
IC303 2.8V REG (5/8)
VIN (6) VOUT (4)
2.8V
L301
L302
D_3.0V

CAM_12V
IC304 12V REG (5/8)
Vin (5) Vcnt (1) Vout (4)
FB303
CAM_12V

CAM_VH1

CAM_-7.5V
Q303 -7.5V DISCHARGE
CAM_-7.5V

IC301 CCD SIGNAL PROCESS TIMING GENERATOR (5/8)

D_1.8V
IC202 LOW POWER CLOCK GEN (4/8)
VDD (8) VDDO (6) VDDO (4)

D_3.0V
D_3.0V
D_3.0V

IC201 DSC CONTROL (3/8)
D_3.0V
VDD AVREF (D2, B4, A5, E1)
TXRX (E4)
BATT_SIG
XACC_IN
XACV_IN

B POWER (1/2) (PAGE 3-3)

RL-076 BOARD
CN707
5
D101 (POWER)
D_3.0V

LENS BLOCK
CN402
D_3.0V
16 Z_BOX2_PI_SENS_VCC
13 Z_BOX1_PI_SENS_VCC
21 Z_PI_SENS_VCC
19 F_PI_SENS_VCC
ZOOM SENSOR
FOCUS SENSOR

Q401
D_3.0V

A POWER (1/2) (PAGE 3-3)

CAM_3.5V

MAX_5.0V
MAX_5.0V
IC503 OPTICAL IMAGE STABILIZATION DRIVE (7/8)
D_3.0V

IC401 LENS DRIVER (6/8)
MAX_5.0V
D_3.0V

D_1.8V
D_1.8V
IC502 1.5V REG (7/8)
VIN (B2) Vcont (A2) VOUT (B1)

L602
A_3.0V
L601
IC601 AUDIO/VIDEO AMP (8/8)

SE501 YAW SENSOR
SE502 PITCH SENSOR

D_1.8V
A_3.0V
IC501 2.8V REG (7/8)
VCONT (A2) VIN (B2) VOUT (B1)

IC506 PITCH/YAW SENSOR AMP (7/8)
D_3.0V

D_3.0V
Q706
CN704
MEMORY STICK DUO

XZM_RST_LED
MS_PWR_ON
J8 GPE_03
GPE_15 T7 MS_PWR_ON
XACV_IN K8 GPE_05
XACC_IN G9 GPE_06
D_3.0V
AU_AVCC

IC211 CAMERA DSP, LENS CONTROL, MODE CONTROL, FRONT CONTROL, (3/8, 4/8)

FB283
FB282
D_1.8V
D_1.8V_DDR
D_1.8V
A_3.0V
L241
A_3.0V
L242
Q242, Q243, Q244 Y/PB/PR MUTE
Q241
XHD_EN V7 GPS_11
L211
CAM_3.5V
AA5 VBUS
Y5 USB_ID
D_1.2V
DDR_1.8V
FB281

4-1. FRAME SCHEMATIC DIAGRAM

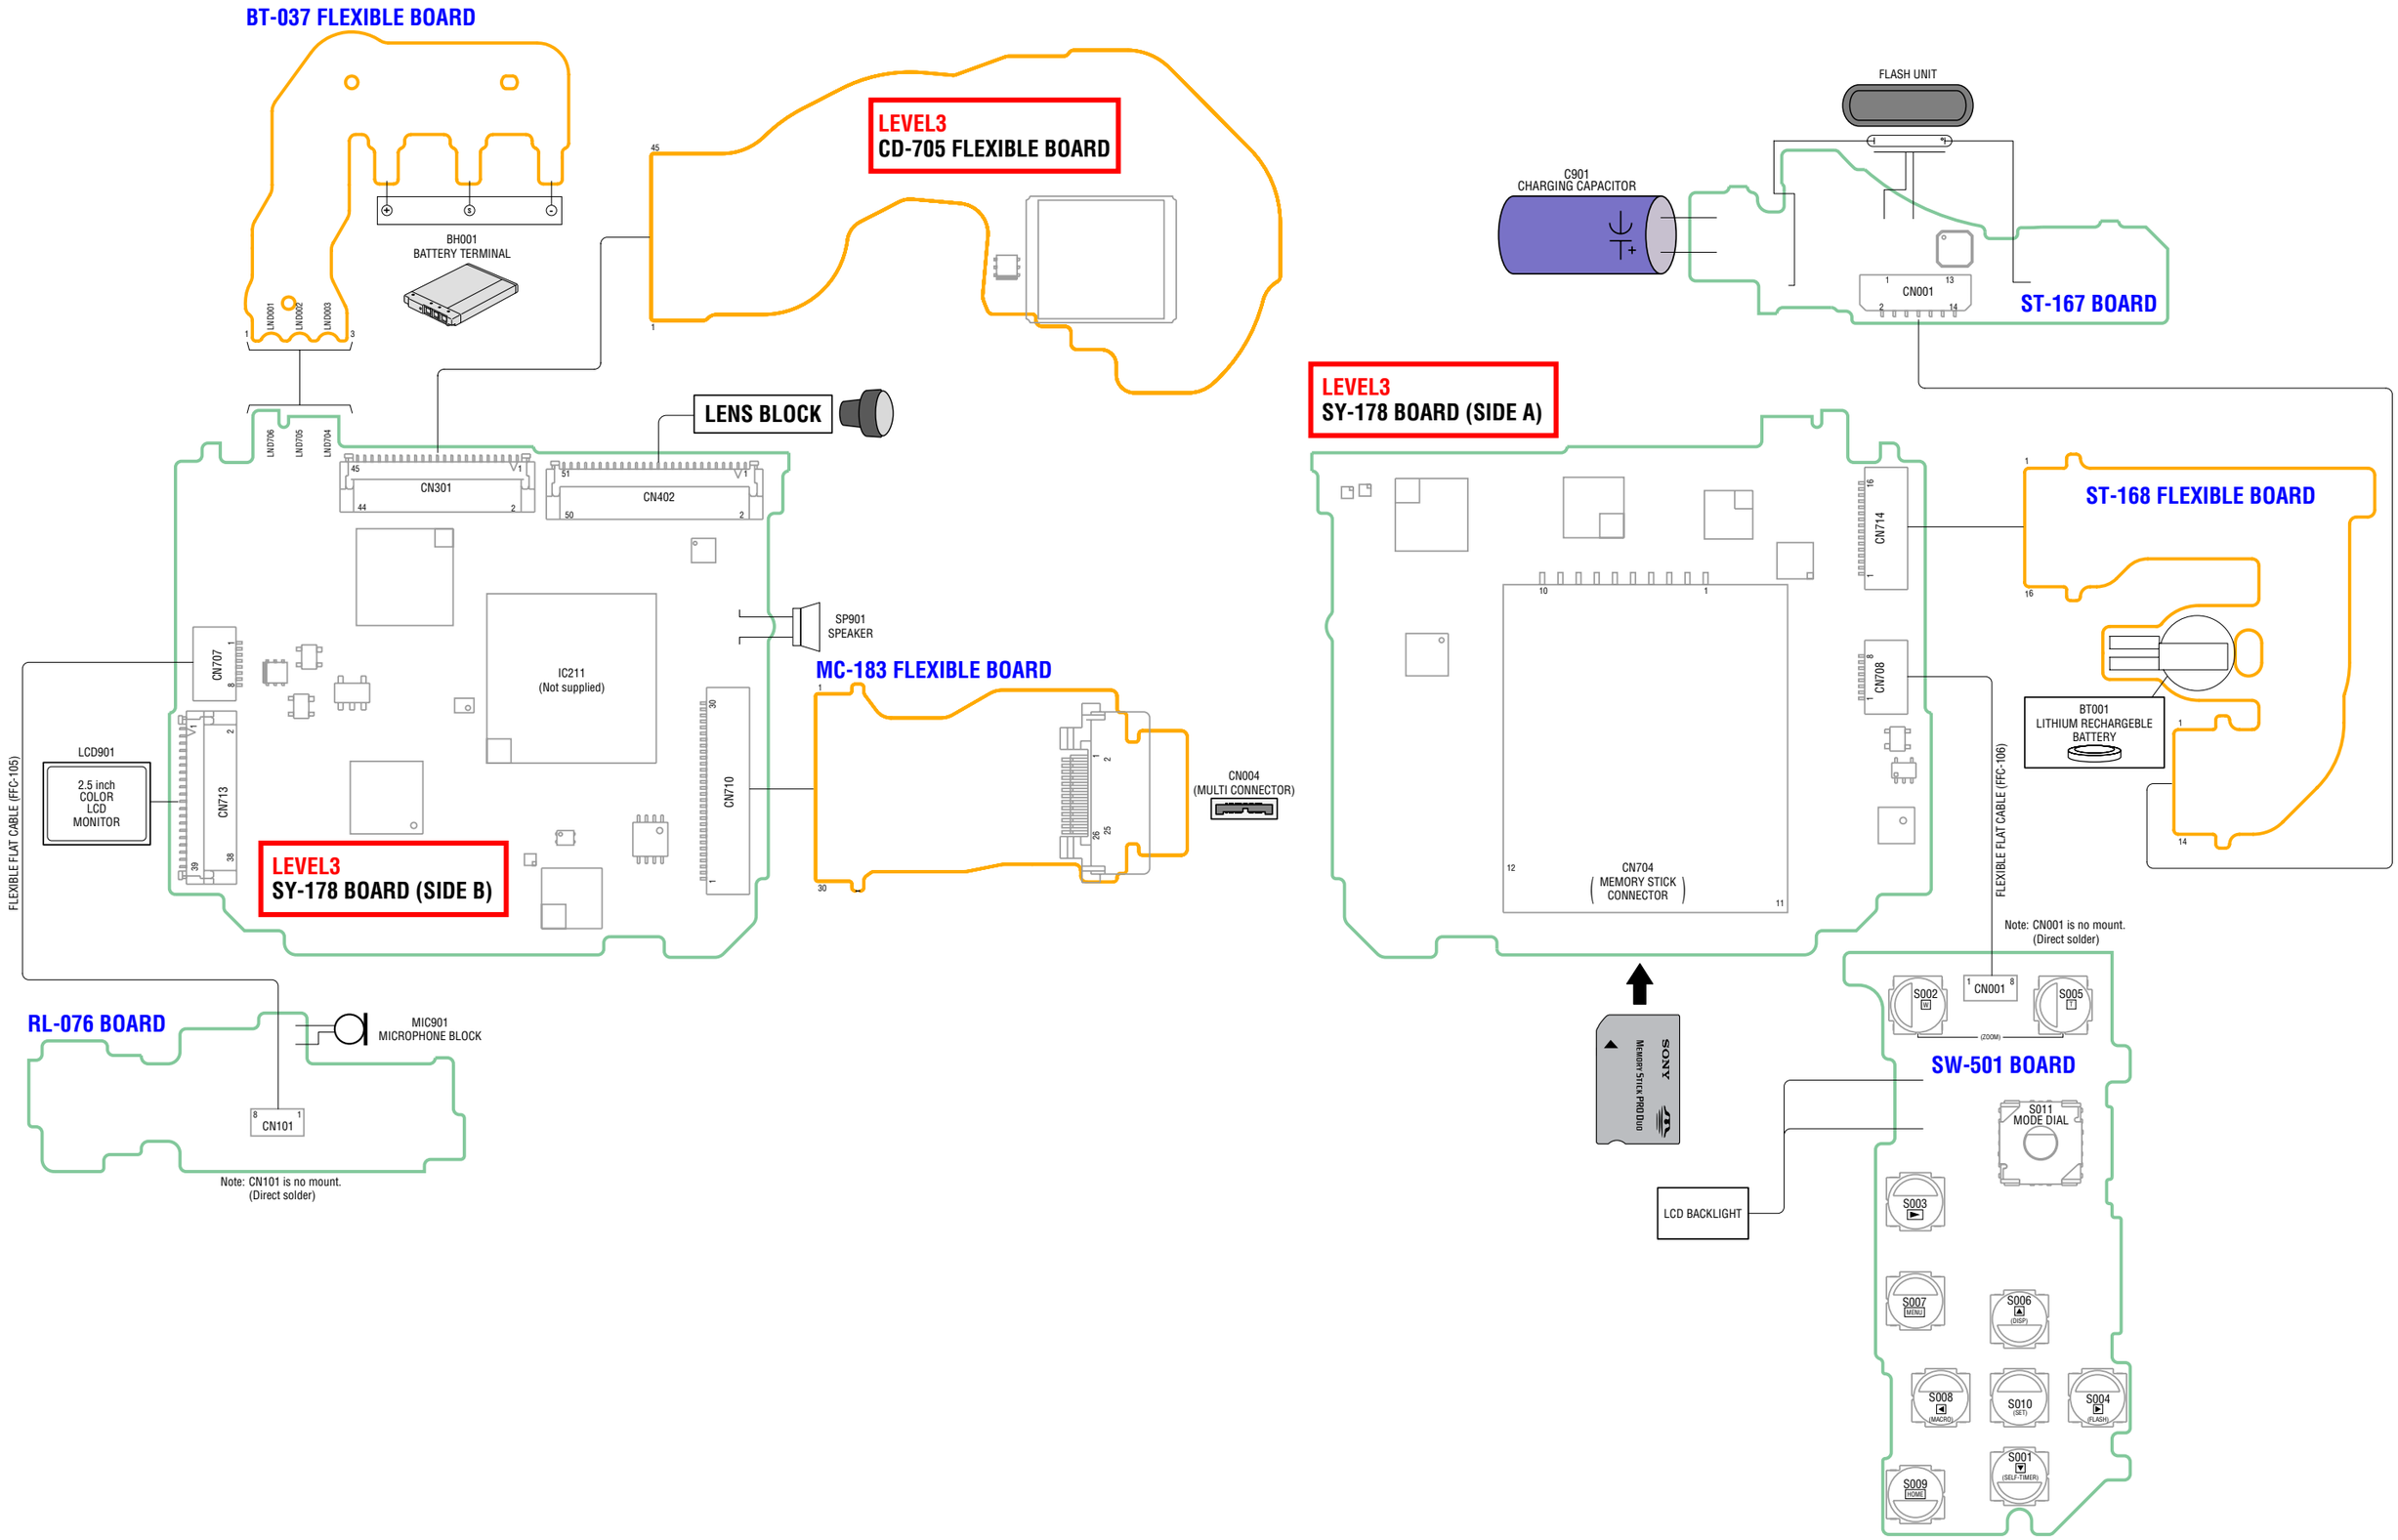

4-2. SCHEMATIC DIAGRAMS

Link

- MC-183 FLEXIBLE BOARD (MULTI CONNECTOR)
- ST-167 BOARD (FLASH DRIVE)
- SW-501 BOARD (CONTROL SWITCH)
- RL-076 BOARD (CONTROL SWITCH, MIC)
- ST-168 FLEXIBLE BOARD (BATTERY IN)
- BT-037 FLEXIBLE BOARD (DC-IN)
- COMMON NOTE FOR SCHEMATIC DIAGRAMS

4-2. SCHEMATIC DIAGRAMS

THIS NOTE IS COMMON FOR SCHEMATIC DIAGRAMS
(In addition to this, the necessary note is printed in each block)

(For schematic diagrams)

- All capacitors are in μF unless otherwise noted. pF : μμF. 50 V or less are not indicated except for electrolytics and tantalums.
- Chip resistors are 1/10 W unless otherwise noted. kΩ=1000 Ω, MΩ=1000 kΩ.
- Caution when replacing chip parts.
  New parts must be attached after removal of chip.
  Be careful not to heat the minus side of tantalum capacitor, Because it is damaged by the heat.
- Some chip part will be indicated as follows.

  Example C541 22U TA A — Kinds of capacitor / Case size; L452 10UH 2520 — External dimensions (mm)
- Constants of resistors, capacitors, ICs and etc with XX indicate that they are not used.
  In such cases, the unused circuits may be indicated.
- Parts with ★ differ according to the model/destination.
  Refer to the mount table for each function.
- All variable and adjustable resistors have characteristic curve B, unless otherwise noted.
- Signal name
  XEDIT → $\overline{\text{EDIT}}$ PB/XREC → PB/$\overline{\text{REC}}$
- : non flammable resistor
- : fusible resistor
- : panel designation
- : B+ Line
- : B– Line
- : IN/OUT direction of (+,–) B LINE.
- : adjustment for repair.
- : not use circuit

(Measuring conditions voltage and waveform)

- Voltages and waveforms are measured between the measurement points and ground when camera shoots color bar chart of pattern box. They are reference values and reference waveforms.
  (VOM of DC 10 MΩ input impedance is used)
- Voltage values change depending upon input impedance of VOM used.)

Precautions for Replacement of Imager

- If the imager has been replaced, carry out all the adjustments for the camera section.
- As the imager may be damaged by static electricity from its structure, handle it carefully like for the MOS IC.
  In addition, ensure that the receiver is not covered with dusts nor exposed to strong light.

1. Connection

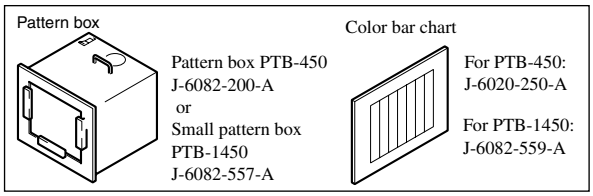

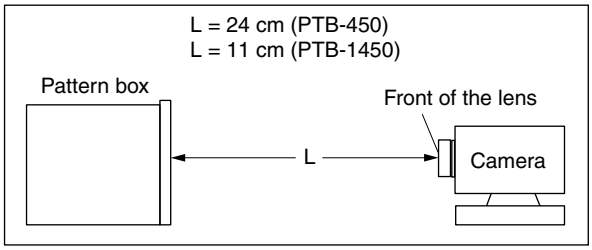

2. Adjust the distance so that the output waveform of Fig. a and the Fig. b can be obtain.

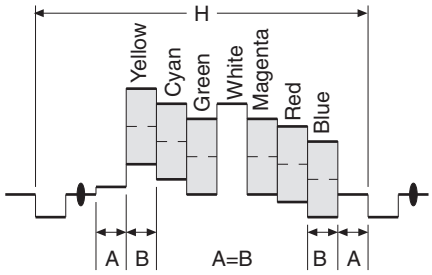

Fig. a (Video output terminal output waveform)

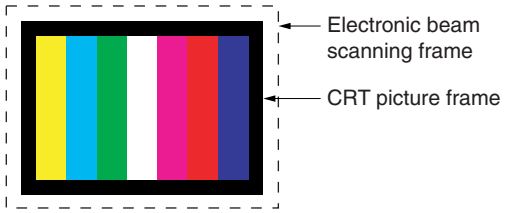

Fig.b (Picture on monitor TV)

When indicating parts by reference number, please include the board name.

The components identified by mark ⚠ or dotted line with mark ⚠ are critical for safety.
Replace only with part number specified.

Les composants identifiés par une marque ⚠ sont critiques pour la sécurité.
Ne les remplacer que par une pièce portant le numéro spécifie.

Schematic diagrams of the CD-705 flexible board and the SY-178 board are not shown.
Pages from 4-3 to 4-11 are not shown.

MC-183 FLEXIBLE BOARD

MULTI CONNECTOR

Note: CN004 (multi connector) is not supplied,
but this is included in MC-183 flexible complete board.

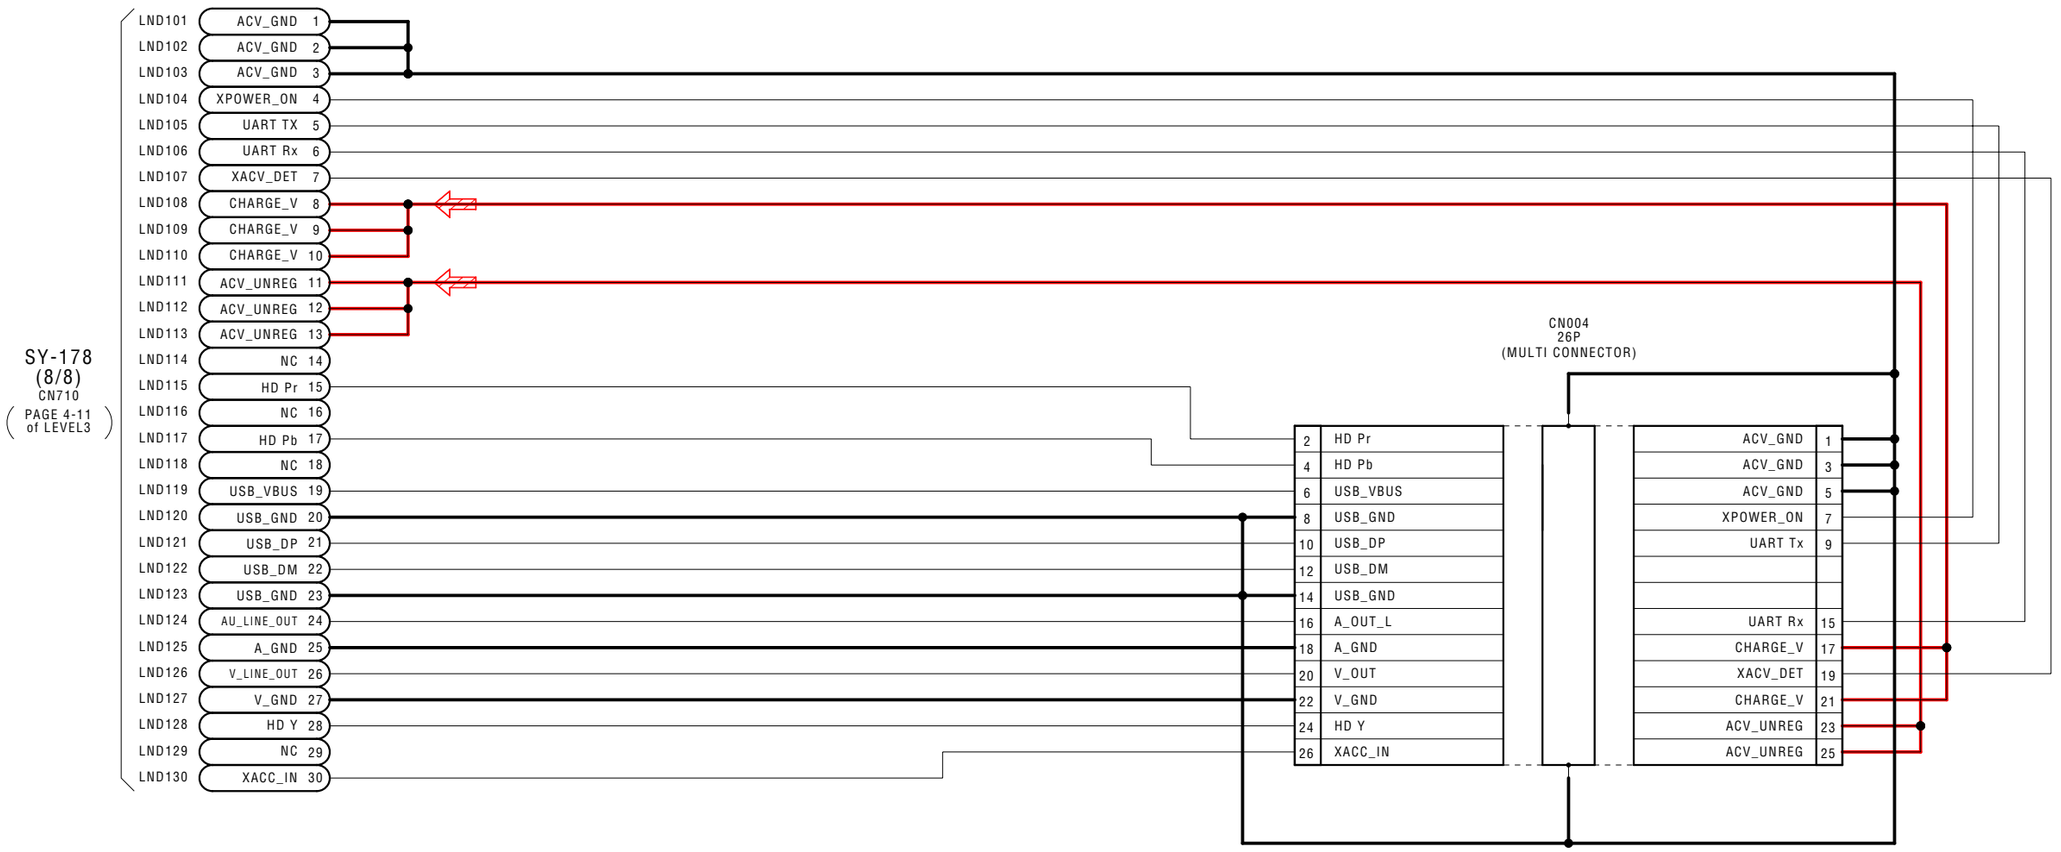

08

SW-501 BOARD

CONTROL SWITCH

XX MARK:NO MOUNT

Note :CN001 is not mounted. Flexible flat cable (FFC-106) is soldered to this location instead.

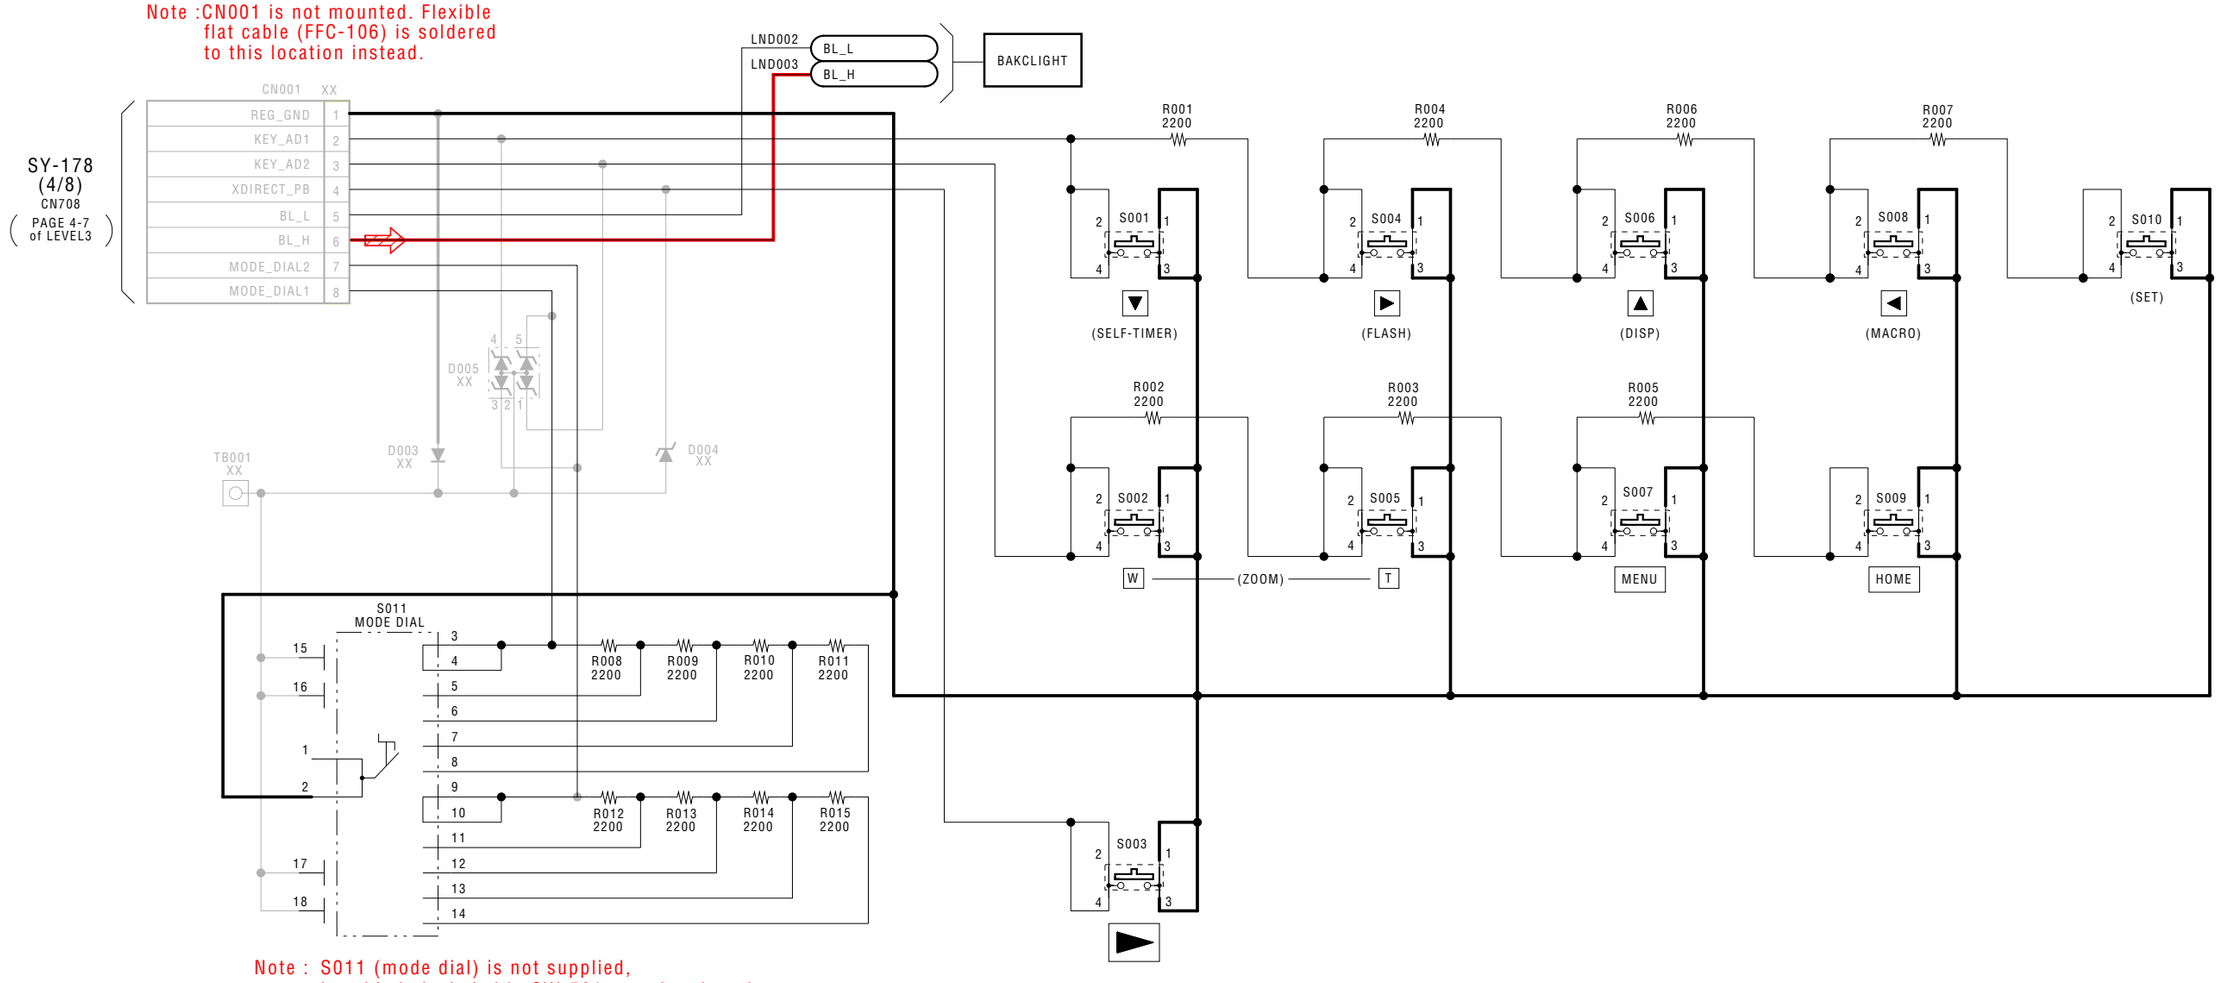

Note : S011 (mode dial) is not supplied, but this is included in SW-501 complete board.

• Refer to page 4-2 for mark ⚠.

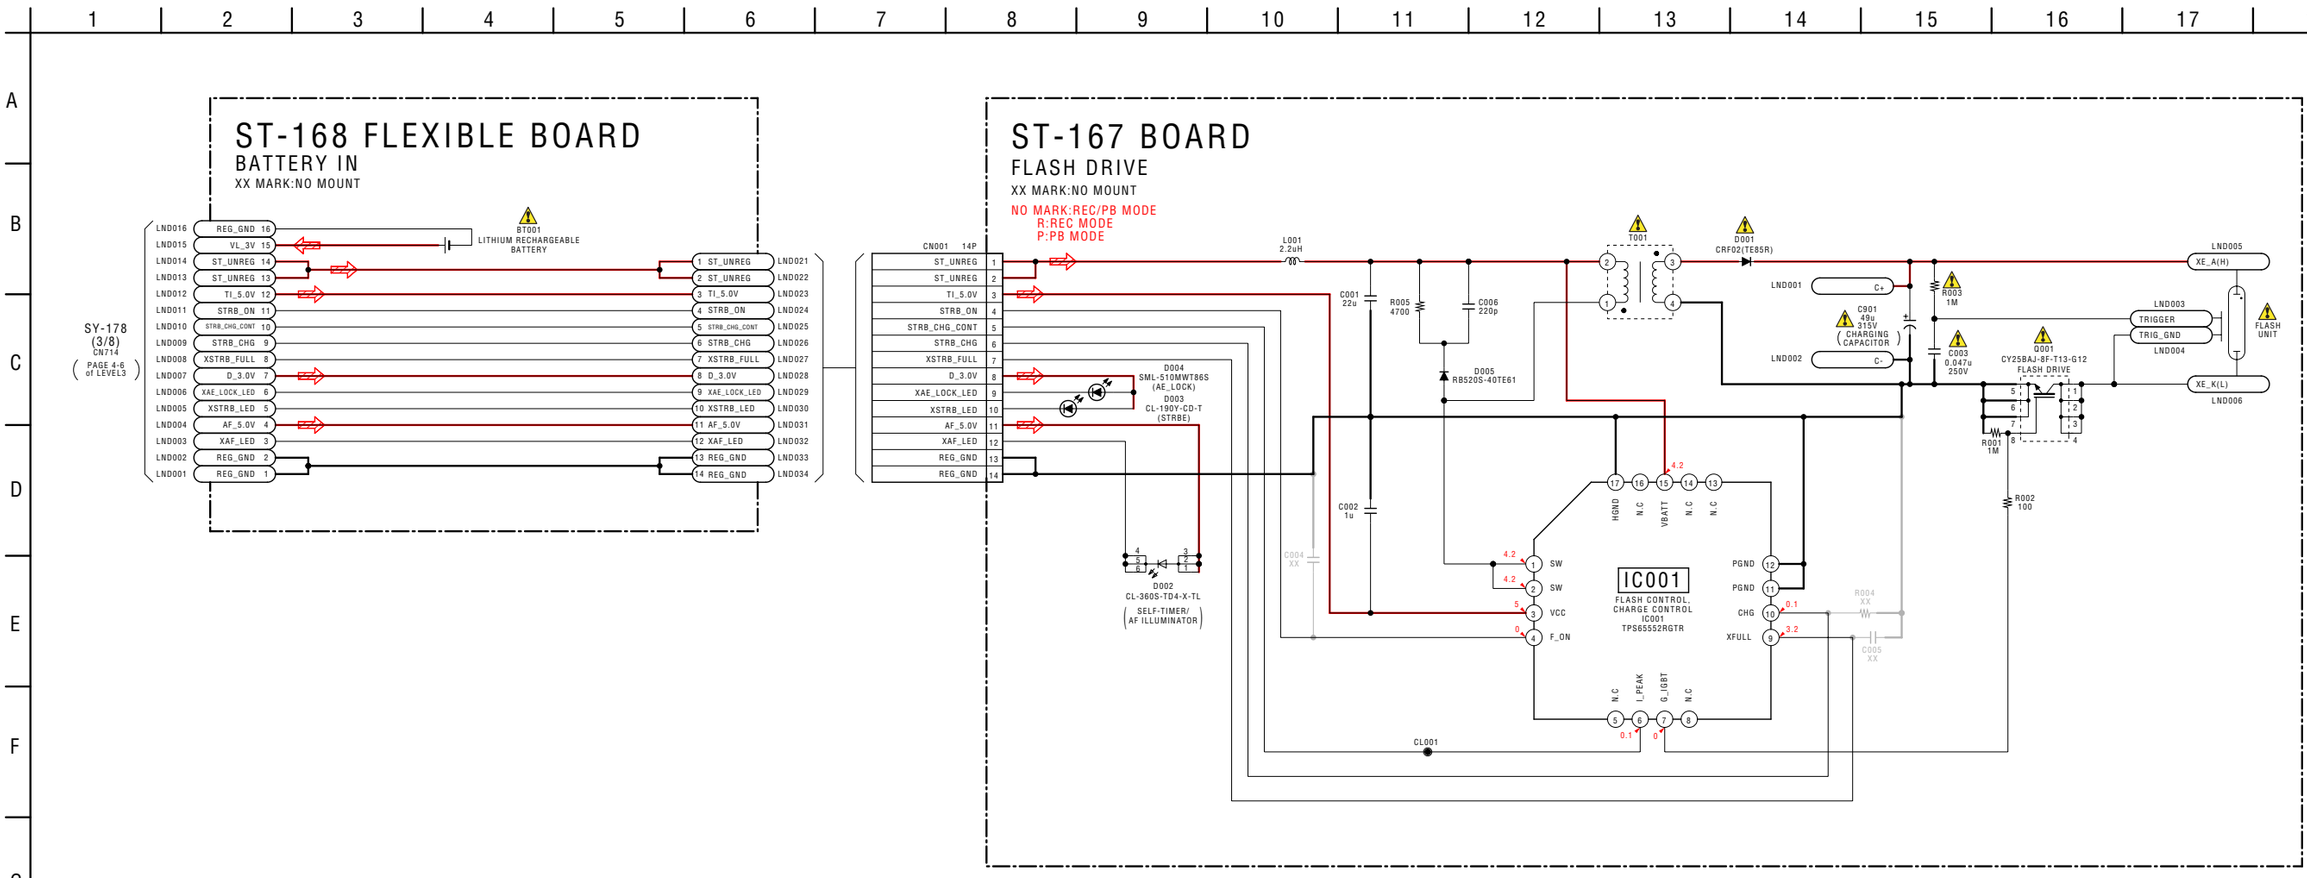

• Refer to page 4-2 for mark ⚠.

RL-076 BOARD

CONTROL SWITCH, MIC

XX MARK:NO MOUNT

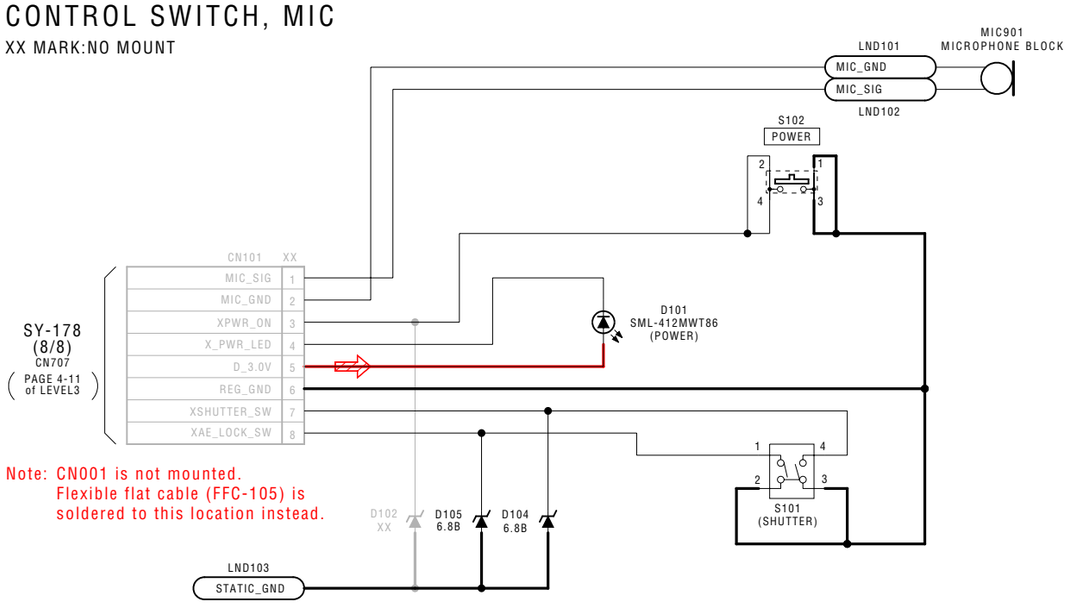

Note: CN001 is not mounted.
Flexible flat cable (FFC-105) is
soldered to this location instead.

08

BT-037 FLEXIBLE BOARD

DC-IN

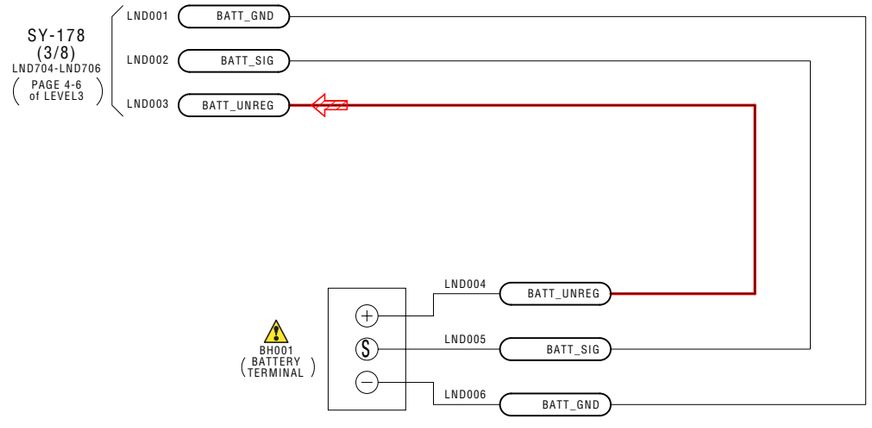

08

4-3. PRINTED WIRING BOARDS

Link

- MC-183 FLEXIBLE BOARD
- ST-167 BOARD
- SW-501 BOARD
- RL-076 BOARD
- ST-168 FLEXIBLE BOARD
- BT-037 FLEXIBLE BOARD
- COMMON NOTE FOR PRINTED WIRING BOARDS
- MOUNTED PARTS LOCATION

4-3. PRINTED WIRING BOARDS

THIS NOTE IS COMMON FOR PRINTED WIRING BOARDS

- : Uses unleaded solder.
- : Circuit board
  : Flexible board
  Pattern from the side which enables seeing.
  : pattern of the rear side
  (The other layers' patterns are not indicated)
- Through hole is omitted.
- Circled numbers refer to waveforms.
- There are a few cases that the part printed on diagram isn't mounted in this model.
- : panel designation

- Chip parts.

Transistor

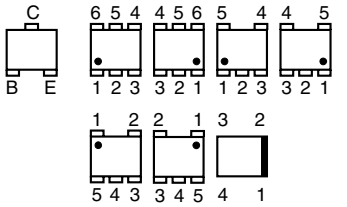

Diode

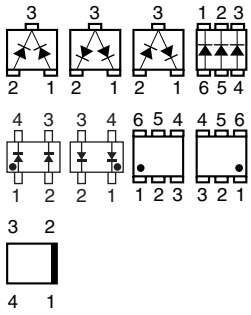

Printed wiring boards of the CD-705 flexible board and the SY-178 board are not shown.
Pages 4-17 and 4-19 are not shown.

MC-183 (2 layers), SW-501 (2 layers)

: Uses unleaded solder.

MC-183 FLEXIBLE BOARD

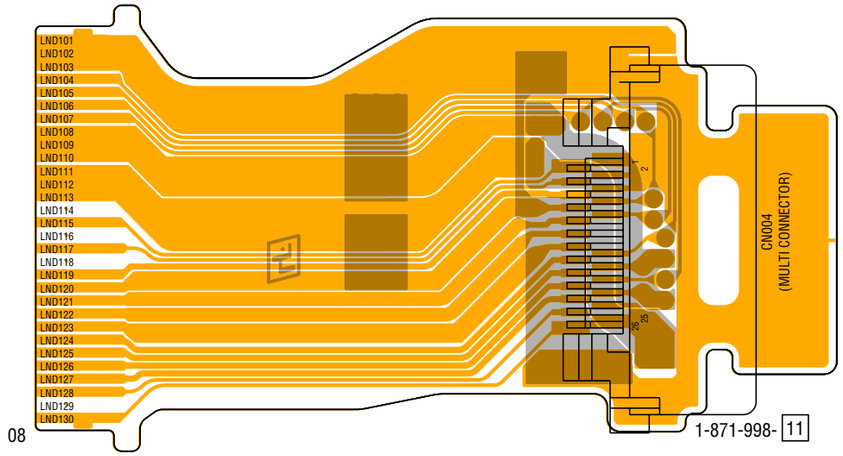

Note: CN004 (multi connector) is not supplied,
but this is included in MC-183 flexible complete board.

SW-501 BOARD

Note: S011 (mode dial) is not supplied,
but this is included in SW-501 complete board.

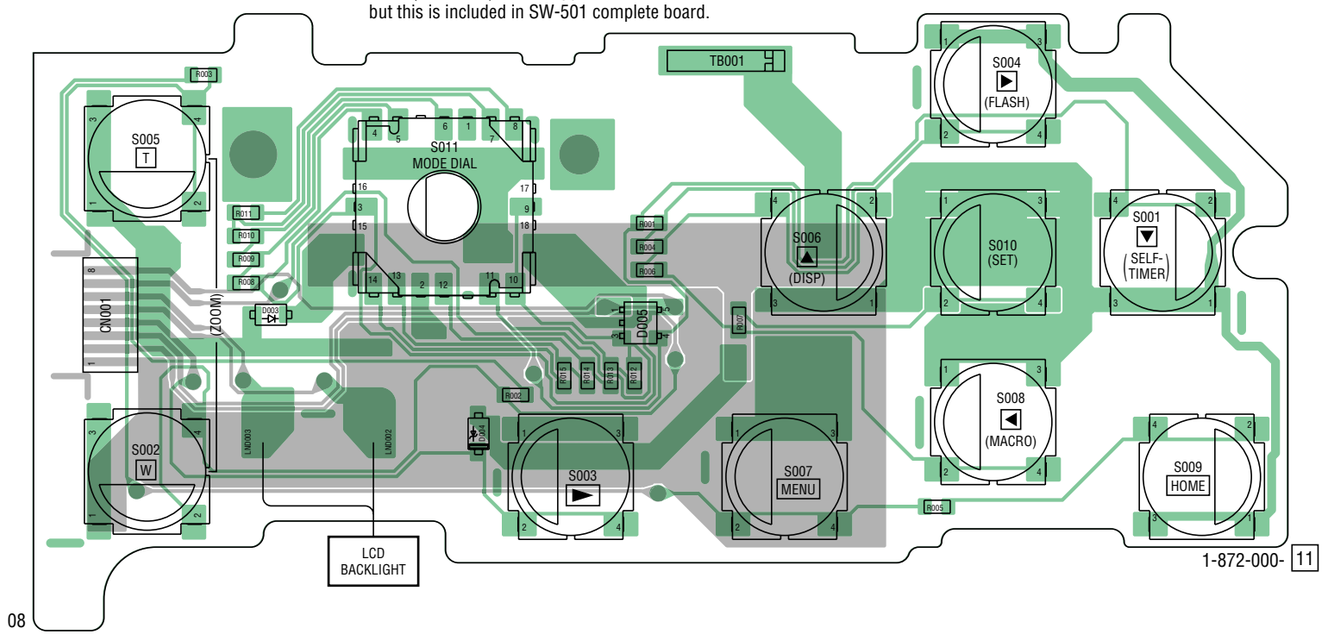

Note: CN001 is not mounted. Flexible flat cable (FFC-106)
is soldered to this location instead.

: Uses unleaded solder.

ST-168 FLEXIBLE BOARD

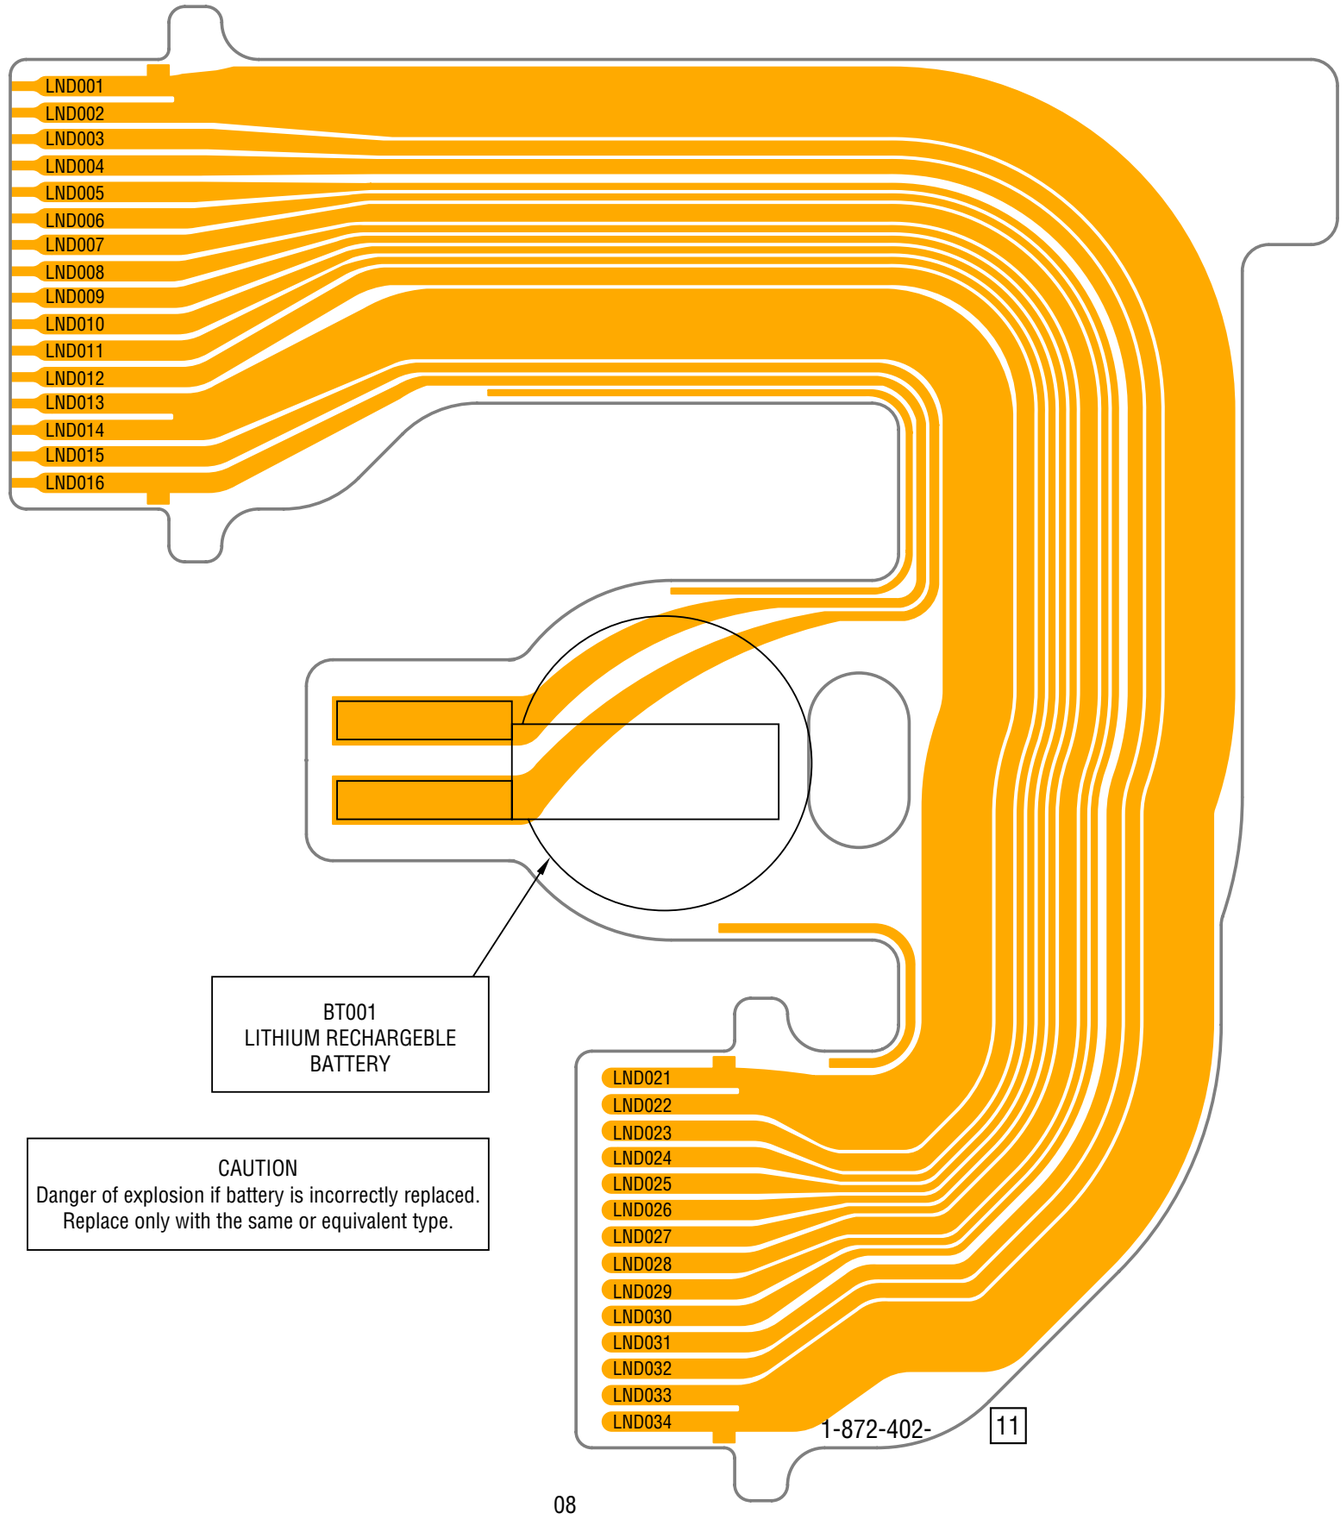

ST-167 (4 layers)

: Uses unleaded solder.

ST-167 BOARD (SIDE A)

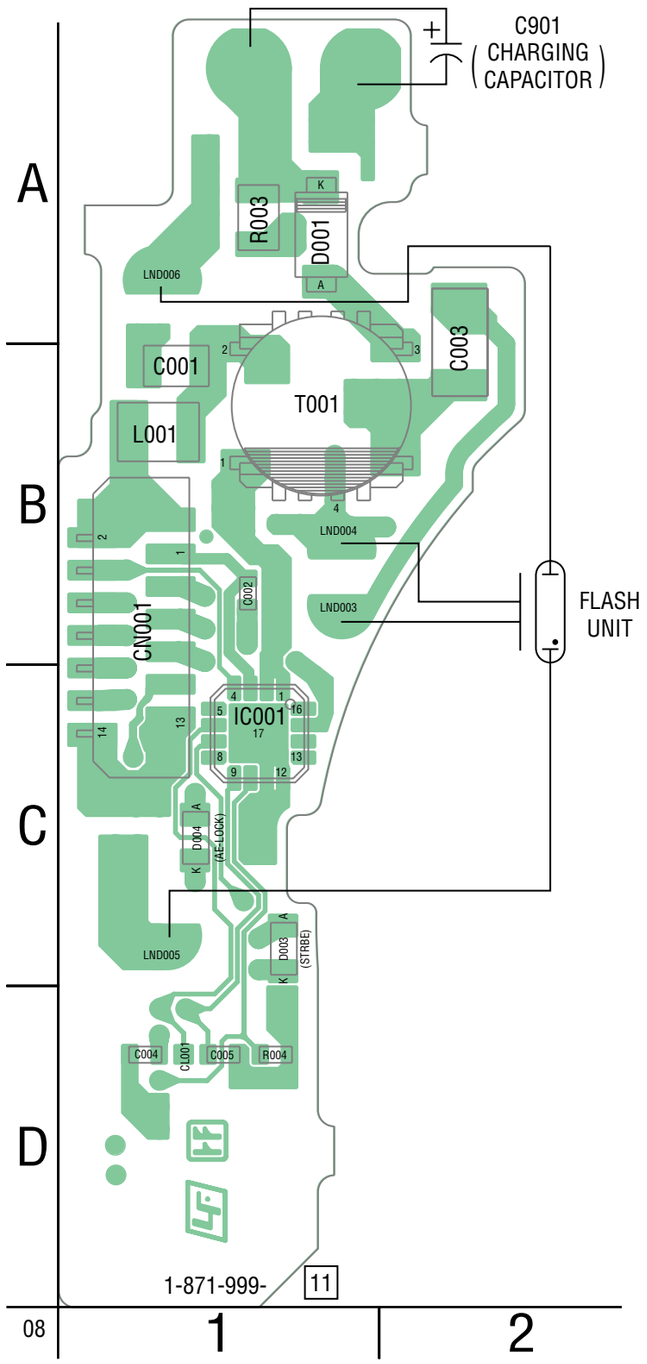

ST-167 BOARD (SIDE B)

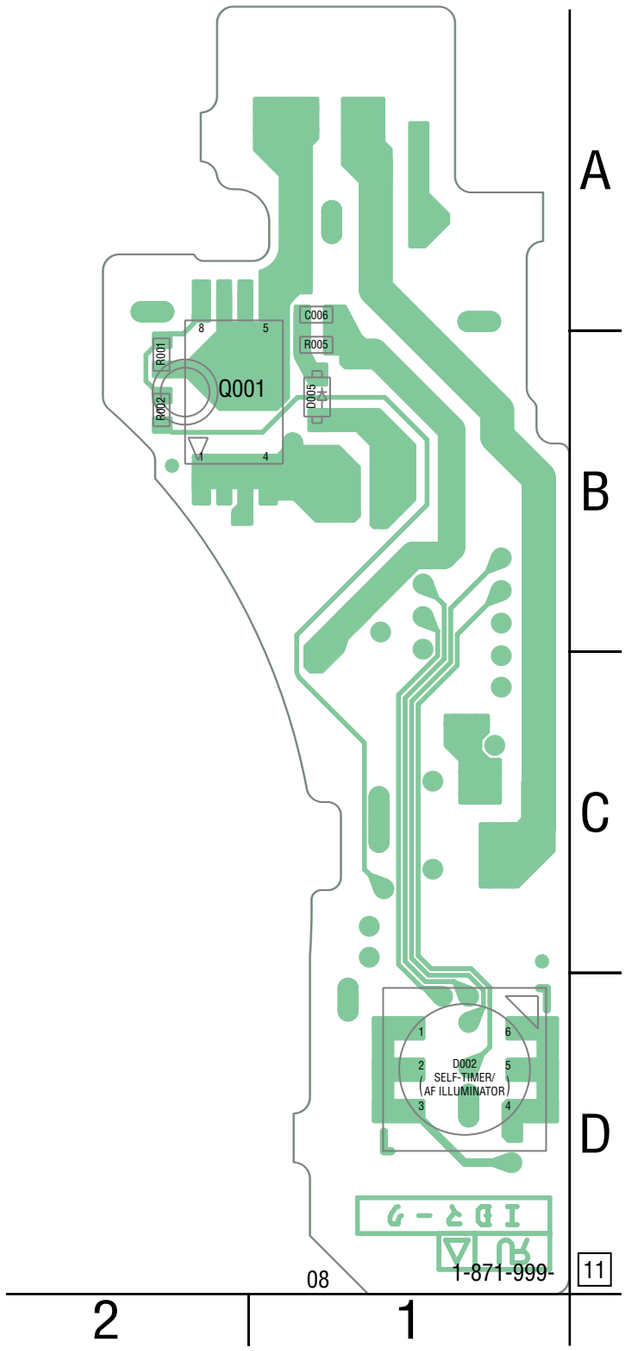

RL-076 (2 layers), BT-037 (1 layer)

: Uses unleaded solder.

RL-076 BOARD

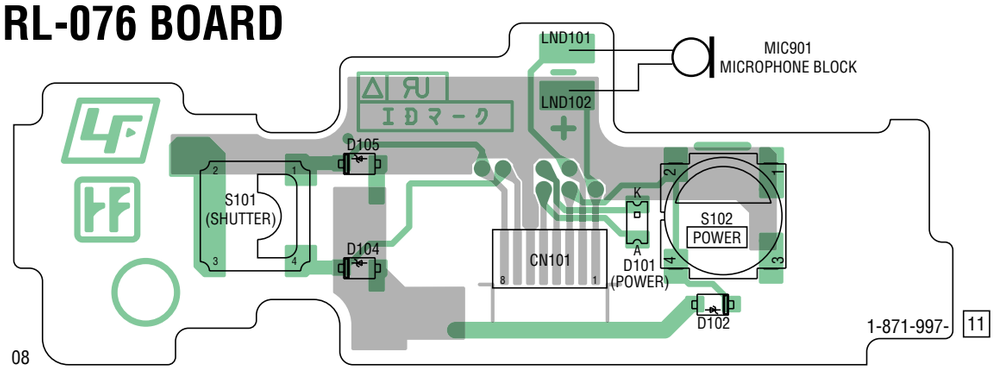

Note: CN101 is not mounted.
Flexible flat cable (FFC-105)
is soldered to this location instead.

BT-037 FLEXIBLE BOARD

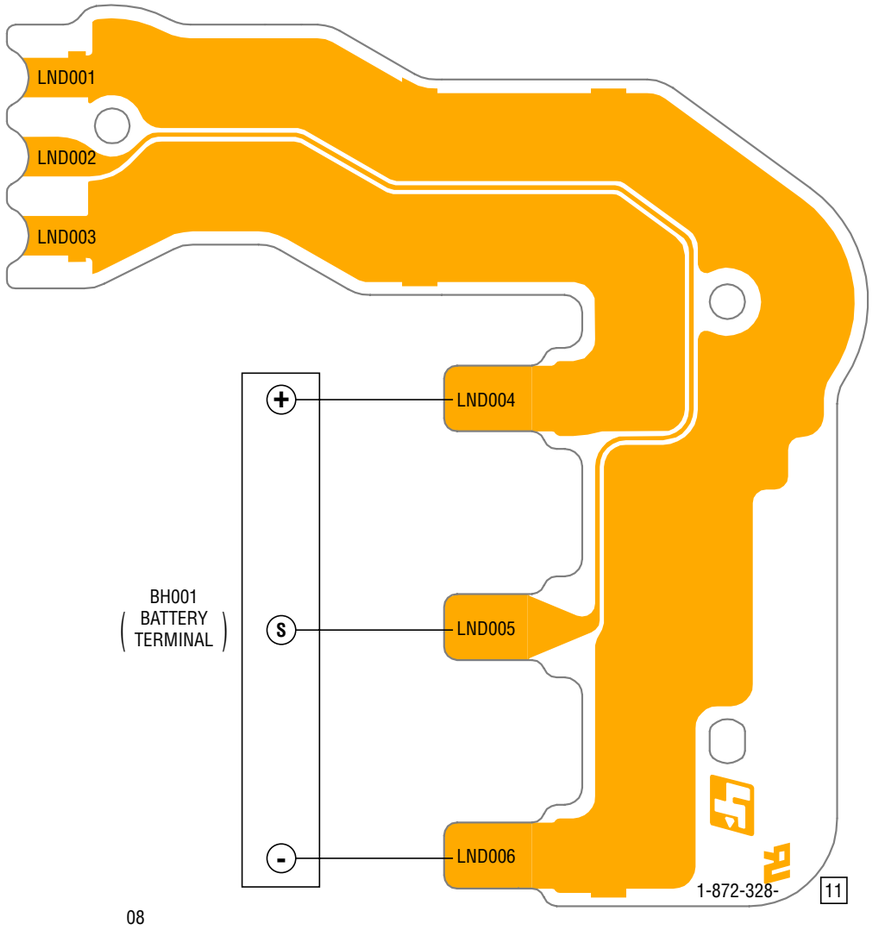

Note: BH001 is not supplied, but this is included
in BT-037 flexible complete board.

Mounted parts location of the SY-178 board is not shown.
Page 4-24 to 4-25 are not shown.

4-4. MOUNTED PARTS LOCATION

no mark : side A
* mark : side B

ST-167 BOARD

	C001	B-1
	C002	B-1
	C003	B-2
	C004	D-1
	C005	D-1
*	C006	B-1
	CL001	D-1
	CN001	B-1
	D001	A-1
*	D002	D-1
	D003	C-1
	D004	C-1
*	D005	B-1
	IC001	C-1
	L001	B-1
*	Q001	B-2
*	R001	B-2
*	R002	B-2
	R003	A-1
	R004	D-1
*	R005	B-1
	T001	B-1

NOTE

5. REPAIR PARTS LIST

NOTE: Characters A to Z of the electrical parts list indicate location of exploded views in which the desired part is shown.

Link

EXPLODED VIEWS

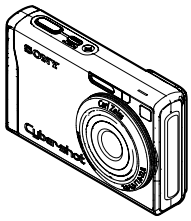

A

OVERALL SECTION

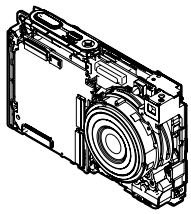

B

LCD SECTION

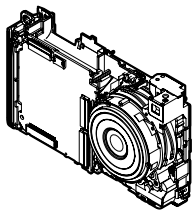

C

MAIN SECTION

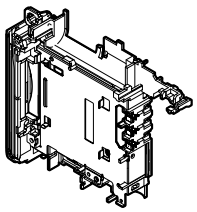

D

BATTERY HOLDER SECTION

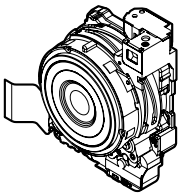

E

LENS SECTION

Link

ELECTRICAL PARTS LIST

ACCESSORIES

BT-037 FLEXIBLE BOARD C	RL-076 BOARD B	ST-168 FLEXIBLE BOARD B
MC-183 FLEXIBLE BOARD C	ST-167 BOARD B	SW-501 BOARD B

5. REPAIR PARTS LIST

NOTE:

- -XX, -X mean standardized parts, so they may have some differences from the original one.
- Items marked "*" are not stocked since they are seldom required for routine service. Some delay should be anticipated when ordering these items.
- The mechanical parts with no reference number in the exploded views are not supplied.
- Due to standardization, replacements in the parts list may be different from the parts specified in the diagrams or the components used on the set.
- CAPACITORS:
  uF: μF
- COILS
  uH: μH
- RESISTORS
  All resistors are in ohms.
  METAL: metal-film resistor
  METAL OXIDE: Metal Oxide-film resistor
  F: nonflammable
- SEMICONDUCTORS
  In each case, u: μ, for example:
  uA...: μA... , uPA... , μPA... ,
  uPB... , μPB... , μPC... , μPC... ,
  uPD..., μPD...
- Abbreviation
  AR : Argentine model
  AUS : Australian model
  BR : Brazilian model
  CH : Chinese model
  CND : Canadian model
  EE : East European model
  HK : Hong Kong model
  J : Japanese model
  JE : Tourist model
  KR : Korea model
  NE : North European model
  TW : Taiwan model

When indicating parts by reference number, please include the board name.

The components identified by mark ⚠ or dotted line with mark ⚠ are critical for safety.
Replace only with part number specified.

Les composants identifiés par une marque ⚠ sont critiques pour la sécurité.
Ne les remplacer que par une pièce portant le numéro spécifié.

- Color Indication of Appearance Parts
  Example:
  (SILVER) : Cabinet's Color
  (Silver) : Parts Color

5. REPAIR PARTS LIST

DISASSEMBLY | HARDWARE LIST

5-1. EXPLODED VIEWS

5-1-1. OVERALL SECTION

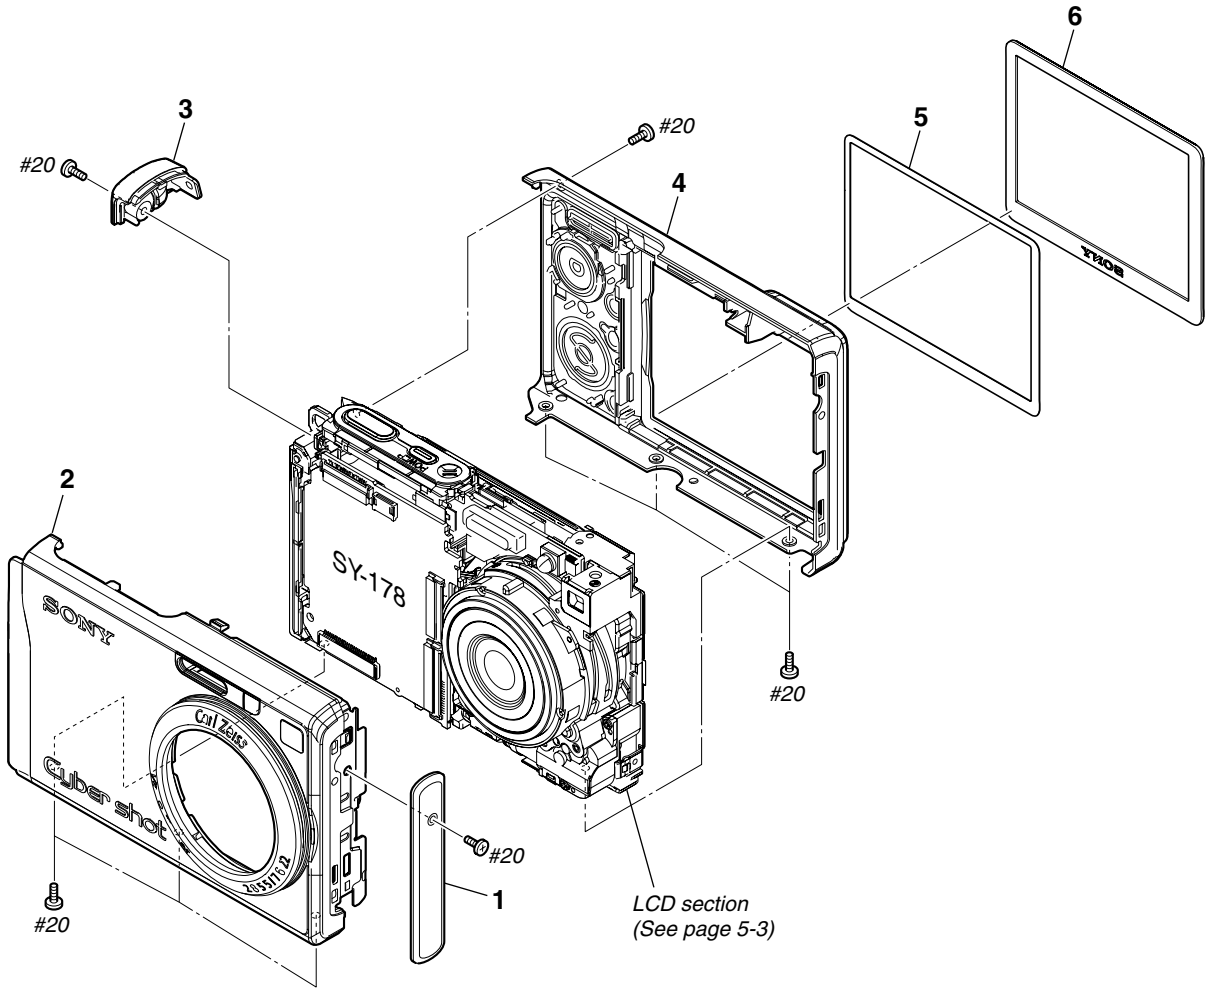

Ref. No.	Part No.	Description
1	3-113-161-01	CABINET, SIDE
2	A-1231-950-A	CABINET (FRONT) BLOCK ASSY
3	3-113-166-01	CABINET, TOP
4	A-1231-949-A	CABINET (REAR) BLOCK ASSY
5	3-113-165-01	SHEET, LCD WINDOW ADHESIVE
6	3-113-158-01	WINDOW, LCD
#20	2-635-591-31	SCREW (M1.4), NEW TRUSTAR P2 (Silver)

5-1-2. LCD SECTION

ns: not supplied

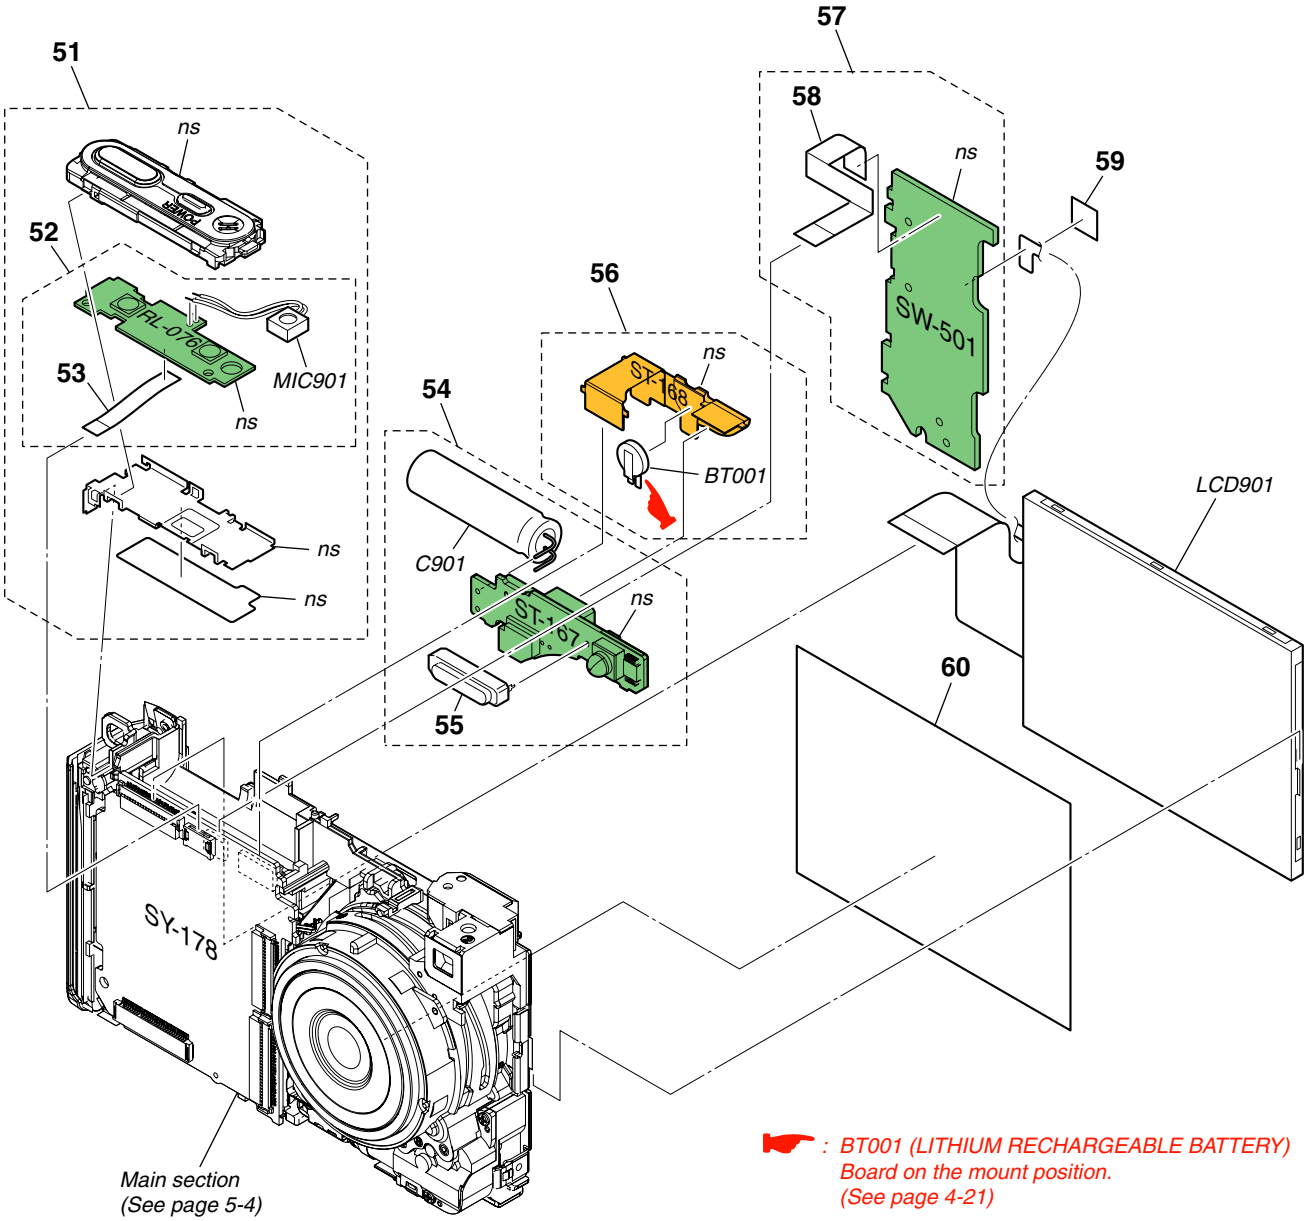

: *BT001 (LITHIUM RECHARGEABLE BATTERY) Board on the mount position. (See page 4-21)*

CAUTION
Danger of explosion if battery is incorrectly replaced.
Replace only with the same or equivalent type.

• Refer to page 5-1 for mark ⚠.

Ref. No.	Part No.	Description
51	A-1231-948-A	RL BLOCK ASSY
52	A-1251-752-A	RL-076 BOARD, COMPLETE
53	1-834-178-11	CABLE, FLEXIBLE FLAT (FFC-105)
54	A-1251-750-A	ST-167 BOARD, COMPLETE
⚠55	1-480-014-11	FLASH UNIT
56	A-1251-753-A	ST-168 FLEXIBLE BOARD, COMPLETE
57	A-1251-751-A	SW-501 BOARD, COMPLETE

Ref. No.	Part No.	Description
* 58	1-834-179-11	CABLE, FLEXIBLE FLAT (FFC-106)
* 59	3-113-167-01	SHEET, BL INSULATING
60	3-197-640-01	LCD LIGHT INTERCEPTION SHEET
⚠BT001	1-756-711-11	LITHIUM RECHARGEABLE BATTERY
*⚠C901	1-114-309-11	CAP, ELECT 49uF 315V
LCD901	8-753-275-76	ACX358AKM-3
MIC901	1-542-721-11	MICROPHONE BLOCK

5-1-3. MAIN SECTION

ns: not supplied

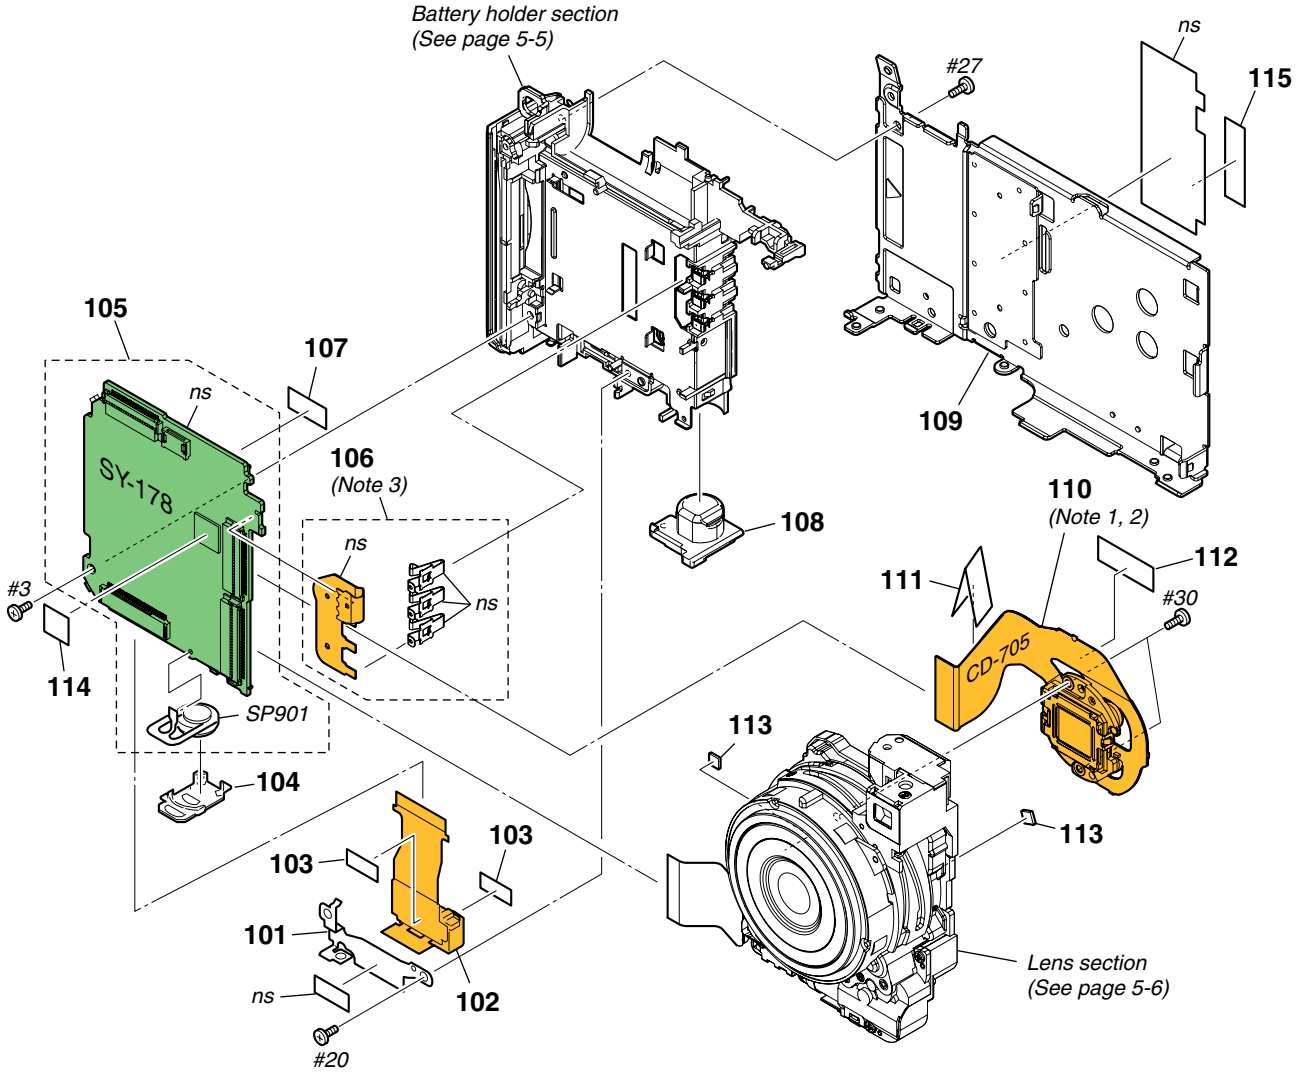

Note 1: CCD block assembly is including CD-705 flexible complete board, and IC003 (CCD imager).

Note 2: Be sure to read "Precuations for Replacement of Imager" on page 4-2 when changing the imager.

Note 3: Refer to HELP "Installation method of the battery terminal board" when changing the BT-037 flexible complete board.

Ref. No.	Part No.	Description
* 101	3-113-157-01	PLATE, MULTI FIXED
102	A-1251-749-A	MC-183 FLEXIBLE BOARD, COMPLETE
* 103	3-217-541-01	MC SPACER
* 104	3-113-160-01	RETAINER, SP
105	A-1283-757-A	SY-178 BOARD, COMPLETE (SERVICE)
106	A-1284-662-A	BT-037 FLEXIBLE BOARD, COMPLETE (SERVICE) (Note 3)
* 107	3-113-163-01	SHEET, ST INSULATING
108	3-113-159-01	SCREW, TRIPOD
109	X-2176-573-1	FRAME ASSY
110	A-1234-356-A	CCD BLOCK ASSY (Note 1, 2)

Ref. No.	Part No.	Description
* 111	3-211-007-01	SHEET (L), CD
* 112	3-217-549-01	SHEET (S), CD COPY
* 113	3-113-164-01	CUSHION, LENS
114	3-099-637-03	LABEL, FUSE
* 115	3-217-539-01	SHEET, LCD FLEXIBLE FIXED
SP901	1-826-614-31	LOUDSPEAKER (1.0CM)
#3	2-660-401-01	SCREW (M1.7), NEW TRU-STAR, P2 (Red)
#20	2-635-591-31	SCREW (M1.4), NEW TRUSTAR P2 (Silver)
#27	2-662-396-11	SCREW (M1.4), NEW, TRUSTAR, P2 (Black)
#30	3-086-156-11	SCREW B1.2 (White)

5-1-4. BATTERY HOLDER SECTION

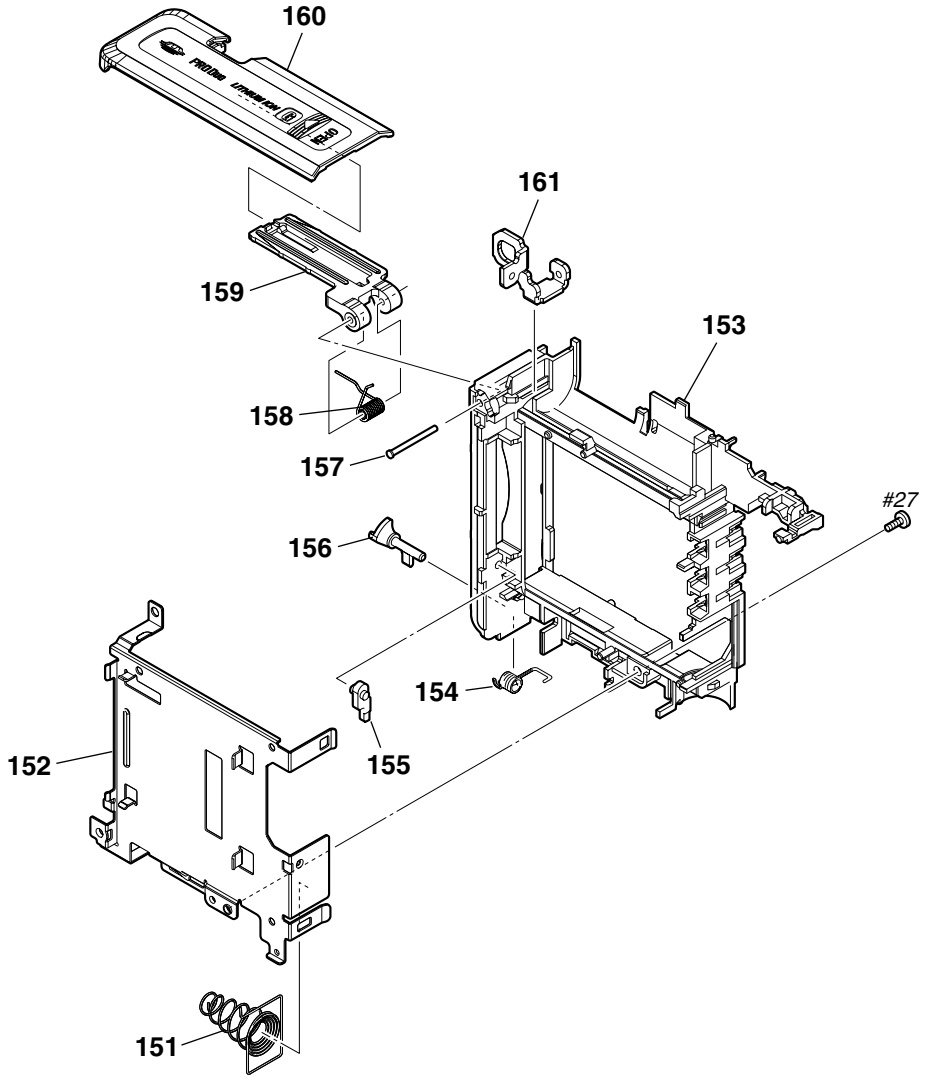

Ref. No.	Part No.	Description
151	3-113-178-01	SPRING, BT DISCHARGE
152	3-113-171-01	FRAME, BT
153	3-113-175-01	HOLDER, BT
154	3-113-177-01	SPRING, BT LOCK
155	3-113-174-01	LIGHT, MS GUIDE,
156	3-113-173-01	CLAW, BT LOCK
157	3-113-172-01	SHAFT, BT
158	3-113-176-01	SPRING, BT HINGE
159	3-113-179-01	PLATE, BT HINGE
160	X-2176-572-1	LID ASSY, BT
161	3-113-170-01	BRACKET, STRAP
#27	2-662-396-11	SCREW (M1.4), NEW, TRUSTAR, P2 (Black)

5-1-5. LENS SECTION

ns: not supplied

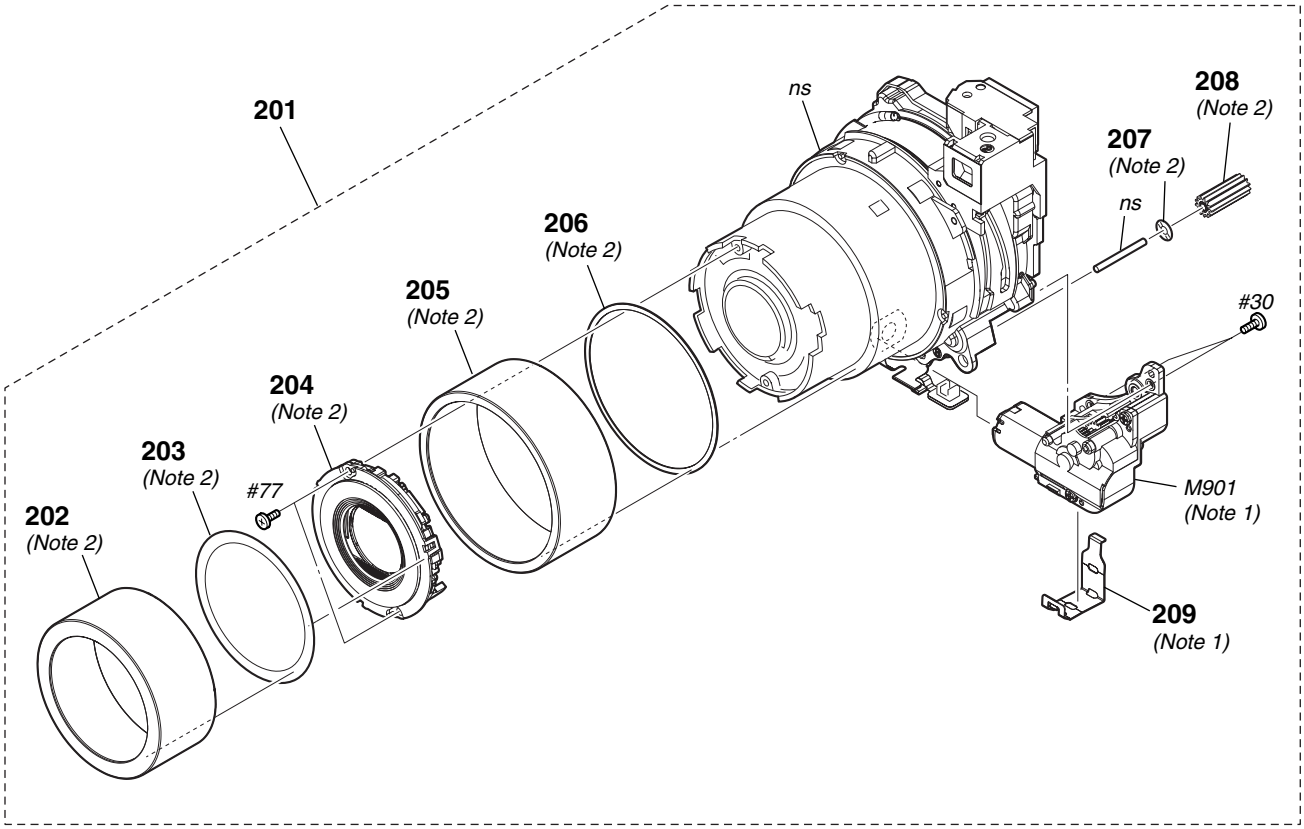

Note 1: Be sure to read “Exchange method of the zoom (1210) gear block assy” on page 2-6.

Note 2: Be sure to read “Exchange method of the barrier assy” on page 2-7.

Ref. No.	Part No.	Description
201	A-1258-806-A	LSV-1210A (SERVICE)
202	2-693-643-01	RING (A), ORNAMENTAL (Note2)
203	2-886-738-01	TAPE, BARRIER (Note2)
204	A-1198-782-A	BARRIER ASSY (Note2)
205	2-693-654-01	RING (B), ORNAMENTAL (Note2)
206	2-693-667-01	RING, LIGHT INTERCEPTION (Note2)

Ref. No.	Part No.	Description
207	2-659-328-02	WASHER,NARUTO (Note2)
208	X-2178-853-1	GEAR, NARUTO(S) (Note2)
209	2-693-674-01	SPRING, FG LEAF (Note1)
M901	1-479-865-11	GEAR BLOCK, ZOOM (1210) (Note1)
#30	3-086-156-11	SCREW B1.2 (White)
#77	3-086-156-31	SCREW B1.2 (Silver)

5-2. ELECTRICAL PARTS LIST

Ref. No.	Part No.	Description
	A-1284-662-A	BT-037 FLEXIBLE BOARD, COMPLETE (SERVICE) **********
		(BH001 is not supplied, but this is included in BT-037 flexible complete board.)
		< BATTERY TERMINAL >
⚠ BH001	(Not supplied)	TERMINAL BOARD, BATTERY

Electrical parts list of the CD-705 flexible board is not shown.
Pages 5-8 is not shown.

• Refer to page 5-1 for mark ⚠.

Ref. No.	Part No.	Description			
	A-1251-749-A	MC-183 FLEXIBLE BOARD, COMPLETE			
		**********			
	(CN004 (multi connector) is not supplied, but this is included in MC-183 flexible complete board.)				
		< CONNECTOR >			
CN004	(Not supplied)	CONNECTOR, MULTIPLE (SOCKET) (MULTI CONNECTOR)			
	A-1251-752-A	RL-076 BOARD, COMPLETE			
		**********			
	1-834-178-11	CABLE, FLEXIBLE FLAT (FFC-105)			
		< DIODE >			
D101	6-501-030-01	DIODE SML-412MWT86 (POWER)			
D104	8-719-083-91	DIODE EDZ TE61 6.8B			
D105	8-719-083-91	DIODE EDZ TE61 6.8B			
		< MICROPHONE >			
MIC901	1-542-721-11	MICROPHONE BLOCK			
		< SWITCH >			
S101	1-786-819-22	TACTILE SWITCH (SHUTTER)			
S102	1-786-157-11	TACTILE SWITCH (POWER)			
	A-1251-750-A	ST-167 BOARD, COMPLETE			
		**********			
⚠	1-480-014-11	FLASH UNIT			
		< CAPACITOR >			
C001	1-100-611-91	CERAMIC CHIP	22uF	20%	6.3V
C002	1-112-717-91	CERAMIC CHIP	1uF	10%	6.3V
⚠C003	1-100-758-11	CERAMIC CHIP	0.047uF	10%	250V
C004	1-125-777-11	CERAMIC CHIP	0.1uF	10%	10V
C006	1-164-933-11	CERAMIC CHIP	220PF	10%	50V
*⚠C901	1-114-309-11	ELECT	49uF	99%	315V
		< CONNECTOR >			
CN001	1-815-762-51	CONNECTOR, FFC/FPC 14P			
		< DIODE >			
⚠D001	6-501-096-01	DIODE CRF02 (TE85R)			
* D002	6-501-861-01	DIODE CL-360S-TD4-X-T (SELF-TIMER/AF ILLUMINATOR)			
D003	8-719-038-03	DIODE CL-190Y-CD-T (STRBE)			
D004	8-719-075-29	DIODE SML-510MWT86S (AE_LOCK)			
D005	6-500-619-01	DIODE RB520S-40TE61			
		< IC >			
IC001	6-707-555-01	IC TPS65552RGTR			
		< COIL >			
* L001	1-400-820-11	INDUCTOR	2.2uH		

Ref. No.	Part No.	Description			
		< TRANSISTOR >			
*⚠Q001	6-551-676-01	TRANSISTOR	CY25BAJ-8F-T13-G12		
		< RESISTOR >			
R001	1-218-989-11	RES-CHIP	1M	5%	1/16W
R002	1-218-941-11	RES-CHIP	100	5%	1/16W
⚠R003	1-216-121-00	RES-CHIP	1M	5%	1/10W
R005	1-218-961-11	RES-CHIP	4.7K	5%	1/16W
		< TRANSFORMER >			
⚠T001	1-445-108-21	TRANSFORMER, D.C-D.C CONVERTER			
	A-1251-753-A	ST-168 FLEXIBLE BOARD, COMPLETE			
		**********			
		< RECHARGEABLE BATTERY >			
⚠BT001	1-756-711-11	LITHIUM RECHARGEABLE BATTERY			
	A-1251-751-A	SW-501 BOARD, COMPLETE			
		**********			
	(S011 (mode dial) is not supplied, but this is included in SW-501 complete board.)				
*	1-834-179-11	CABLE, FLEXIBLE FLAT (FFC-106)			
		< RESISTOR >			
R001	1-218-957-11	RES-CHIP	2.2K	5%	1/16W
R002	1-218-957-11	RES-CHIP	2.2K	5%	1/16W
R003	1-218-957-11	RES-CHIP	2.2K	5%	1/16W
R004	1-218-957-11	RES-CHIP	2.2K	5%	1/16W
R005	1-218-957-11	RES-CHIP	2.2K	5%	1/16W
R006	1-218-957-11	RES-CHIP	2.2K	5%	1/16W
R007	1-218-957-11	RES-CHIP	2.2K	5%	1/16W
R008	1-218-957-11	RES-CHIP	2.2K	5%	1/16W
R009	1-218-957-11	RES-CHIP	2.2K	5%	1/16W
R010	1-218-957-11	RES-CHIP	2.2K	5%	1/16W
R011	1-218-957-11	RES-CHIP	2.2K	5%	1/16W
R012	1-218-957-11	RES-CHIP	2.2K	5%	1/16W
R013	1-218-957-11	RES-CHIP	2.2K	5%	1/16W
R014	1-218-957-11	RES-CHIP	2.2K	5%	1/16W
R015	1-218-957-11	RES-CHIP	2.2K	5%	1/16W
		< SWITCH >			
S001	1-786-157-11	TACTILE SWITCH (SELF-TIMER)			
S002	1-786-157-11	TACTILE SWITCH (W (ZOOM))			
S003	1-786-157-11	TACTILE SWITCH (PLAY)			
S004	1-786-157-11	TACTILE SWITCH (FLASH)			
S005	1-786-157-11	TACTILE SWITCH (T (ZOOM))			
S006	1-786-157-11	TACTILE SWITCH (DISP)			
S007	1-786-157-11	TACTILE SWITCH (MENU)			
S008	1-786-157-11	TACTILE SWITCH (MACRO)			
S009	1-786-157-11	TACTILE SWITCH (HOME)			
S010	1-786-157-11	TACTILE SWITCH (SET)			
S011	(Not supplied)	ROTARY SWITCH (MODE DIAL)			

• Refer to page 5-1 for mark ⚠.

CAUTION
Danger of explosion if battery is incorrectly replaced.
Replace only with the same or equivalent type.

Electrical parts list of the SY-178 board is not shown.
Pages 5-10 to 5-14 are not shown.

Checking supplied accessories.

Note 1: This item is supplied with the unit as an accessory, but is not prepared as a service part.



Battery charger
(BC-CSGB/BC-CSGC)
⚠ 1-479-791-12 (J)
⚠ 1-479-791-22 (US, CND)



USB,A/V cable for multi-use terminal
1-829-866-41

Conversion (2P) Adaptor
⚠ 1-569-007-12 (JE)

Conversion (2P) Adaptor
⚠ 1-569-008-12 (E)



⚠ 1-479-791-32 (EXCEPT US, CND, BR, J)

Instruction Manual
3-208-405-01 (JAPANESE) (J)
3-208-405-11 (ENGLISH) (CND, AEP, UK, E, HK, AUS, JE)
3-208-405-21 (FRENCH, ITALIAN) (CND, AEP)
3-208-405-31 (SPANISH, PORTUGUESE) (AEP, E, JE)
3-208-405-41 (GERMAN, DUTCH) (AEP)
3-208-405-52 (TRADITIONAL CHINESE, SIMPLIFIED CHINESE) (E, HK, CH, JE)
3-208-405-61 (RUSSIAN) (AEP)
3-208-405-71 (ARABIC, PERSIAN) (E)
3-208-405-81 (KOREAN) (JE, KR)
3-208-405-91 (POLISH, CZECH) (AEP)
3-208-406-11 (HUNGARIAN, SLOVAK) (AEP)
3-208-406-21 (SWEDISH, FINNISH) (AEP)
3-208-406-31 (NORWEGIAN, DANISH) (AEP)
3-208-406-41 (THAI, MALAY) (E)
3-208-406-51 (TURKISH, GREEK) (AEP)
3-208-406-61 (ENGLISH, SPANISH) (US)

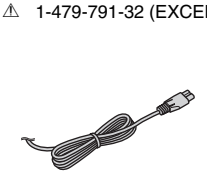

Power cord (mains lead)
(except US, BR, CND and J)
⚠ 1-823-947-71 (KR)
⚠ 1-827-826-41 (AEP,E)
⚠ 1-827-945-61 (AUS)
⚠ 1-828-050-31 (JE)
⚠ 1-832-106-31 (AR)
⚠ 1-832-121-31 (CH)
⚠ 1-832-169-31 (UK, HK)

Wrist strap
2-050-981-01



Rechargeable battery pack
(NP-BG1)
(Note 1)



Battery case
(Note 1)

Cyber-shot Handbook(PDF)

The CD-ROM supplied contains all of language version of the Instruction Manual in pdf (Cyber-shot Handbook.pdf) for printing.

Note: The printed matter is not supplied. If required, please order it with the part number below.

3-208-400-01 (JAPANESE)
3-208-400-11 (ENGLISH)
3-208-400-21 (FRENCH)
3-208-400-31 (ITALIAN)
3-208-400-41 (SPANISH)
3-208-400-51 (PORTUGUESE)
3-208-400-61 (GERMAN)
3-208-400-71 (DUTCH)
3-208-400-81 (TRADITIONAL CHINESE)
3-208-400-91 (SIMPLIFIED CHINESE)
3-208-401-11 (RUSSIAN)
3-208-401-21 (ARABIC)
3-208-401-31 (PERSIAN)
3-208-401-41 (KOREAN)
3-208-401-51 (POLISH)
3-208-401-61 (CZECH)
3-208-401-71 (HUNGARIAN)
3-208-401-81 (SLOVAK)
3-208-401-91 (SWEDISH)
3-208-402-11 (FINNISH)
3-208-402-21 (NORWEGIAN)
3-208-402-31 (DANISH)
3-208-402-41 (THAI)
3-208-402-51 (MALAY)
3-208-402-61 (TURKISH)
3-208-402-71 (GREEK)



CD-ROM
(Cyber-shot application software/
"Cyber-shot Handbook"/
"Cyber-shot Step-up Guide")
3-208-398-01 (EXCEPT US)
3-208-399-01 (US)

• Refer to the page 5-1 for mark ⚠.

HARDWARE LIST (1/4)

#1: M1.7 X 2.5
(Black)
2-635-562-11

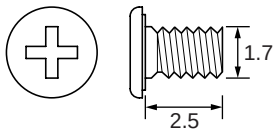

#2: M1.7 X 4.0
(Black)
2-635-562-31

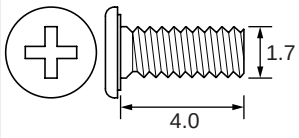

#3: M1.7 X 2.5
(Red)
2-660-401-01

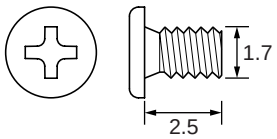

#4: M1.4 X 2.5 (Tapping)
(Dark Silver)
3-348-998-81

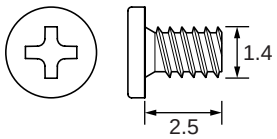

#5: M1.7 X 3.5 (Tapping)
(Black)
3-080-204-01

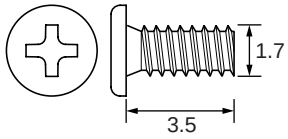

#6: M1.4 X 1.7
(Silver)
2-598-474-01

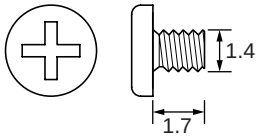

#7: M1.7 X 1.6
(Black)
7-627-552-18

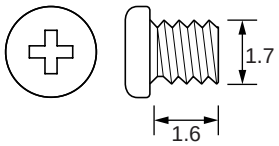

#8: M1.7 X 3.5 (Tapping)
(Silver)
3-078-890-01

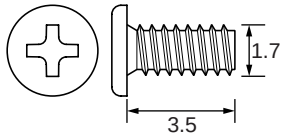

#9: M1.7 X 5.0 (Tapping)
(Silver)
3-078-890-21

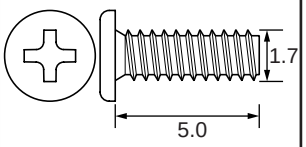

#10: M1.7 X 4.0
(Silver)
2-599-475-31

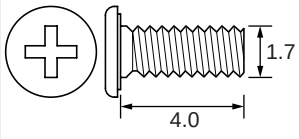

#11: M1.7 X 4.0 (Tapping)
(Silver)
3-078-890-11

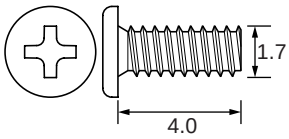

#12: M1.7 X 5.0 (Tapping)
(Black)
3-080-204-21

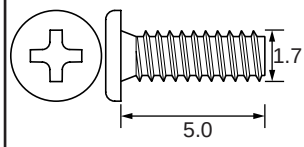

#13: M1.7 X 2.5 (Tapping)
(Silver)
3-085-397-01

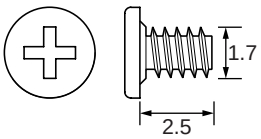

#14: M1.7 X 2.5
(Silver)
2-599-475-11

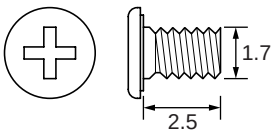

#15: M1.4 X 1.5
(Silver)
3-062-214-01

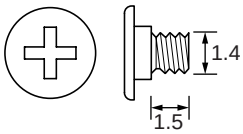

#16: M1.4 X 2.5
(Silver)
2-586-337-01

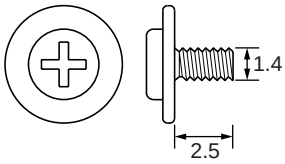

#17: M1.7 X 1.5
(Silver)
2-586-389-01

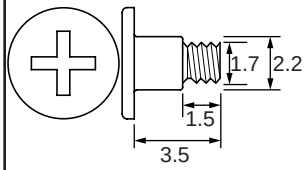

#18: M1.4 X 2.5
(Silver)
2-635-591-21

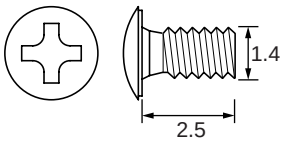

#19: M1.2 X 4.0 (Tapping)
(Red)
3-086-156-21

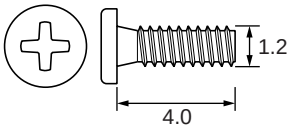

#20: M1.4 X 3.0
(Silver)
2-635-591-31

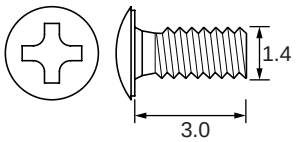

HARDWARE LIST (2/4)

#21: M1.4 X 3.0
(Black)
2-662-396-21

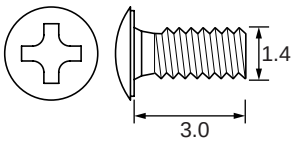

#22: M1.7 X 5.0 (Tapping)
(Silver)
3-083-261-01

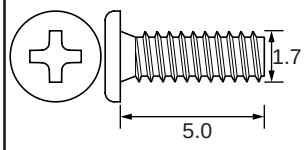

#23: M1.7 X 4.0 (Tapping)
(Black)
3-080-204-11

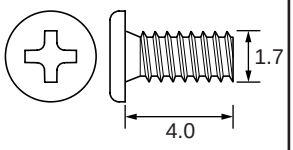

#24: B1.7 X 5.5 (Tapping)
(Black)
4-679-805-11

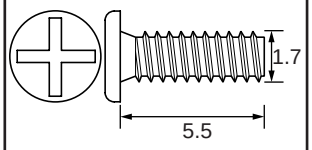

#25: M1.7 X 3.0
(Black)
2-635-562-21

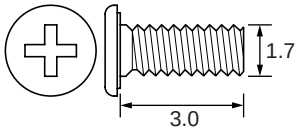

#26: M1.4 X 2.0
(Silver)
2-635-591-11

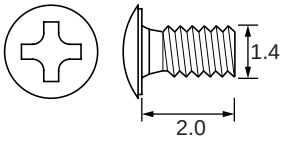

#27: M1.4 X 2.0
(Black)
2-662-396-11

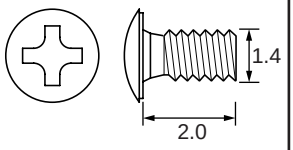

#28: M1.4 X 4.0 (Tapping)
(Dark Silver)
3-348-998-61

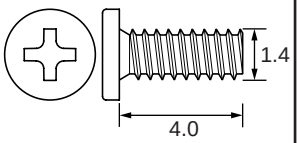

#29: M1.4 X 2.5
(Black)
2-662-396-01

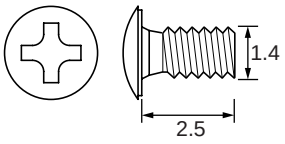

#30: M1.2 X 4.0 (Tapping)
(White)
3-086-156-11

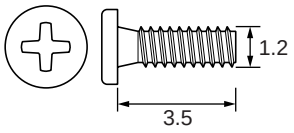

#31: M3.0 X 4.0
(Silver)
2-102-434-01

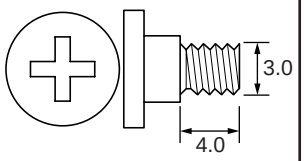

#32: M2.0 X 4.5 (Tapping)
(Silver)
2-102-498-01

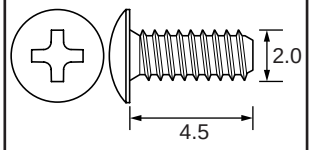

#33: M3.0 X 6.0
(Silver)
3-077-331-21

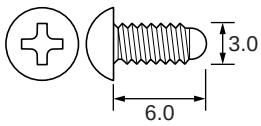

#34: M3.0 X 8.0
(Black)
3-077-331-41

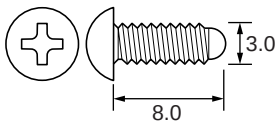

#35: M4.0 X 6.0 (Tapping)
(Silver)
3-975-291-02

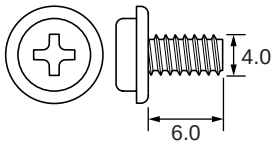

#36: M3.0 X 6.0
(Silver)
4-886-821-11

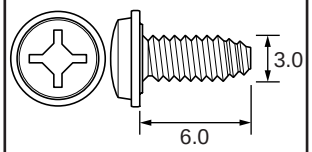

#37: M2.0 X 6.0 (Tapping)
(Black)
3-080-206-31

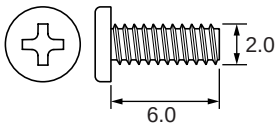

#38: M3.0 X 20.0 (Tapping)
(Silver)
7-685-651-79

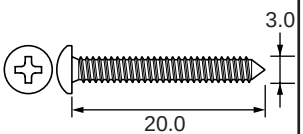

#39: M2.6 X 5.0 (Tapping)
(Black)
7-685-791-09

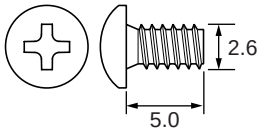

#40: M2.0 X 4.0 (Tapping)
(Silver)
7-685-851-04

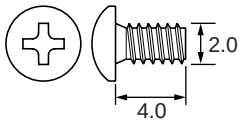

HARDWARE LIST (3/4)

#41: M3.0 X 8.0 (Tapping)
(Silver)
3-065-748-01

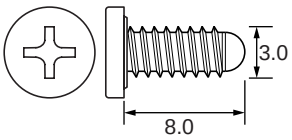

#42: M2.0 X 4.0 (Tapping)
(Silver)
7-628-253-00

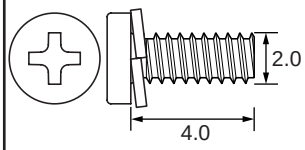

#43: M1.7 X 4.0
(Red)
2-660-401-31

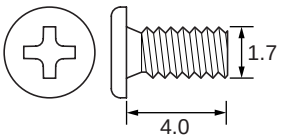

#44: M1.7 X 3.0 (Tapping)
(Silver)
3-078-890-61

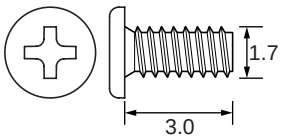

#45: M1.4 X 2.5
(Silver)
2-587-151-01

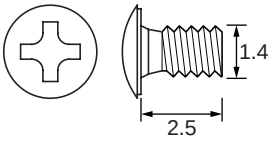

#46: M1.7 X 3.0
(Red)
2-660-401-11

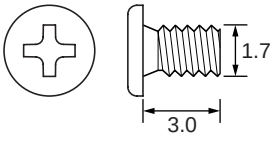

#47: M1.4 X 3.0 (Tapping)
(Silver)
2-665-774-01

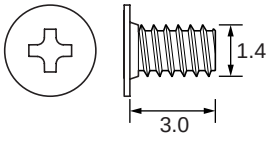

#48: M1.7 X 2.5
(Silver)
3-973-497-91

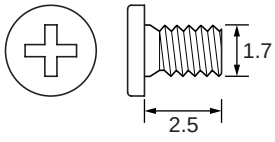

#49: M2.0 X 4.0
(Black)
2-630-005-31

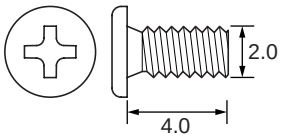

#50: M2.0 X 3.0
(Red)
2-891-494-11

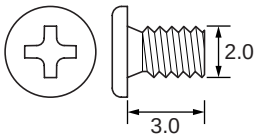

#51: M2.0 X 2.5
(Silver)
3-073-686-01

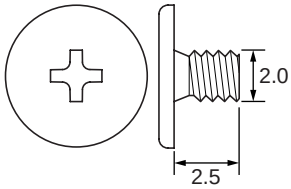

#52: M2.0 X 4.0 (Tapping)
(Black)
3-080-206-11

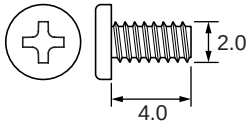

#53: M2.0 X 5.0 (Tapping)
(Black)
3-080-206-21

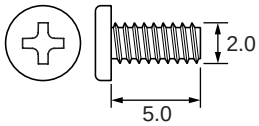

#54: M1.75 X 6.0 (Tapping)
(Black)
3-318-203-11

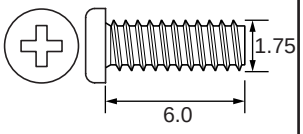

#55: M2.0 X 4.0
(Silver)
2-655-582-11

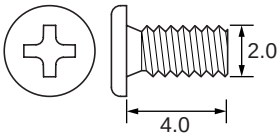

#56: M2.0 X 3.5
(Silver)
3-067-187-11

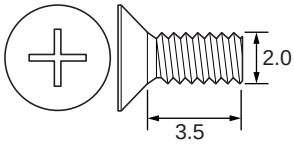

#57: M1.7 X 4.0
(Black)
7-627-852-18

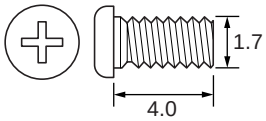

#58: M2.0 X 6.0 (Tapping)
(Silver)
3-719-408-11

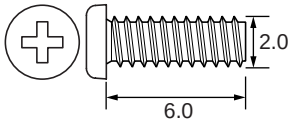

#59: M2.0 X 5.0 (Tapping)
(Silver)
3-080-205-21

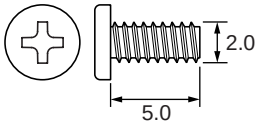

#60: M2.6 X 5.0
(Black)
3-061-062-11

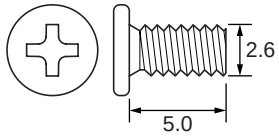

HARDWARE LIST (4/4)

#61: M3.0 X 10.0
(Black)
7-682-549-09

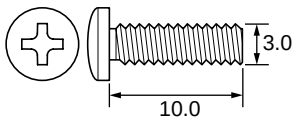

#62: M2.0 X 3.0
(Silver)
3-080-202-21

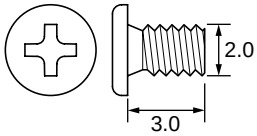

#63: M5.0 X 12.5
(Black)
3-060-811-21

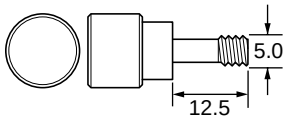

#64: M1.7 X 5.0 (Tapping)
(Silver)
2-666-551-21

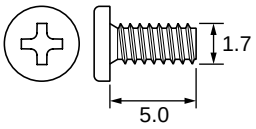

#65: M1.4 X 3.5
(Silver)
2-635-591-01

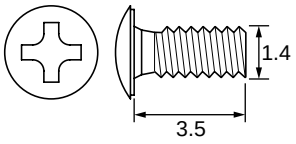

#66: M1.4 X 1.4
(Silver)
2-635-591-41

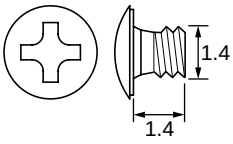

#67: M1.4 X 2.0
(Silver)
3-389-523-16

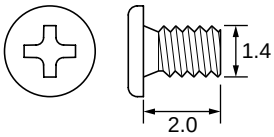

#68: M1.7 X 4.0
(Silver)
2-655-581-01

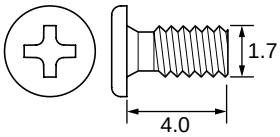

#69: M1.7 X 3.0
(Silver)
2-599-475-21

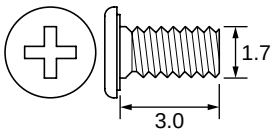

#70: M1.7 X 5.0
(Silver)
2-599-475-41

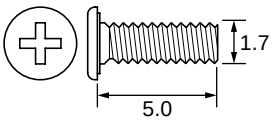

#71: M1.4 X 2.0
(Red)
3-208-537-01

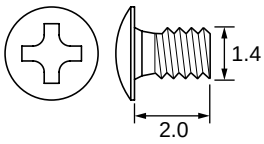

#72: M1.7 X 2.0
(Silver)
4-663-621-41

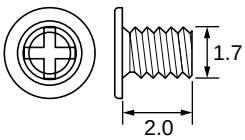

#73: M1.2 X 4.0 (Tapping)
(Black)
3-086-156-61

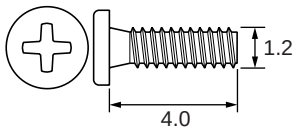

#74: M1.7 X 6.0 (Tapping)
(Silver)
2-666-551-31

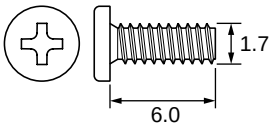

#75: M1.7 X 3.5 (Tapping)
(Silver)
2-666-551-01

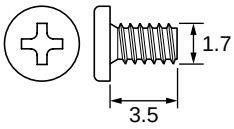

#76: M1.7 X 4.0 (Tapping)
(Silver)
2-666-551-11

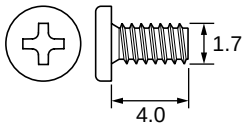

#77: M1.2 X 5.0 (Tapping)
(Silver)
3-086-156-31



[Description of main button functions on toolbar of the Adobe Acrobat Reader Ver5.0 (for Windows)]

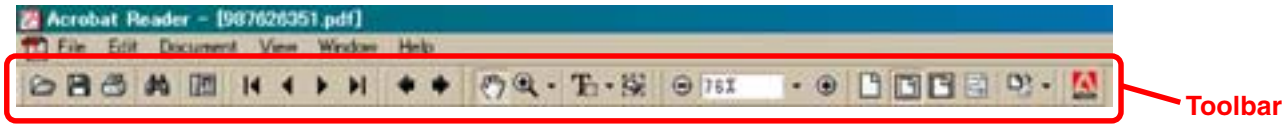

Printing a text

1. Click the Print button .
2. Specify a printer, print range, number of copies, and other options, and then click [OK].

Application of printing:
To set a range to be printed within a page, select the graphic selection tool and drag on the page to enclose a range to be printed, and then click the Print button.

Finding a text

1. Click the Find button .
2. Enter a character string to be found into a text box, and click the [Find]. (Specify the find options as necessary)

Application to the Service Manual:
To execute "find" from current page toward the previous pages, select the check box "Find Backward" and then click the "Find".

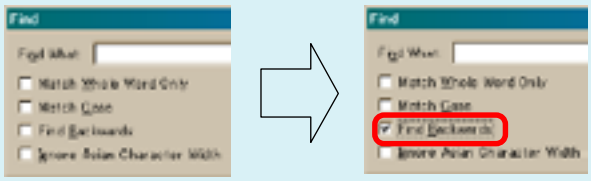

3. Open the find dialog box again, and click the [Find Again] and you can find the matched character strings displayed next. (Character strings entered previously are displayed as they are in the text box.)

Application to the Service Manual:
The parts on the drawing pages (block diagrams, circuit diagrams, printed circuit boards) and parts list pages in a text can be found using this find function. For example, find a Ref. No. of IC on the block diagram, and click the [Find Again] continuously, so that you can move to the Ref. No. of IC on the circuit diagram or printed circuit board diagram successively.
Note: The find function may not be applied to the Service Manual depending on the date of issue.

Switching a page

- To move to the first page, click the .
- To move to the last page, click the .
- To move to the previous page, click the .
- To move to the next page, click the .

Reversing the screens displayed once

- To reverse the previous screens (operation) one by one, click the .
- To advance the reversed screens (operation) one by one, click the .

Application to the Service Manual:
This function allows you to go and back between circuit diagram and printed circuit board diagram, and accordingly it will be convenient for the voltage check.

Moving with link

1. Select either palm tool , zoom tool , text selection tool , or graphic selection tool .
2. Place the pointer in the position in a text where the link exists (such as a button on cover and the table of contents page, or blue characters on the removal flowchart page or drawing page), and the pointer will change to the forefinger form .
3. Then, click the link. (You will go to the link destination.)

Moving with bookmark:
Click an item (text) on the bookmark pallet, and you can move to the link destination. Also, clicking can display the hidden items.
(To go back to original state, click)

Zooming or rotating the screen display

"Zoom in/out"

- Click the triangle button in the zoom control box to select the display magnification. Or, you may click or for zooming in or out.

"Rotate"

- Click rotate tool , and the page then rotates 90 degrees each.

Application to the Service Manual:
The printed circuit board diagram you see now can be changed to the same direction as the set.

Revision History

Ver.	Date	History	Contents	S.M. Rev. issued
1.0	2007.04	Official Release	—	—